Net-Contain Universal Aisle Containment

© Panduit Corp. 2014

INSTALLATION INSTRUCTIONS

V00029BZ

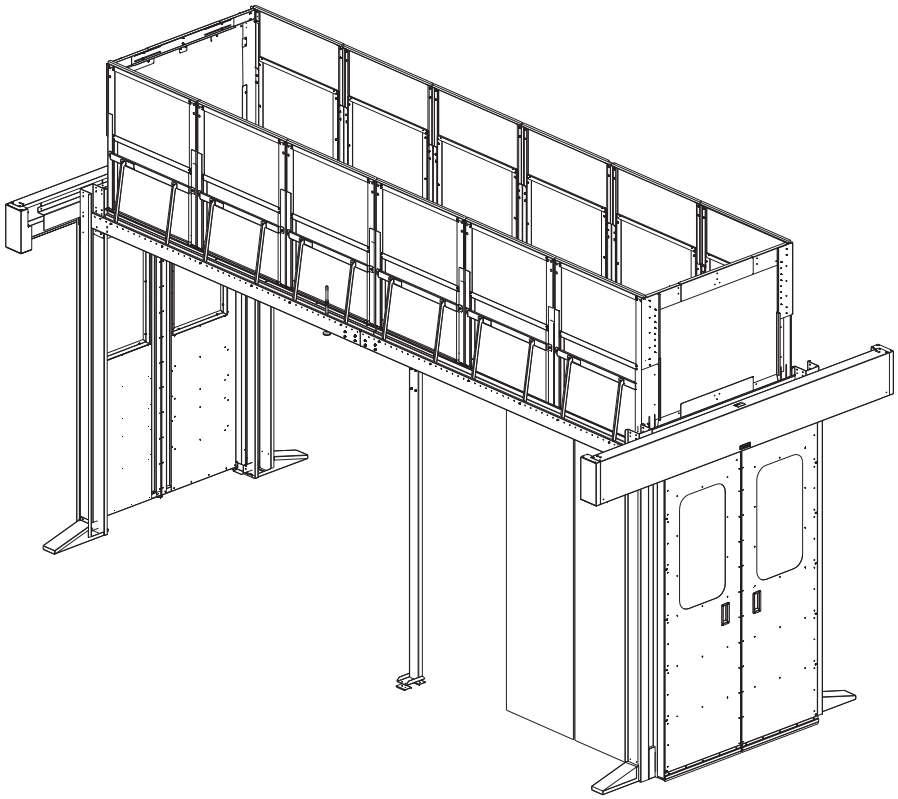

UNIVERSAL AISLE CONTAINMENT-VERTICAL WALL VERSION

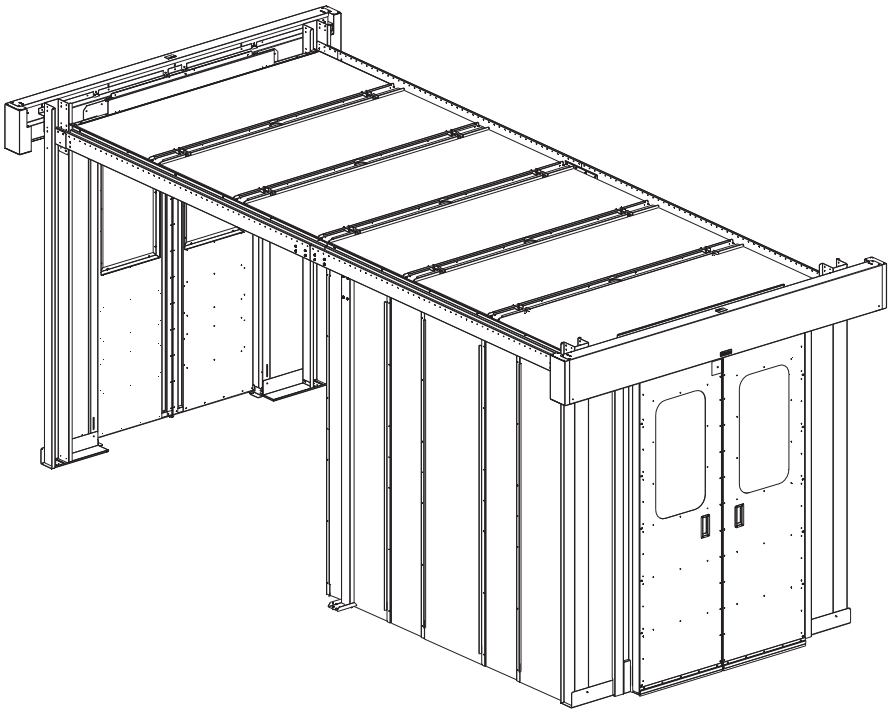

UNIVERSAL AISLE CONTAINMENT-ROOFING VERSION

COMPONENT GUIDE FOR SLIDING DOORS

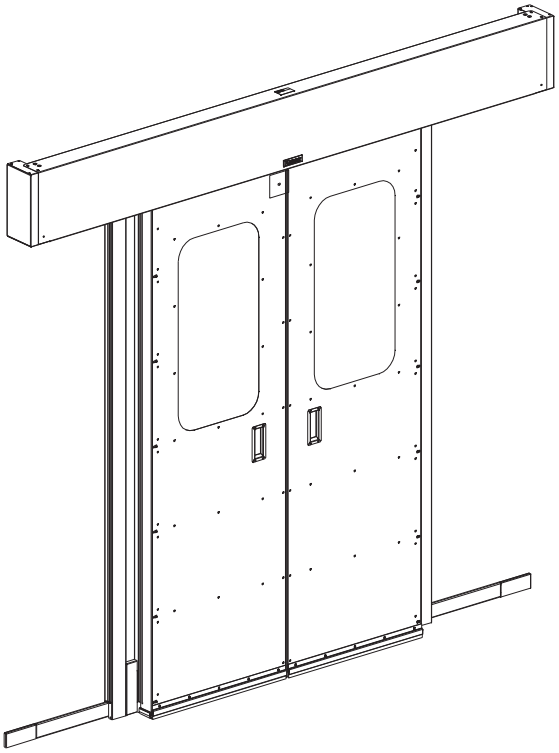

C2CACT5F04SD**
(1) Left Door
(1) Right Door
(1) Transom
(1) Header Assembly
(1)Left Hand Cap
(1) Right Hand Cap
(1) Header Cover
(1) Door Frame
(1) Hardware Kit

NET CONTAIN SLIDING DOOR FOR 4FT (1200mm) AISLE

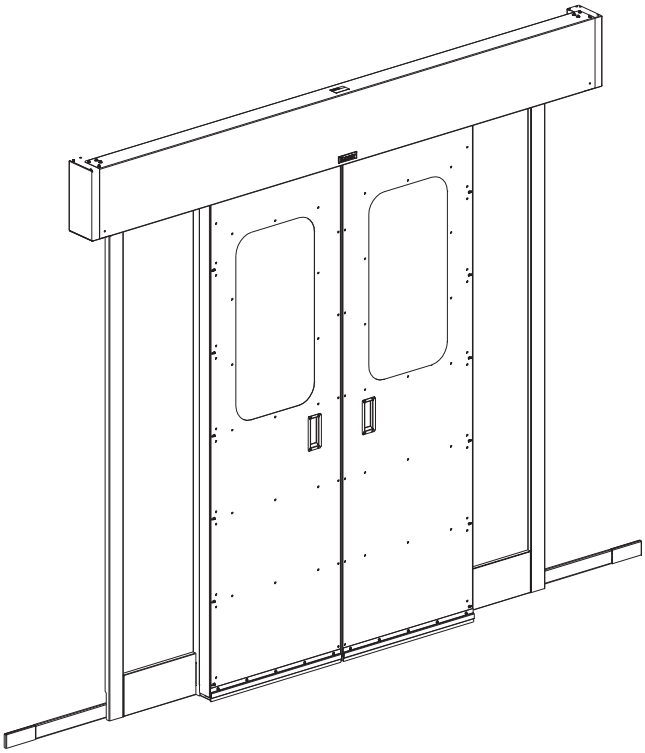

C2CACT5F06SD**
(1) Left Door
(1) Right Door
(1) Transom
(1) Header Assembly
(1)Left Hand Cap
(1) Right Hand Cap
(1) Header Cover
(1) Door Frame
(1) Hardware Kit

NET CONTAIN SLIDING DOOR FOR 6FT (1800mm) AISLE

COMPONENT GUIDE FOR END OF ROW FRAMES

NET-CONTAIN UAC END OF ROW FRAME FOR ROOFING, 42/45RU, 3FT (900mm) AISLE

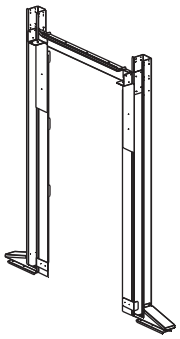

CUEFRT8F03ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 42-45 Support Hanger
(1) Left Hand 42-45 Support Hanger
(1) 900mm CAC Beam
(2) Upper End Panels
(1) Lower Right Hand End Panel

NET-CONTAIN UAC END OF ROW FRAME FOR ROOFING, 48/52RU, 3FT (900mm) AISLE

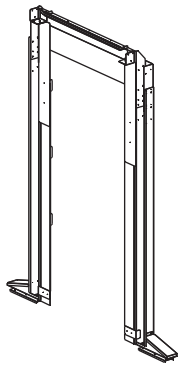

CUEFRT9F03ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 48-52 Support Hanger
(1) Left Hand 48-52 Support Hanger
(1) 900mm CAC Beam
(2) Upper End Panels
(1) Lower Right Hand End Panel
(1) Lower Left Hand End Panel
(2) Lower Panel Retainers
(1) Hardware Kit

NET-CONTAIN UAC END OF ROW FRAME FOR ROOFING, 42/45RU, 4FT (1200mm) AISLE

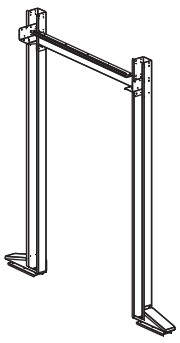

CUEFRT8F04ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 42-45 Support Hanger
(1) Left Hand 42-45 Support Hanger
(1) 1200mm CAC Beam
(1) Hardware Kit

NET-CONTAIN UAC END OF ROW FRAME FOR ROOFING, 48/52RU, 4FT (1200mm) AISLE

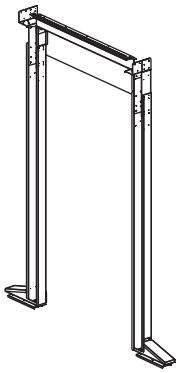

CUEFRT9F04ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 48-52 Support Hanger
(1) Left Hand 48-52 Support Hanger
(1) 1200mm CAC Beam
(1) Hardware Kit

NET-CONTAIN UAC END OF ROW FRAME FOR ROOFING, 42/45RU, 6FT (1800mm) AISLE

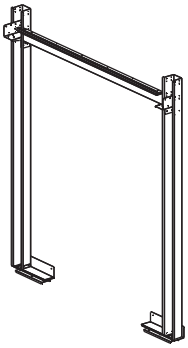

CUEFRT8F06ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 42-45 Support Hanger
(1) Left Hand 42-45 Support Hanger
(1) 1800mm CAC Beam
(1) Hardware Kit

NET-CONTAIN UAC END OF ROW FRAME FOR ROOFING, 48/52RU, 6FT (1800mm) AISLE

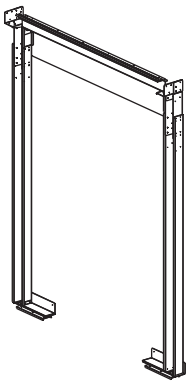

CUEFRT9F06ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 48-52 Support Hanger
(1) Left Hand 48-52 Support Hanger
(1) 1800mm CAC Beam
(1) Hardware Kit

COMPONENT GUIDE FOR END OF ROW FRAMES

NET-CONTAIN UAC END OF ROW FRAME FOR VERTICAL WALLS, 42/45RU, 3FT (900mm) AISLE

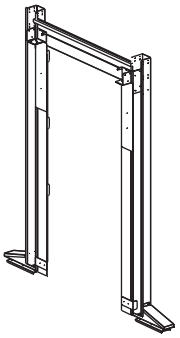

CUEFVT8F03ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 42-45 Support Hanger
(1) Left Hand 42-45 Support Hanger
(1) 900mm HAC Beam
(2) Upper End Panels
(1) Lower Right Hand End Panel
(1) Lower Left Hand End Panel
(2) Lower Panel Retainers
(1) Hardware Kit

NET-CONTAIN UAC END OF ROW FRAME FOR VERTICAL WALLS, 48/52RU, 3FT (900mm) AISLE

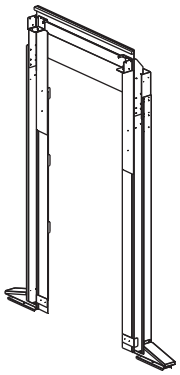

CUEFVT9F03ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 48-52Support Hanger
(1) Left Hand 48-52 Support Hanger
(1) 900mm HAC Beam
(2) Upper End Panels
(1) Lower Right Hand End Panel
(1) Lower Left Hand End Panel
(2) Lower Panel Retainers
(1) Hardware Kit

NET-CONTAIN UAC END OF ROW FRAME FOR VERTICAL WALLS, 42/45RU, 4FT (1200mm) AISLE

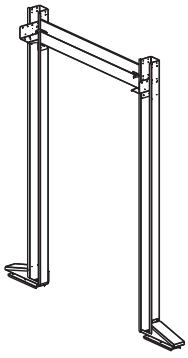

CUEFVT8F04ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 42-45 Support Hanger
(1) Left Hand 42-45 Support Hanger
(1) 1200mm HAC Beam
(1) Hardware Kit

NET-CONTAIN UAC END OF ROW FRAME FOR VERTICAL WALLS, 48/52RU, 4FT (1200mm) AISLE

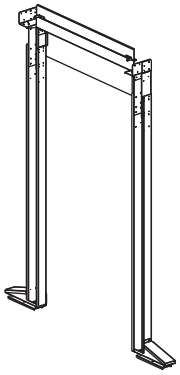

CUEFVT9F04ST**
(2)End Beam Supports
(1) End Beam
(6) Small Plates
(2) Large Plates
(1) Right Hand Post
(1)Left Hand Post
(1) Right Hand Foot Cover
(1) Left hand Foot Cover
(1) Right Hand 48-52 Support Hanger
(1) Left Hand 48-52 Support Hanger
(1) 1200mm HAC Beam
(1) Hardware Kit

COMPONENT GUIDE WALL BEAM

NET-CONTAIN UAC WALL BEAM 600mm LONG, 1 PIECE

CUWBSS06ST01**
(1) 600mm Wall Beam
(1) 600mm Wall Beam Clamp
(1) Connector
(1) Wall Beam Ganging Bracket
(Included in Hardware Kit)
(1) Flap Seal
(Included in Hardware Kit)
(1) Hardware Kit

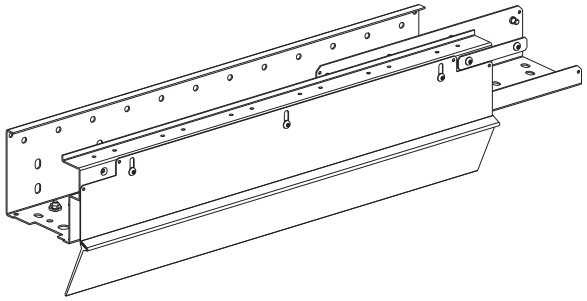

NET-CONTAIN UAC WALL BEAM 600mm LONG, 2 PIECES

CUWBPS06ST02**
(2) 600mm Wall Beams
(2) 600mm Wall Beam Clamps
(2) Connectors
(2) Wall Beam Ganging Brackets
(Included in Hardware Kit)
(2) Flap Seals
(Included in Hardware Kit)
(2) Hardware Kits

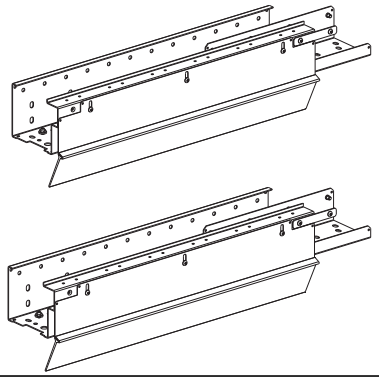

NET-CONTAIN UAC WALL BEAM 700mm LONG, 1 PIECE

CUWBSS07ST01**
(1) 700mm Wall Beam
(1) 700mm Wall Beam Clamp
(1) Connector
(1) Wall Beam Ganging Bracket
(Included in Hardware Kit)
(1) Flap Seal
(Included in Hardware Kit)
(1) Hardware Kit

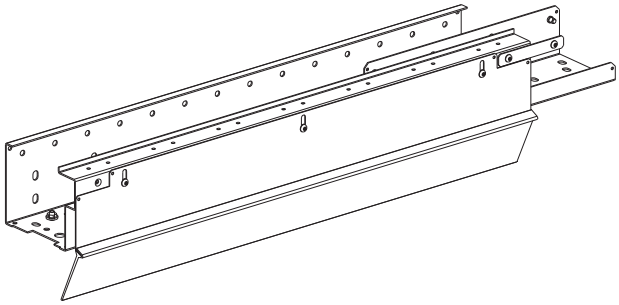

NET-CONTAIN UAC WALL BEAM 700mm LONG, 2 PIECES

CUWBPS07ST02**
(2) 700mm Wall Beams
(2) 700mm Wall Beam Clamps
(2) Connectors
(2) Wall Beam Ganging Brackets
(Included in Hardware Kit)
(2) Flap Seals
(Included in Hardware Kit)
(2) Hardware Kits

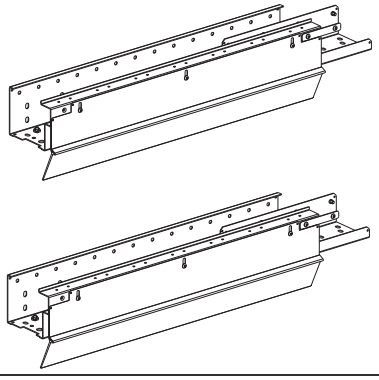

COMPONENT GUIDE WALL BEAM

NET-CONTAIN UAC WALL BEAM 800mm LONG, 1 PIECE

CUWBSS08ST01**

(1) 800mm Wall Beam
(1) 800mm Wall Beam Clamp
(1) Connector
(1) Wall Beam Ganging Bracket
(Included in Hardware Kit)
(1) Flap Seal
(Included in Hardware Kit)
(1) Hardware Kit

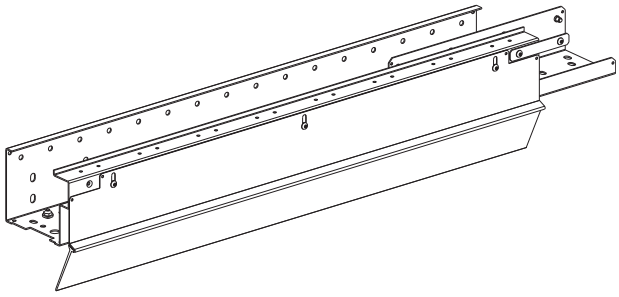

NET-CONTAIN UAC WALL BEAM 800mm LONG, 2 PIECES

CUWBPS08ST02**

(2) 800mm Wall Beams
(2) 800mm Wall Beam Clamps
(2) Connectors
(2) Wall Beam Ganging Brackets
(Included in Hardware Kit)
(2) Flap Seals
(Included in Hardware Kit)
(2) Hardware Kits

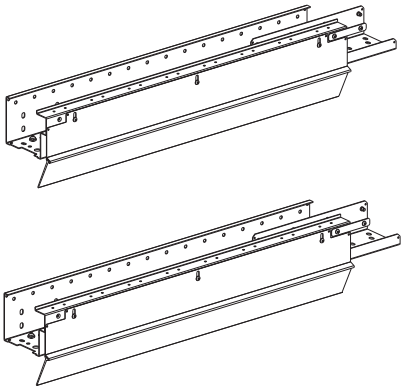

NET-CONTAIN UAC WALL BEAM 2400mm LONG, 1 PIECE

CUWBSS24ST01**

(1) 2400mm Wall Beam
(1) 2400mm Wall Beam Clamp
(1) Connector
(1) Wall Beam Ganging Bracket
(Included in Hardware Kit)
(1) Flap Seal
(Included in Hardware Kit)
(1) Hardware Kit

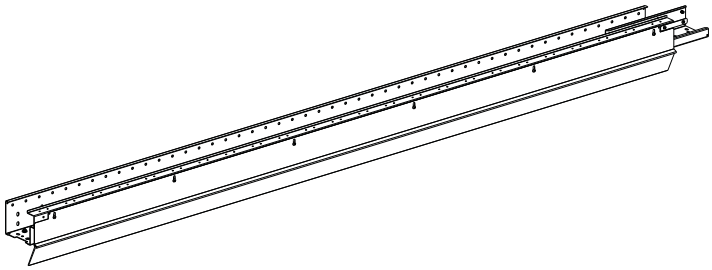

NET-CONTAIN UAC WALL BEAM 2400mm LONG, 2 PIECES

CUWBPS24ST02**

(2) 2400mm Wall Beams
(2) 2400mm Wall Beam Clamps
(2) Connectors
(2) Wall Beam Ganging Brackets
(Included in Hardware Kit)
(2) Flap Seals
(Included in Hardware Kit)
(2) Hardware Kits

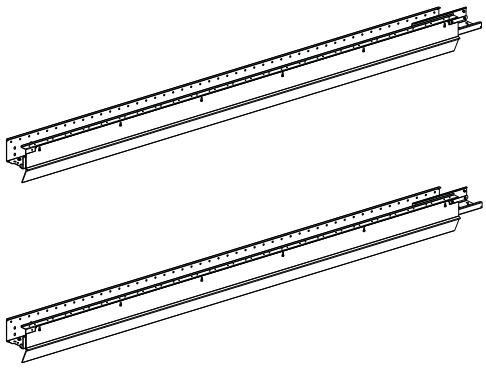

COMPONENT GUIDE FOR CEILING STRUCTURE

NET-CONTAIN UAC 600mm ROOFING SECTION, 6ft (1800mm) AISLE

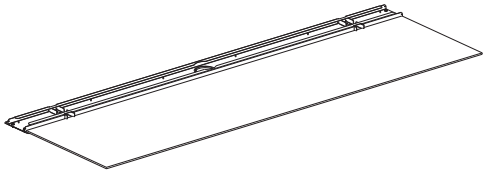

CURFS06F06HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 600mm ROOFING SECTION, 4ft (1200mm) AISLE

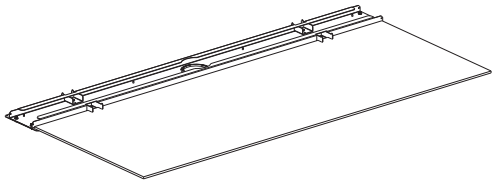

CURFS06F04HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 600mm ROOFING SECTION, 3ft (900mm) AISLE

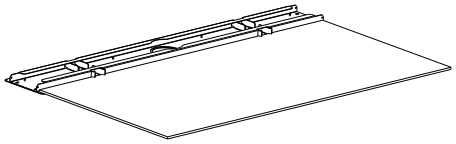

CURFS06F03HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 700mm ROOFING SECTION, 6ft (1800mm) AISLE

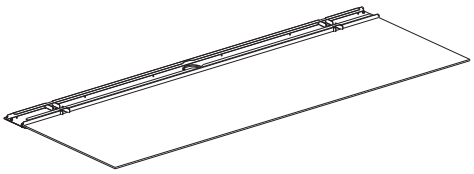

CURFS07F06HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 700mm ROOFING SECTION, 4ft (1200mm) AISLE

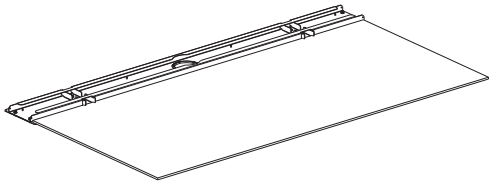

CURFS07F04HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 700mm ROOFING SECTION, 3ft (900mm) AISLE

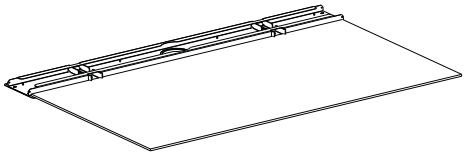

CURFS07F03HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 800mm ROOFING SECTION, 6ft (1800mm) AISLE

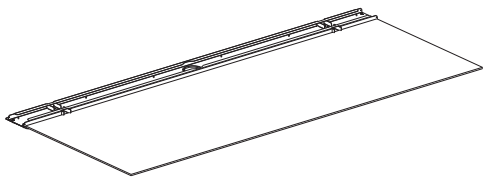

CURFS08F06HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 800mm ROOFING SECTION, 4ft (1200mm) AISLE

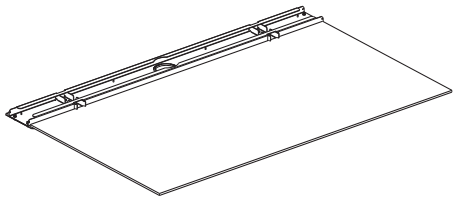

CURFS08F04HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

NET-CONTAIN UAC 800mm ROOFING SECTION, 3ft (900mm) AISLE

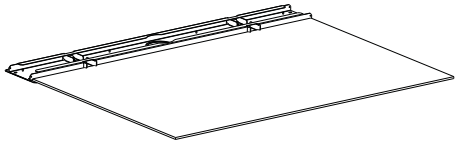

CURFS08F03HB**
(1) Aisle Beam
(1) Roof Panel
(1) Hardware Kit

COMPONENT GUIDE FOR VERTICAL WALL CONTAINMENT

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (16"- 26") 600mm WIDE

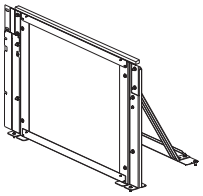

C2HAC06I1626**
(1) Wall Assembly (600mm Wide)
(2) Diagonal Braces
(1) Brace Bar
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (16"- 26") 700mm WIDE

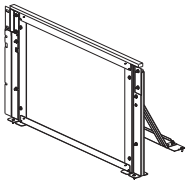

C2HAC07I1626**
(1) Wall Assembly (700mm wide)
(2) Diagonal Braces
(1) Brace Bar
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (16"- 26") 800mm WIDE

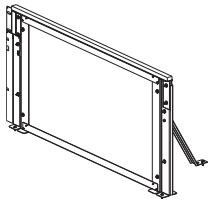

C2HAC08I1626**
(1) Wall Assembly (800mm wide)
(2) Diagonal Braces
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (26"- 38") 600mm WIDE

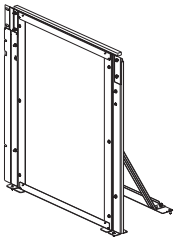

C2HAC06I2638**
(1) Wall Assembly (600mm Wide)
(2) Diagonal Braces
(1) Brace Bar
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (26"- 38") 700mm WIDE

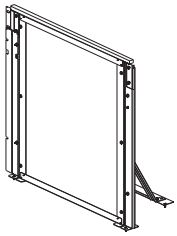

C2HAC07I2638**
(1) Wall Assembly (700mm wide)
(2) Diagonal Braces
(1) Brace Bar
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (26"- 38") 800mm WIDE

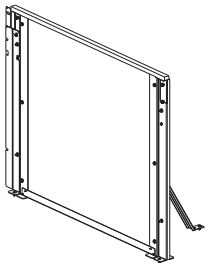

C2HAC08I2638**
(1) Wall Assembly (800mm wide)
(2) Diagonal Braces
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (38"- 66") 600mm WIDE

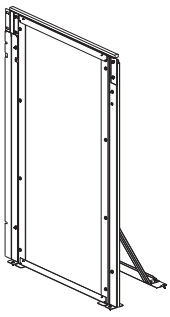

C2HAC06I3866**
(1) Wall Assembly (600mm Wide)
(2) Diagonal Braces
(1) Brace Bar
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (38"- 66") 700mm WIDE

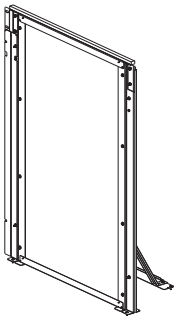

C2HAC07I3866**
(1) Wall Assembly (700mm wide)
(2) Diagonal Braces
(1) Brace Bar
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE VERTICAL WALL (38"- 66") 800mm WIDE

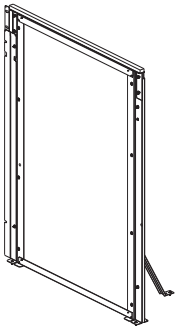

C2HAC08I3866**
(1) Wall Assembly (800mm wide)
(2) Diagonal Braces
(1) Lower Seal
(1) Upper Seal
(1) Hardware Kit

COMPONENT GUIDE FOR WALL ADAPTERS AND VERTICAL WALL BRACES

NET-CONTAIN UAC VERTICAL WALL ADAPTER, 600mm WIDE

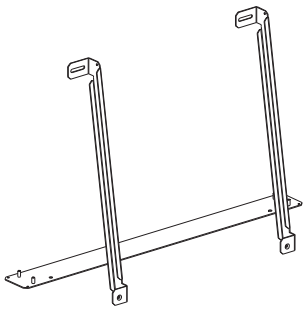

CUVWA06S06ST**
(2) HAC Diagonal Braces
(1) 600mm HAC Adapter
(1) Hardware Kit

NET-CONTAIN UAC VERTICAL WALL ADAPTER, 700mm WIDE

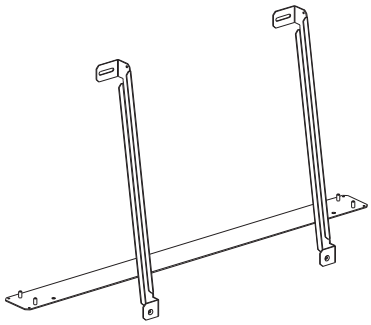

CUVWA07S07ST**
(2) HAC Diagonal Braces
(1) 700mm HAC Adapter
(1) Hardware Kit

NET-CONTAIN UAC VERTICAL WALL ADAPTER, 800mm WIDE

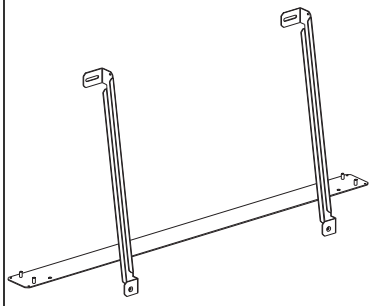

CUVWA08S08ST**
(2) HAC Diagonal Braces
(1) 800mm HAC Adapter
(1) Hardware Kit

NET-CONTAIN UAC VERTICAL WALL BRACE, 3FT (900mm) AISLE

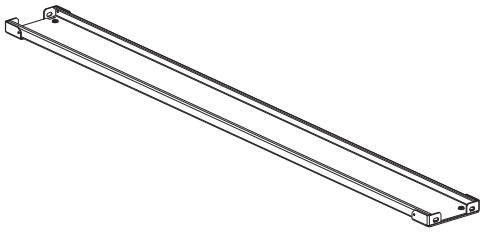

CUVWB09S09ST**
(1) 900mm Vertical Wall Brace
(1) Hardware Kit

NET-CONTAIN UAC VERTICAL WALL BRACE, 4FT (1200mm) AISLE

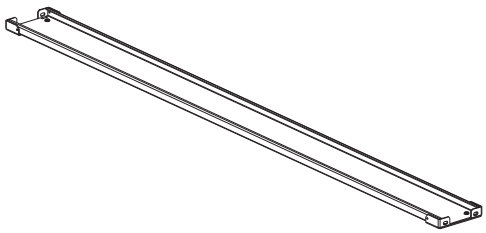

CUVWB12S12ST**
(1) 1200mm Vertical Wall Brace
(1) Hardware Kit

COMPONENT GUIDE FOR END OF ROW WALL

NET-CONTAIN HAC ADJUSTABLE END OF ROW VERTICAL WALL (16"- 26")

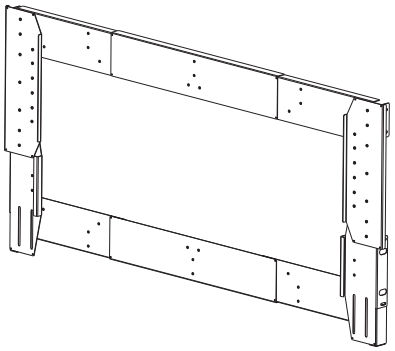

C2HACERI1626**

(2) Center Frames
(2) Center Cross Beams
(1) Upper Right Cross Beam
(1) Upper Left Cross Beam
(1) Lower Right Cross Beam
(1) Lower Left Cross Beam
(4) 200mm Panel Clamps
(6) 40mm Panel Clamps
(1) 1626 Clear Panel
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE END OF ROW VERTICAL WALL (26"- 38")

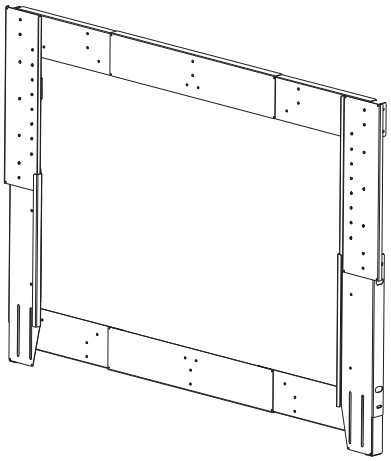

C2HACERI2638**

(2) Center Frames
(2) Center Cross Beams
(1) Upper Right Cross Beam
(1) Upper Left Cross Beam
(1) Lower Right Cross Beam
(1) Lower Left Cross Beam
(6) 200mm Panel Clamps
(4) 40mm Panel Clamps
(1) 2638 Clear Panel
(1) Hardware Kit

NET-CONTAIN HAC ADJUSTABLE END OF ROW VERTICAL WALL (38"- 66")

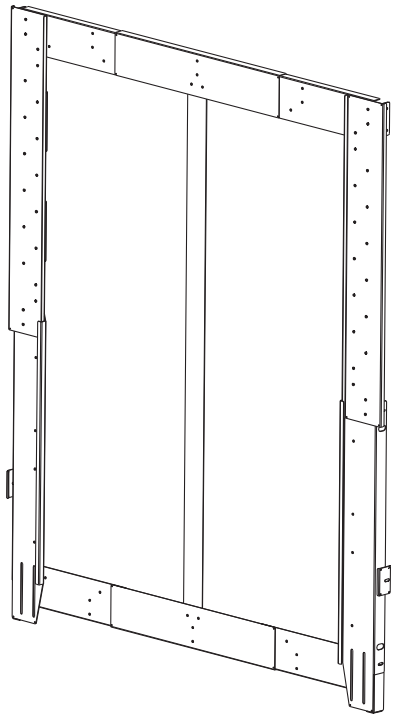

C2HACERI3866**

(2) Center Frames
(2) Center Cross Beams
(1) Upper Right Cross Beam
(1) Upper Left Cross Beam
(1) Lower Right Cross Beam
(1) Lower Left Cross Beam
(8) 200mm Panel Clamps
(6) 100mm Panel Clamps
(2) Side Clamps
(2) 3866 Clear Panels
(1) H Channel
(1) Hardware Kit

COMPONENT GUIDE FOR BLANKING PANELS

NET-CONTAIN UAC FULL BLANKING PANEL 42RU X 600mm WIDE

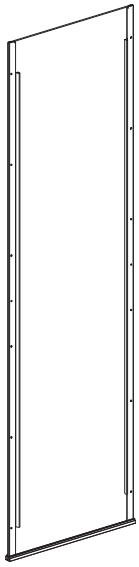

CUFBPR4206HB**
(1) 42RU Blanking Panel
(1) Wiring Duct
(1) Hardware Kit

NET-CONTAIN UAC FULL BLANKING PANEL 45RU X 600mm WIDE

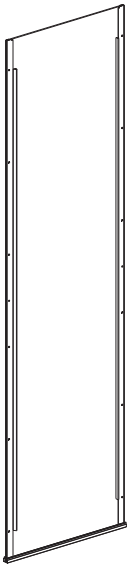

CUFBPR4506HB**
(1) 45RU Blanking Panel
(1) Wiring Duct
(1) Hardware Kit

NET-CONTAIN UAC FULL BLANKING PANEL 48RU X 600mm WIDE

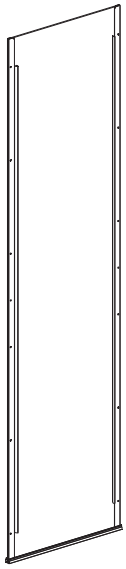

CUFBPR4806HB**
(1) 48RU Blanking Panel
(1) Wiring Duct
(1) Hardware Kit

NET-CONTAIN UAC FULL BLANKING PANEL 52RU X 600mm WIDE



CUFBPR5206HB**
(1) 52RU Blanking Panel
(1) Wiring Duct
(1) Hardware Kit

NET-CONTAIN UAC TOP OF CABINET BLANKING PANEL 600mm HIGH X 1000mm WIDE

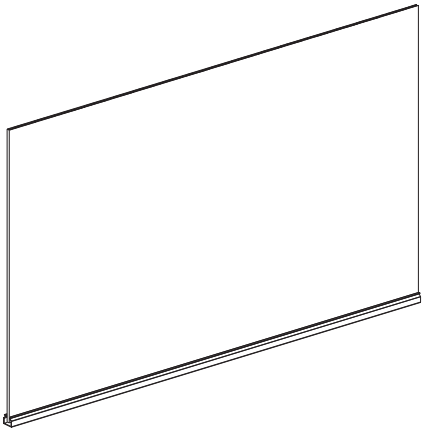

CUTBPR0610HB**
(1) 600mm Blanking Panel
(1) Wiring Duct
(1) Hardware Kit

COMPONENT GUIDE FOR MID ROW SUPPORT

NET-CONTAIN UAC MID-SPAN POST 42RU to 52RU HIGH



CUSMPR52ST01**
(1) Support Bracket
(1) Support Post
(2) Plates
(1) Hardware Kit

NET-CONTAIN UAC MID-SPAN CABINET SUPPORT, 300mm HIGH



CUCMSS03ST01NC
(1) 300mm Long Threaded Rod
(1) Swivel Leveling Mount
(1) Hardware Kit

NET-CONTAIN UAC MID-SPAN CABINET SUPPORT, 600mm HIGH



CUCMSS06ST01NC
(1) 600mm Long Threaded Rod
(1) Swivel Leveling Mount
(1) Hardware Kit

Table of Contents

Section 1 - Installation Universal End of Row Frame

Attaching Hanger and Beam Support to Post (For 900mm 42RU Set-Up Only)..... 17
Attaching Hanger and Beam Support to Post (For 900mm 45RU Set-Up Only)..... 18
Attaching Hanger and Beam Support to Post (For 900mm 48RU Set-Up Only)..... 19
Attaching Hanger to Post (For 900mm 52RU Set-Up Only)..... 20
Attaching Beam Support and Spacer to Post (For 900mm 52RU Set-Up Only)..... 21
Attaching Hanger and Beam Support to Post (For 1200mm 42RU Set-Up Only)..... 22
Attaching Hanger and Beam Support to Post (For 1200mm 45RU Set-Up Only)..... 23
Attaching Hanger and Beam Support to Post (For 1200mm 48RU Set-Up Only)..... 24
Attaching Hanger to Post (For 1200mm 52RU Set-Up Only)..... 25
Attaching Beam Support and Spacer (For 1200mm 52RU Set-Up Only)..... 26
Attaching Hanger and Beam Support to Post (For 1800mm 42RU Set-Up Only)..... 27
Attaching Hanger and Beam Support to Post (For 1800mm 45RU Set-Up Only)..... 28
Attaching Hanger and Beam Support to Post (For 1800mm 48RU Set-Up Only)..... 29
Attaching Hanger to Post (For 1800mm 52RU Set-Up Only)..... 30
Attaching Beam Support and Spacer (For 1800mm 52RU Set-Up Only)..... 31
Containment System Layout..... 32
Attaching Post to Floor..... 34
Install Post Foot Cover..... 35
Attaching End of Row Beam (For 900mm and 1200mm Aisles, 42RU-45RU Set-Up Only)..... 36
Attaching End of Row Beam (For 900mm and 1200mm Aisles, 48RU-52RU Set-Up Only)..... 37
Attaching End of Row Beam (For 900mm and 1200mm Aisles, 42RU-45RU Set-Up Only)..... 38
Attaching End of Row Beam (For 900mm and 1200mm Aisles, 48RU-52RU Set-Up Only)..... 39
Attaching Vertical Wall End of Row Beam (For Vertical Wall Set-Up Only)..... 40
Attaching Foam Seal to Vertical Wall End of Row Beam (For Vertical Wall Only)..... 41
Attaching Support Hanger (For 900mm Vertical Wall Set-Up Only)..... 42
Attaching Support Bracket (For 1200mm Vertical Wall Set-Up Only)..... 43
Attaching Support Hanger (For 900mm Roofing Set-Up Only)..... 44
Attaching Upper End Panel (For 900mm Aisle Only)..... 45
Attaching Lower End Panel (For 900mm Aisle Only)..... 46
Attaching Lower End Panel Brace (For 900mm Aisle Only)..... 47
Grounding the End-of-Row Frame..... 48

Section 2 - Installation of Wall Beams, Mid-Span Support Post and Mid-Span Cabinet Support Rod

Aligning Wall Beams..... 50
Attaching Wall Beam Connector..... 51
Attaching Wall Beam Ganging Bracket..... 52
Mid-Span Support for Wall Beams..... 53
Supporting Wall Beams using Mid-Span Cabinet Support..... 53
Supporting Wall Beams using Threaded Rod..... 53
Locating Mid-Span Support Post..... 54
Attaching Support Bracket to Support Post..... 55
Attaching Support Post to Floor..... 56
Attaching Wall Beam Assembly to End of Row Frames..... 57
Securing Wall Beam (For 900mm Vertical Wall Containment Set-Up Only)..... 58
Securing Wall Beam (For 900mm Roofing Containment Set-Up Only)..... 59
Securing Wall Beam (For 1200 Vertical Wall Containment Set-Up Only)..... 60
Securing Wall Beam (For 1200 Roofing Containment Set-Up Only)..... 61

Table of Contents

Section 2 (continued)- Installation of Wall Beams, Mid-Span Support Post and Mid-Span Cabinet Support Rod

Attaching Roofing Beam (For Roofing Containment Set-Up Only)..... 62
Installing Wall Beam Clamp..... 63
Attaching Flap Seal to Wall Beam Clamp..... 64

Section 3 - Installation of Roofing

Installing Aisle Containment Roofing Aisle Beam..... 66
Placing Ceiling Panel..... 67
Securing Aisle Containment Roofing Aisle Beam..... 68
Securing Ceiling Panel..... 69

Section 4 - Installation of Vertical Walls, Vertical Wall Adapter and Vertical Wall Brace

Installing Vertical Wall Brace..... 71
Installing Vertical Wall Adapter..... 72
Attaching Wall Brace to Vertical Wall..... 73
Applying Foam Seal to Vertical Wall..... 74
Installing Vertical Wall..... 75
Setting Wall Panel Height..... 76
Sizing Upper Seal..... 77
Attaching Upper Seal..... 78
Attaching Foam to Lower Seal..... 79
Attaching Lower Seal..... 80

Section 5 - Installation of End of Row Vertical Wall

Attaching Lower Side Frame..... 82
Attaching Lower Cross Beams..... 83
Attaching Upper Cross Beams..... 84
Attach Foam Seal to Upper Side Frame..... 85
Attaching Upper Side Frame..... 86
Attach Center Cross Beams..... 87
Attach Center Frames..... 88
Assemble H Channel [For End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866 Only)]..... 89
Attach H Channel to Center Frame [For End of Row Adjustable Vertical Wall, 38" - 66" (C2HACERI3866 Only)]..... 90
Mark and Cut H Channel [For End of Row Adjustable Vertical Wall, 38" - 66" (C2HACERI3866 Only)]..... 91
Measure and Cut Wall Panel..... 92
Attaching H Channel to Clear Panels [For End of Row Adjustable Vertical Wall, 38" - 66" (C2HACERI3866 Only)]..... 93
Attach Bottom and Side Wall Panel Clamps..... 94
Insert Wall Panel..... 95
Attach Top and Remaining Side Wall Panel Clamps..... 96
Foam Seal Installation..... 97

Table of Contents

Section 6 - Installation of Net-Contain Sliding Doors

Attaching Transom..... 99
Flap Seal Installation..... 100
Attaching Vertical Panel (for 900mm/1200mm Aisles)..... 101
Attaching Vertical Panel (for 1800mm Aisles Only)..... 102
Panel Cover Installation (for 900mm/1200mm Aisles)..... 103
Panel Cover Installation (for 1800mm Aisles)..... 104
Attaching Door Guides..... 105
Header Installation..... 106
Right Hand Sliding Door Set-Up..... 107
Left Hand Sliding Door Set-Up..... 108
Sliding Door Installation..... 109
Adjusting Sliding Door Height..... 110
Adjusting Door Seals..... 111
Adjusting Door Damper..... 112
Attaching Cover Caps..... 113
Header Cover Installation..... 114

Section 7 - Installation of Blanking Panels

Cutting Blanking Panels..... 116
Placing First Lower Guide..... 117
Additional Lower Guides..... 118
Blanking Panel Installation..... 119
Over Lapping Blanking Panels..... 120
Sizing Above Cabinet Blanking Panel..... 121
Placing Lower Guide (For Above Cabinet Blanking Panel Only)..... 122
Blanking Panel Installation (For Above Cabinet Blanking Panel Only)..... 123

SECTION 1

INSTALLATION OF UNIVERSAL END OF ROW FRAME CUEFRT8F03STB1,CUEFRT9F03STB1,CUEFRT8F04STB1, CUEFRT9F04STB1,CUEFRT8F06STB1,CUEFRT9F06STB1, CUEFVT8F03STB1,CUEFVT9F03STB1,CUEFVT8F04STB1, CUEFVT9F04STB1

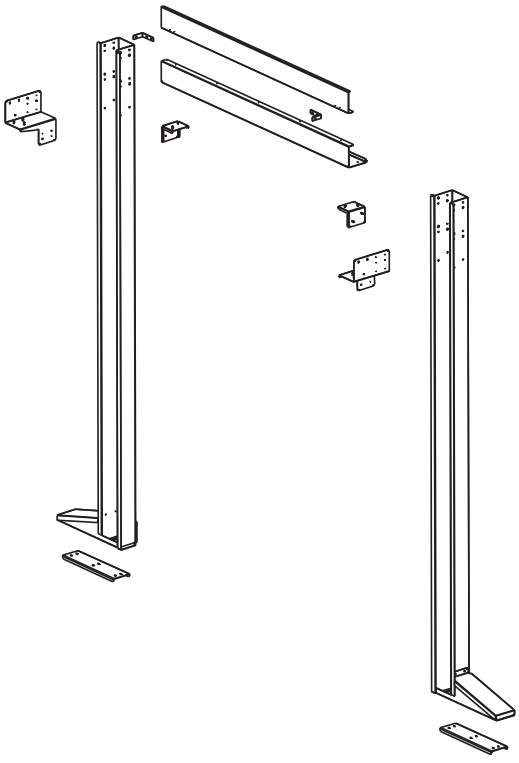

Vertical Wall

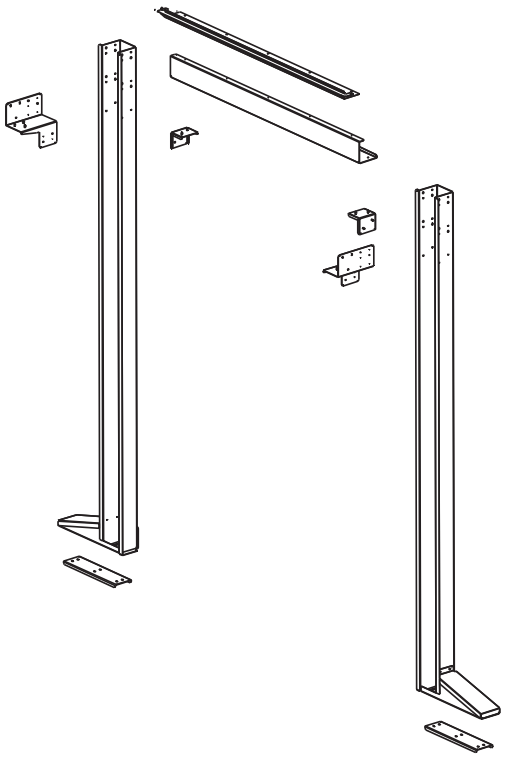

Roofing

Attaching Hanger and Beam Support to Post (For 900mm 42RU Set-Up Only)

- Using (2) M6 nuts, secure the left hanger to the left side post.
- Attach (1) beam support to the left hand post and left hand hanger with (2) M6 nuts.
- Repeat process for right side post.

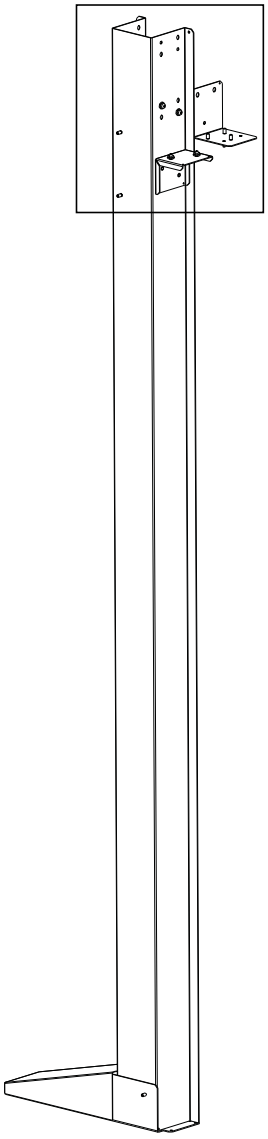

Left Post

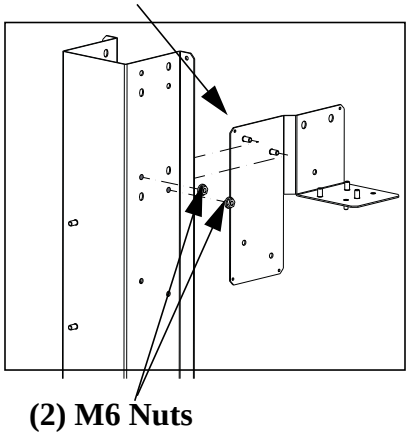

42RU Alignment-Hanger

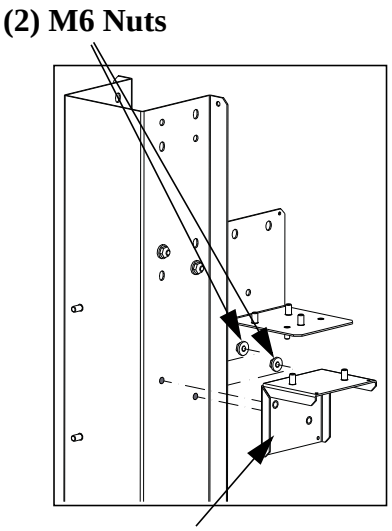

42RU Alignment-Beam Support

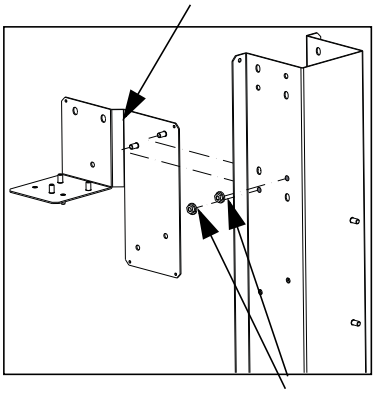

42RU Alignment-Hanger

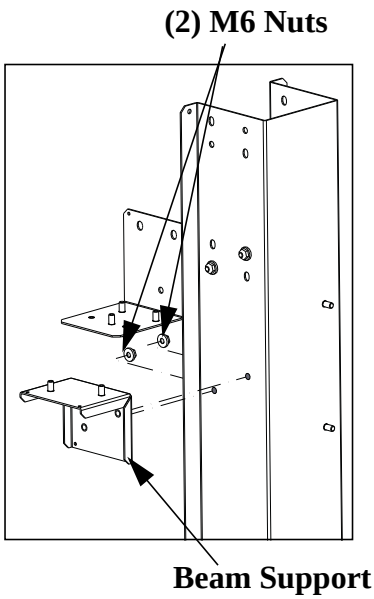

42RU Alignment-Beam Support

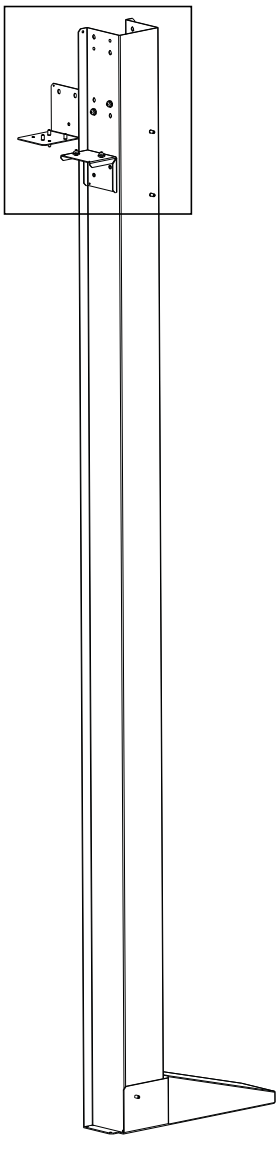

Right Post

Attaching Hanger and Beam Support to Post (For 900mm 45RU Set-Up Only)

- Using (2) M6 nuts, secure the left hanger to the left side post.
- Attach (1) beam support to the left hand post and left hand hanger with (2) M6 nuts.
- Repeat process for right side post.

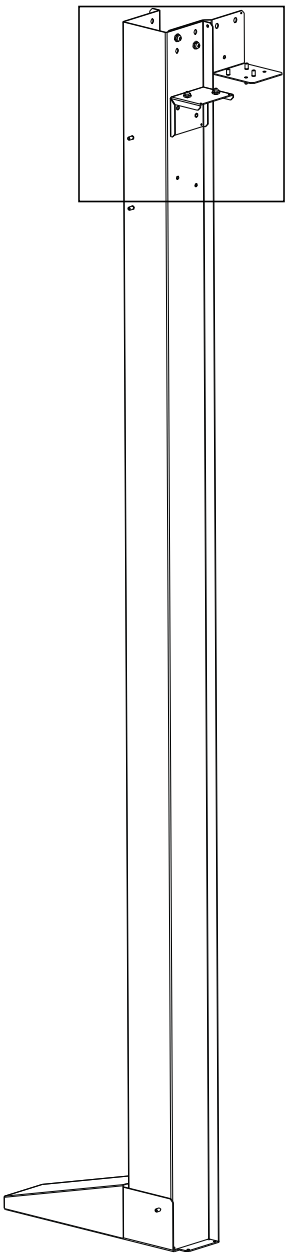

Left Post

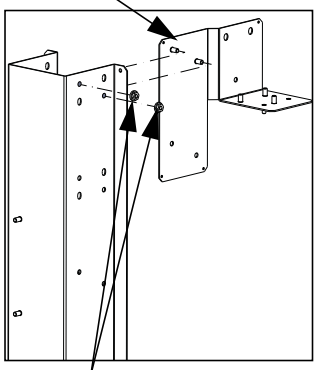

45RU Alignment-Hanger

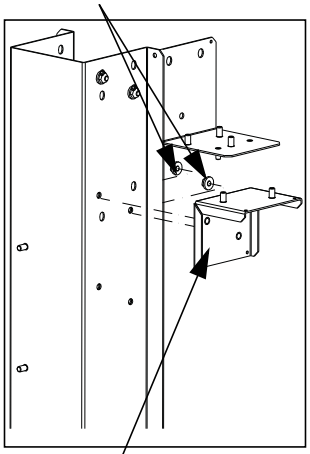

45RU Alignment-Beam Support

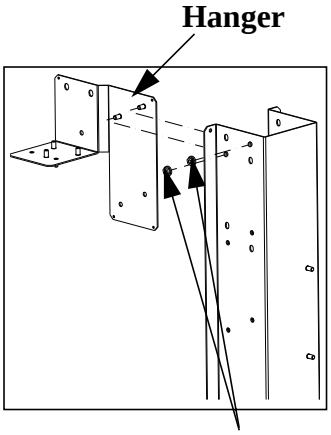

45RU Alignment-Hanger

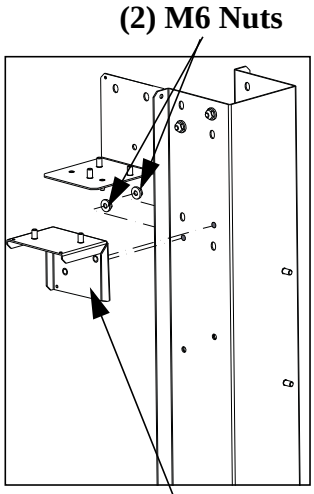

45RU Alignment-Beam Support

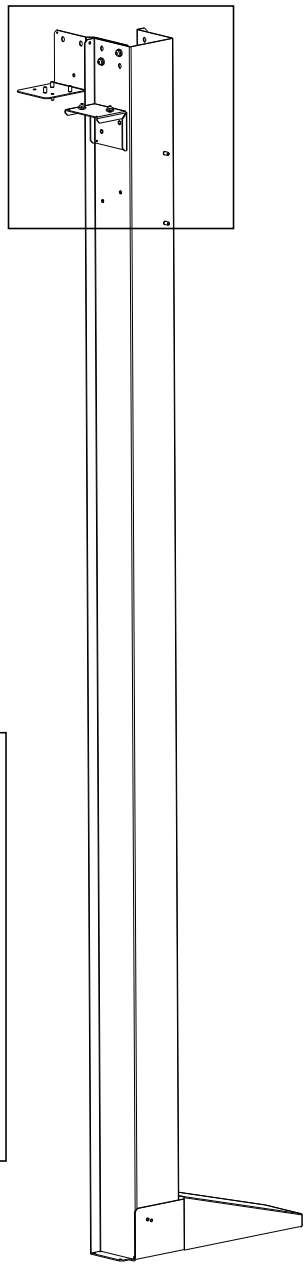

Right Post

Attaching Hanger and Beam Support to Post (For 900mm 48RU Set-Up Only)

- Using (4) M6x12mm bolts, secure the left hanger to the outside of the left side post.
- Secure the left hanger in place with (2) M6x12mm bolts to the inside of the left side post.
- Attach (1) beam support to the left side post and left hanger with (2) M6 nuts.
- Repeat process for right side post.

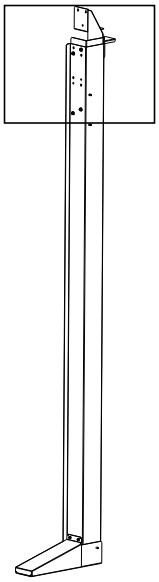

Left Side Post

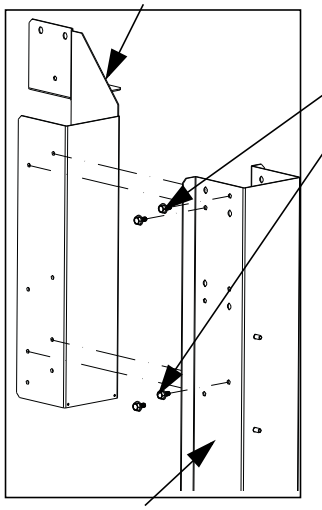

Left Side Post- Outside Wall

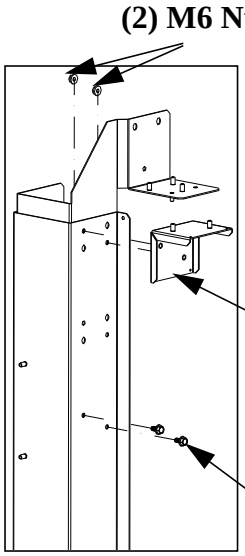

Left Side Post- Inside Wall

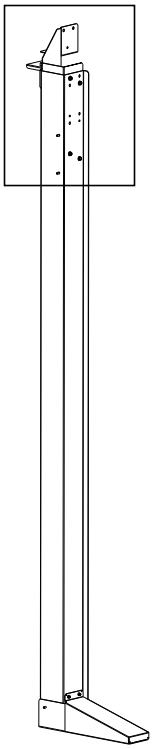

Right Side Post

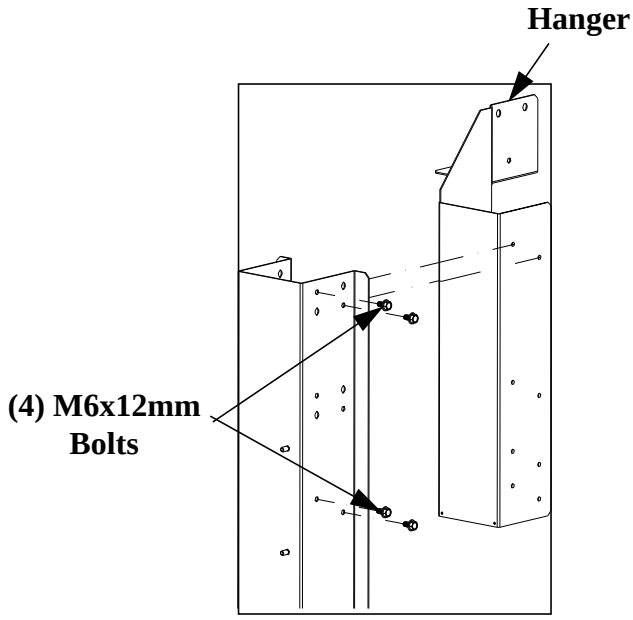

Right Side Post- Outside Wall

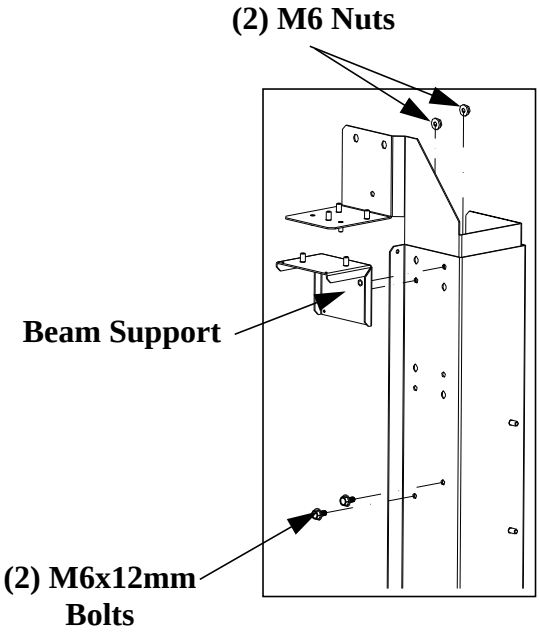

Right Side Post- Inside Wall

Attaching Hanger to Post (For 900mm 52RU Set-Up Only)

- Using (4) M6x12mm bolts, secure the left hanger to the left side post from the outside of the post.
- Secure the left hanger in place with (4) M6x12mm bolts to the inside of the left side post.
- Repeat process for right side post.

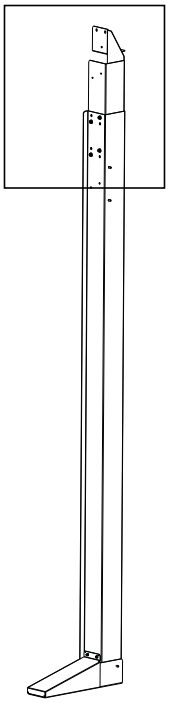

Left Post

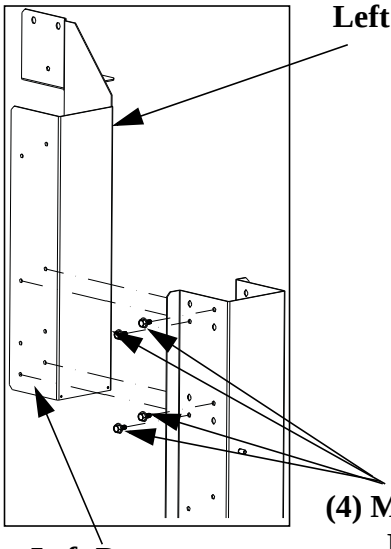

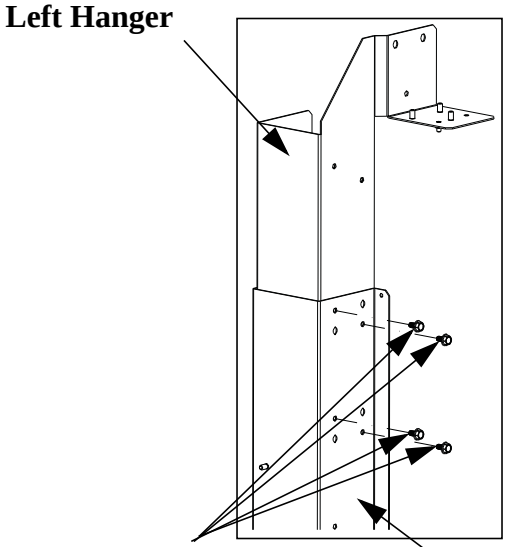

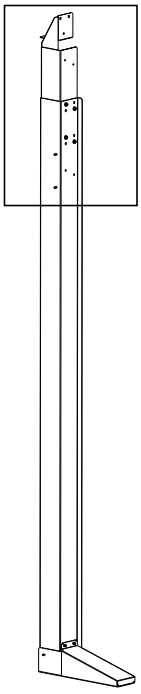

Right Post

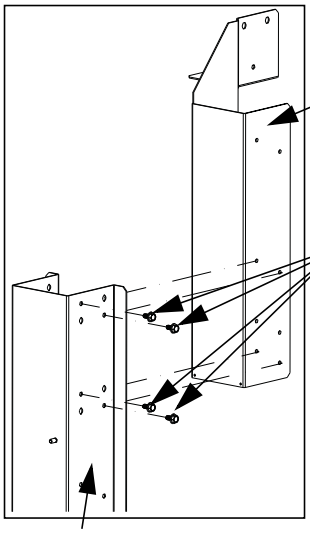

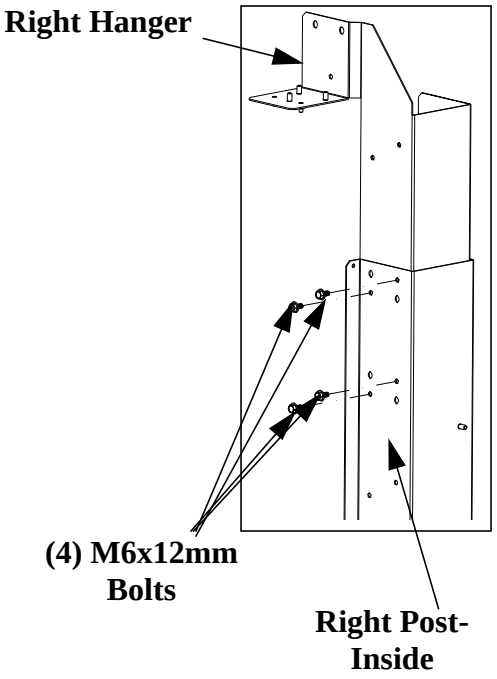

Attaching Beam Support and Spacer to Post (For 900mm 52RU Set-Up Only)

- Attach (1) beam support and spacer to the left hand post and hanger with (2) M6 nuts.
- Repeat process for right side post.

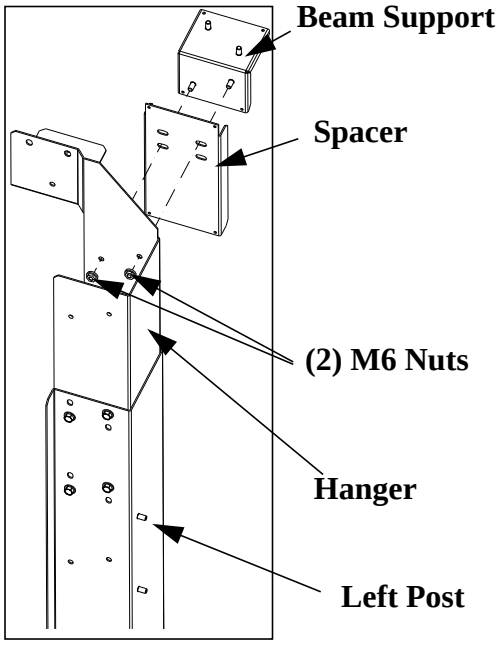

View-Top of Left Post

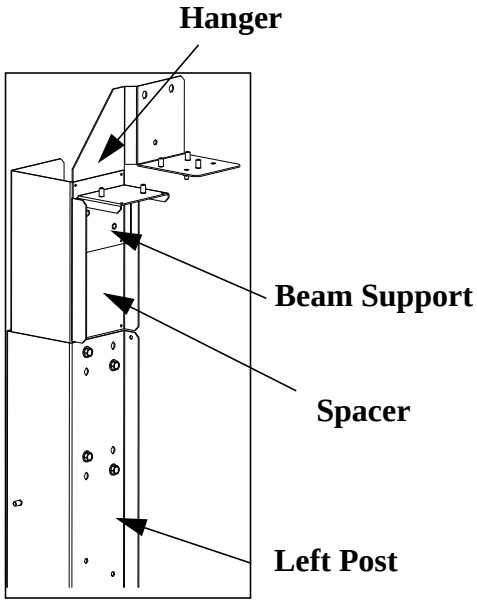

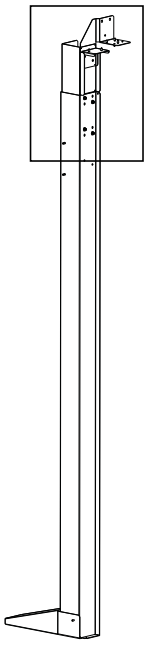

Left Post-Assembly

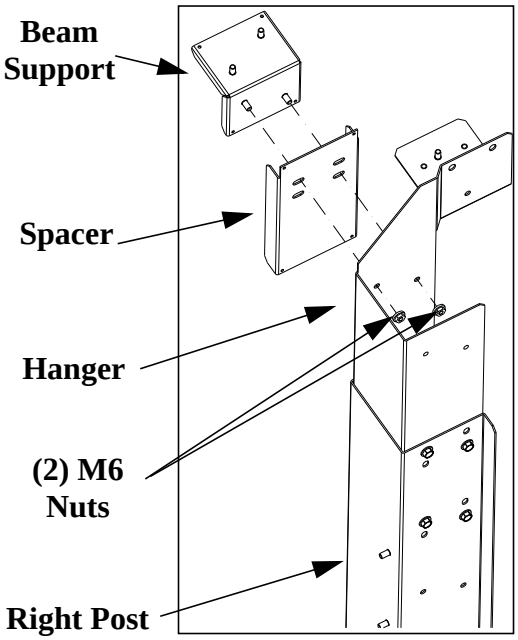

View-Top of Right Post

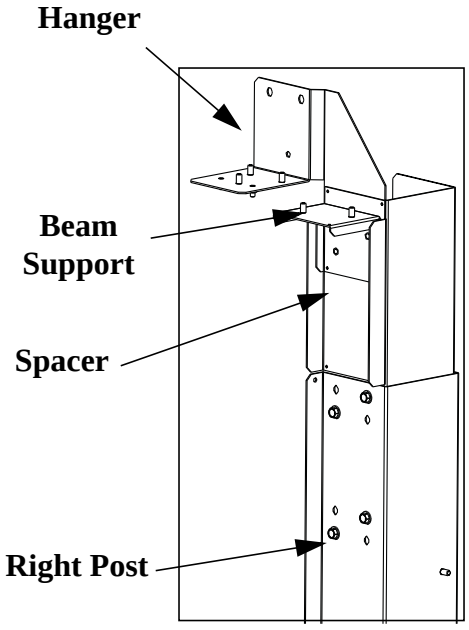

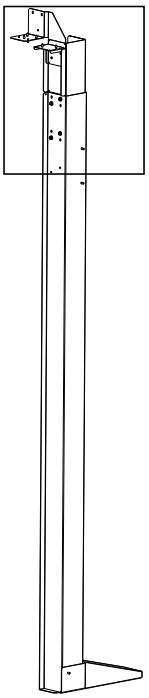

Right Post-Assembly

Attaching Hanger and Beam Support to Post (For 1200mm 42RU Set-Up Only)

- Using (2) M6x12mm bolts, secure the left hanger to the left side post.
- Attach (1) support beam to the left side post and left hanger with (2) M6 nuts.
- Repeat process for right side post.

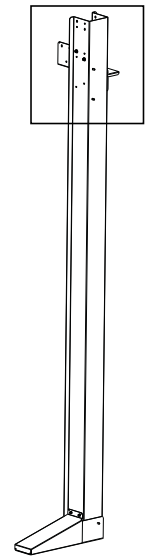

Left Post

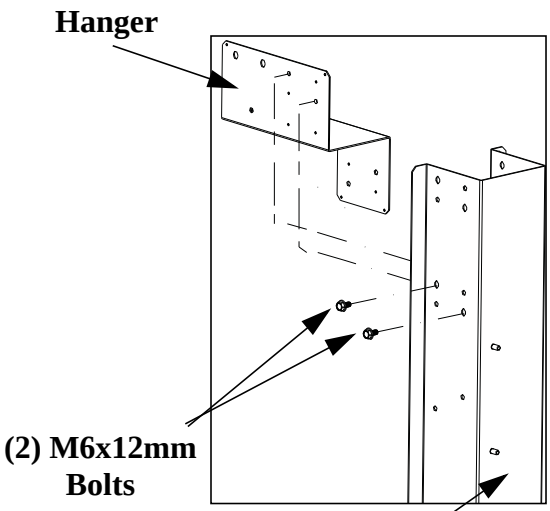

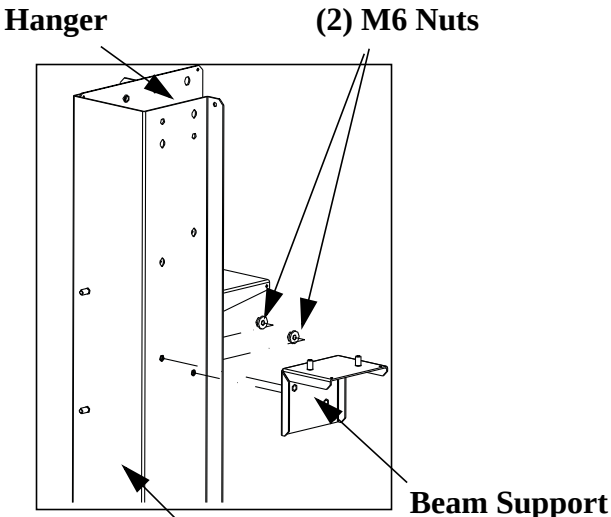

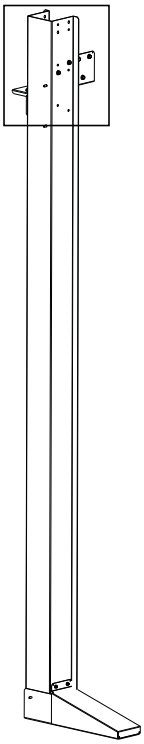

Right Post

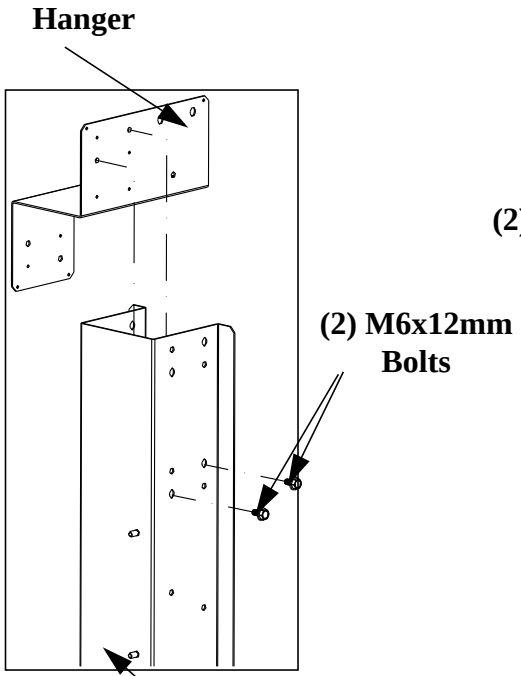

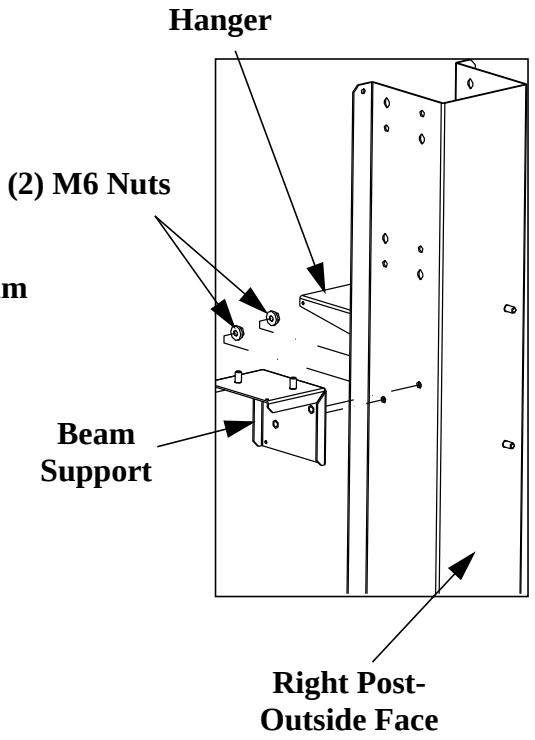

Attaching Hanger and Beam Support to Post (For 1200mm 45RU Set-Up Only)

- Using (2) M6x12mm bolts, secure the left hanger to the left side post.
- Attach (1) support beam to the left side post and left hanger with (2) M6 nuts.
- Repeat process for right side post.

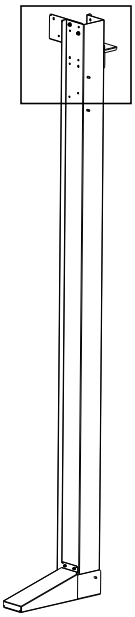

Left Post

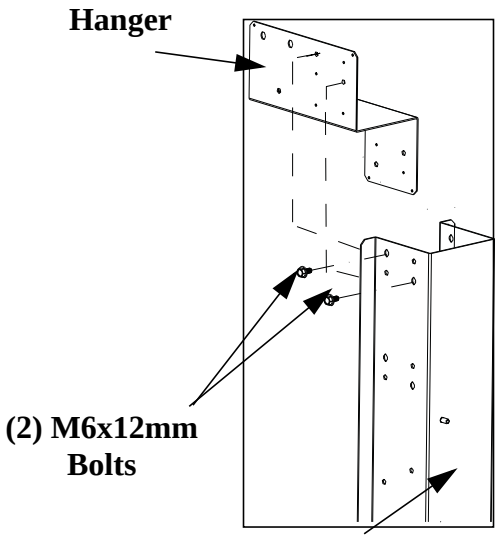

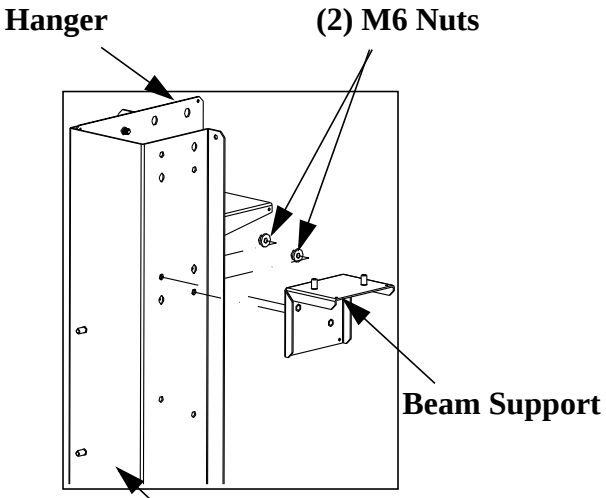

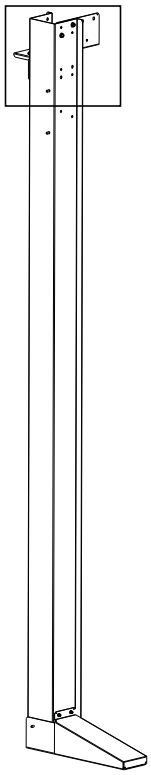

Right Post

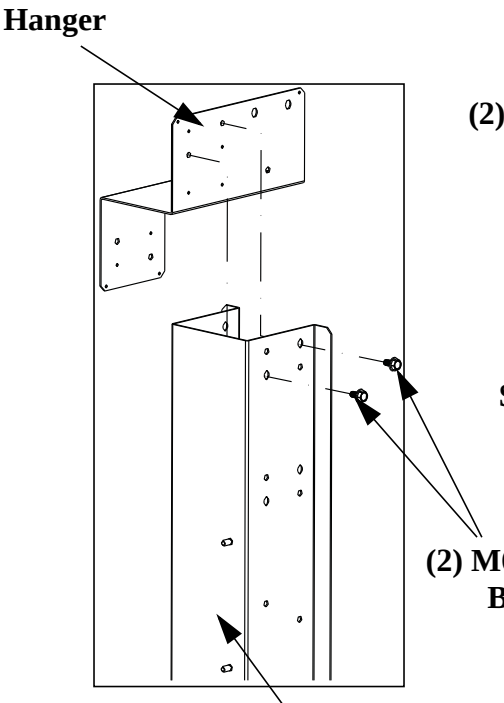

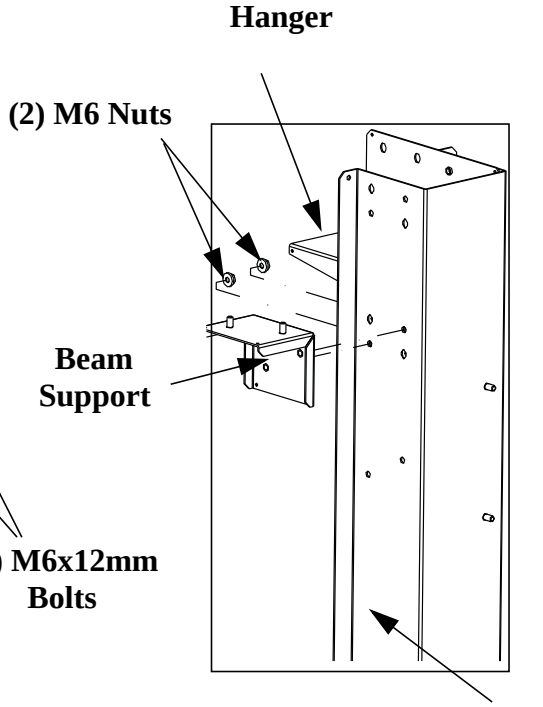

Attaching Hanger and Beam Support to Post (For 1200mm 48RU Set-Up Only)

- Using (4) M6x12mm bolts, secure the right hanger to the outside of the right side post.
- Secure the hanger in place with (2) M6x12mm bolts to the inside of the right side post.
- Attach (1) support beam to the right side post and hanger with (2) M6 nuts.
- Repeat process for left side post.

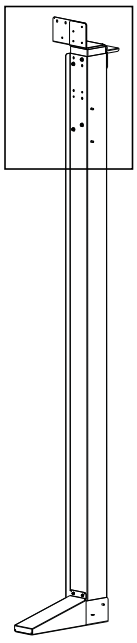

Left Post

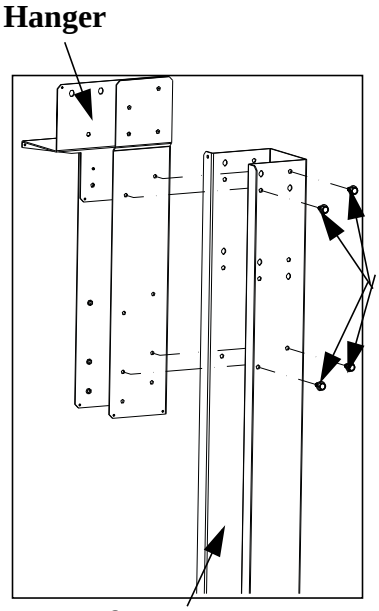

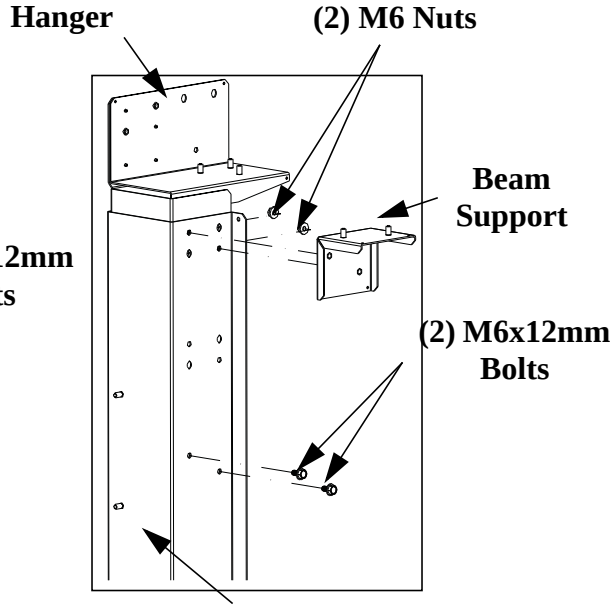

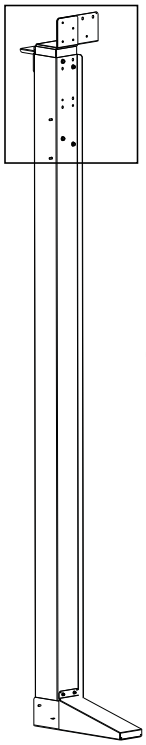

Right Post

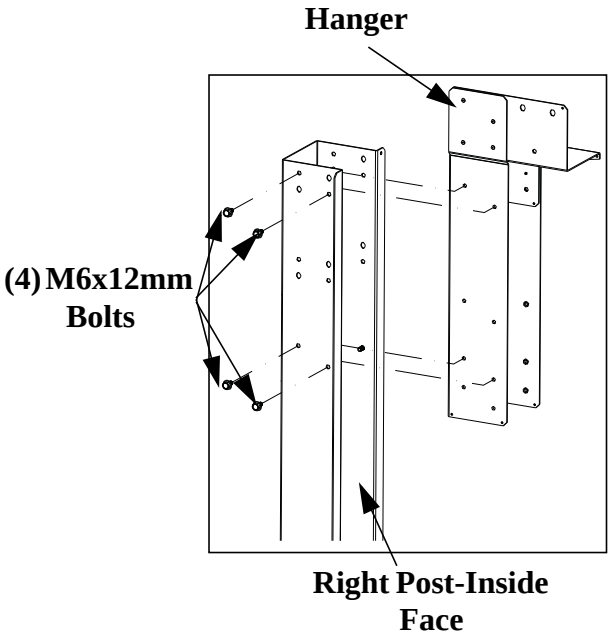

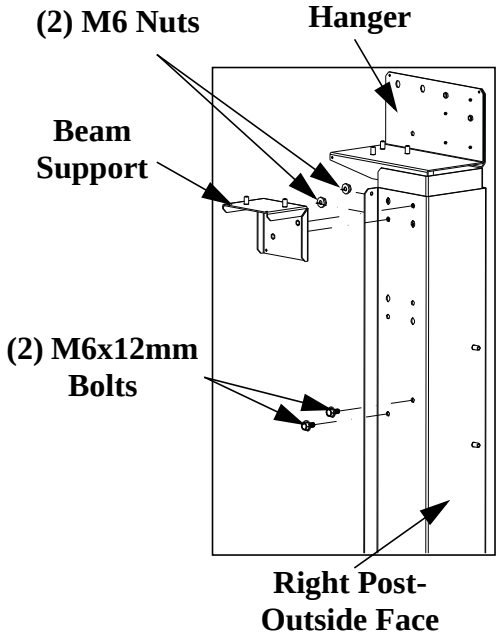

Attaching Hanger to Post (For 1200mm 52RU Set-Up Only)

- Using (4) M6x12mm bolts, secure the left hanger to the outside of the left side post.
- Secure the left hanger in place with (4) M6x12mm bolts to the inside of the left side post.
- Repeat process for right side post.

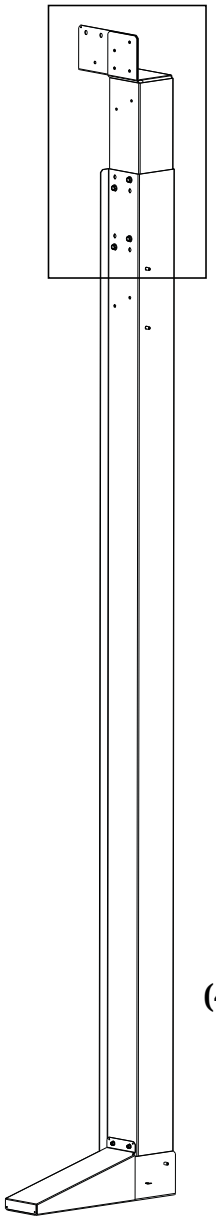

Left Post

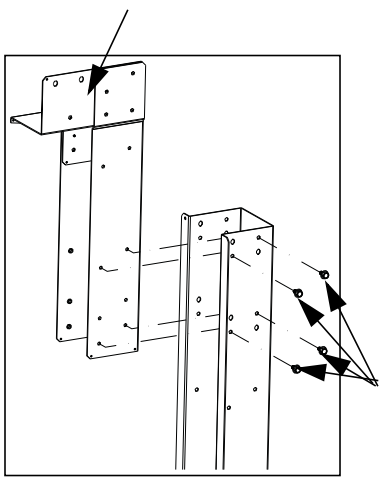

Left Post- Outside

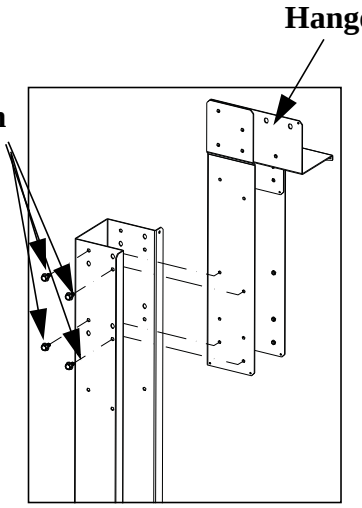

Right Post- Outside

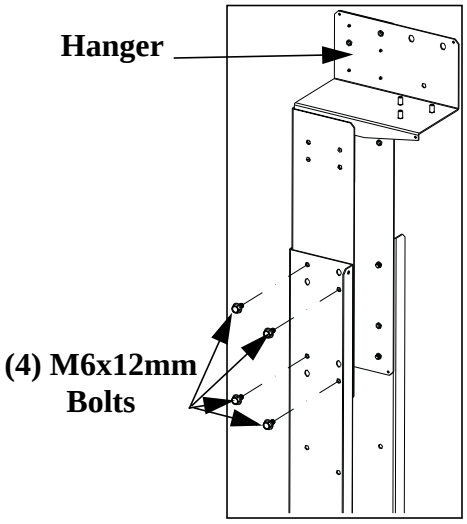

Left Post- Inside

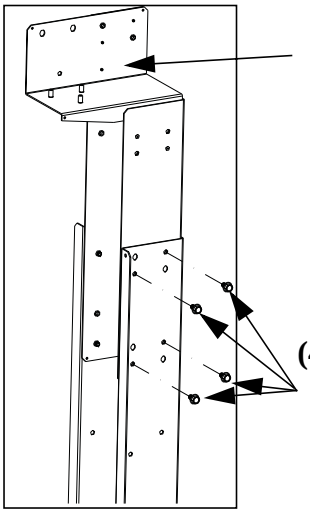

Right Post- Inside

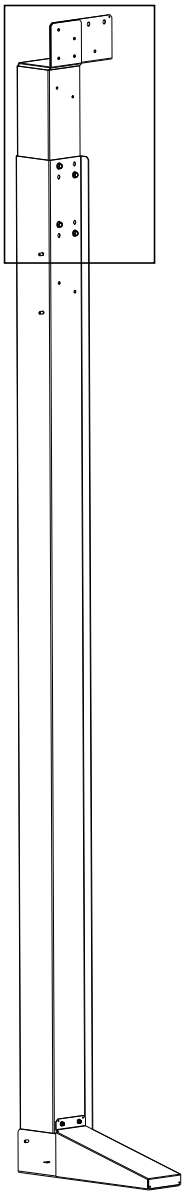

Right Post

Attaching Beam Support and Spacer (For 1200mm 52RU Set-Up Only)

- Attach (1) beam support and spacer to the left side post and hanger with (2) M6 nuts.
- Repeat process for right side post.

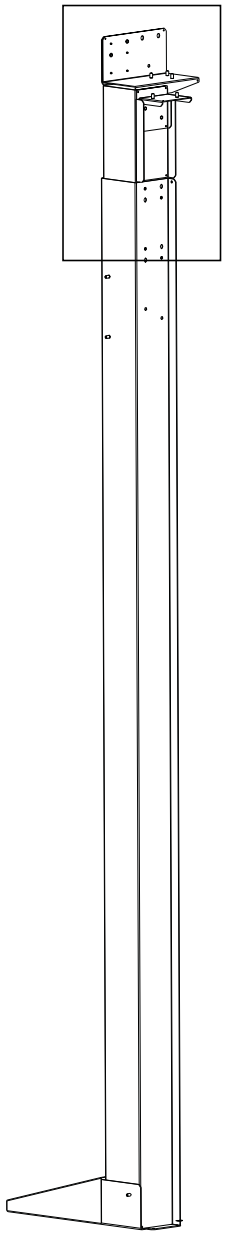

Left Post

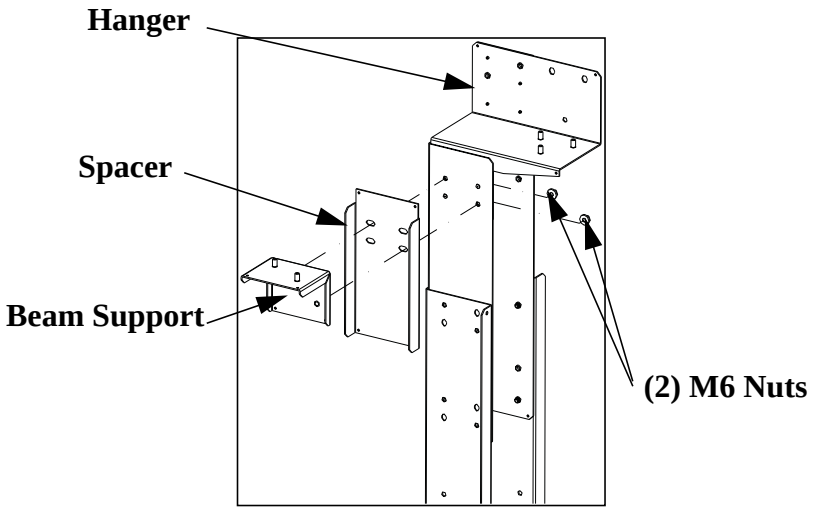

Left Post-
Inside

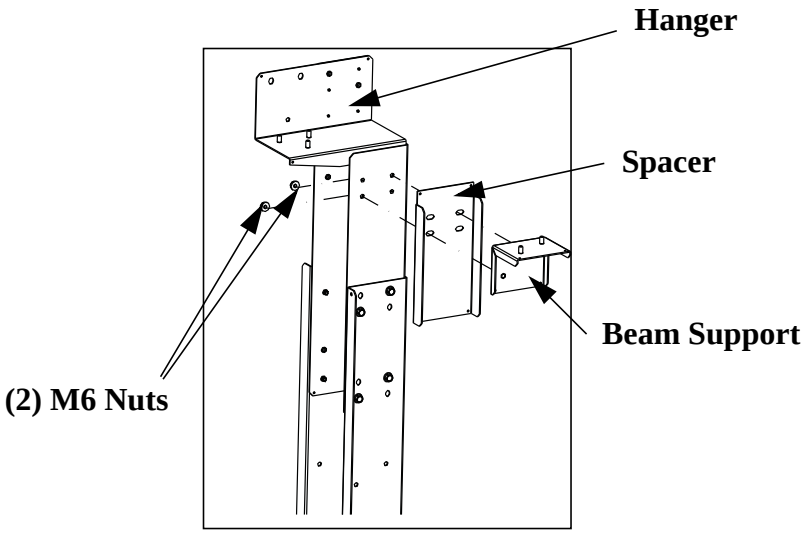

Right Post-
Inside

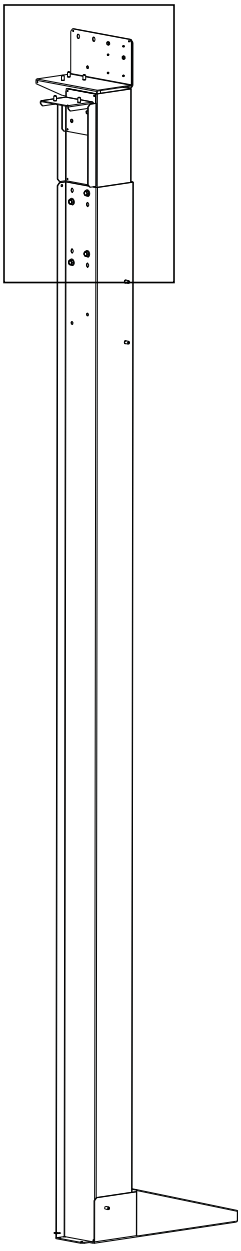

Right Post

Attaching Hanger and Beam Support to Post (For 1800mm 42RU Set-Up Only)

- Using (2) M6x12mm bolts, secure the left hanger to the left side post.
- Attach (1) support beam to the left side post and left hanger with (2) M6 nuts.
- Repeat process for right side post.

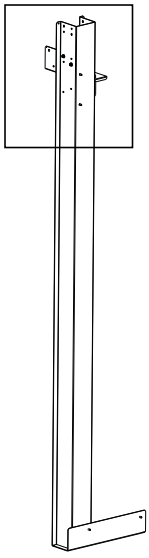

Left Post

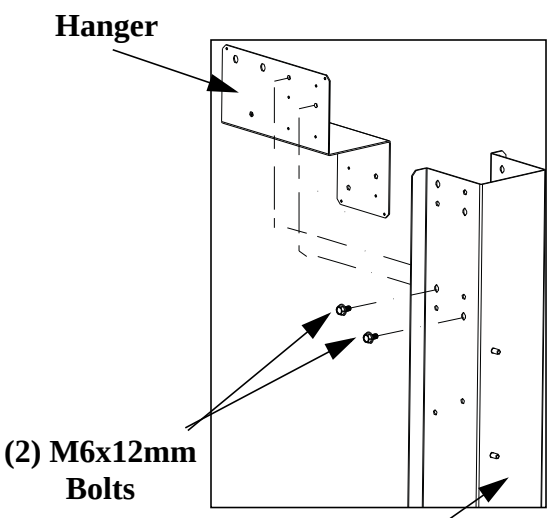

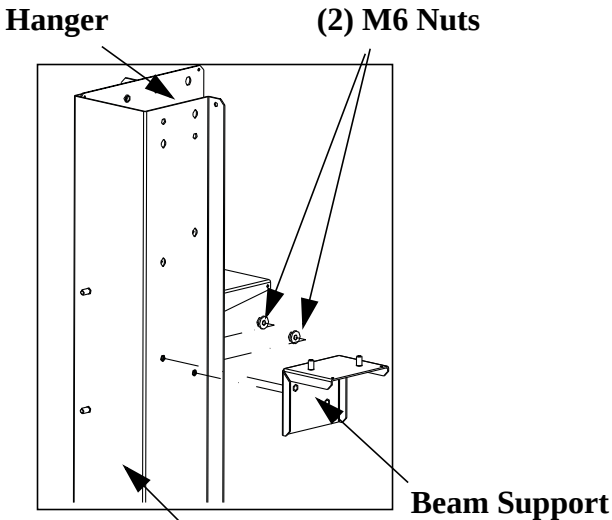

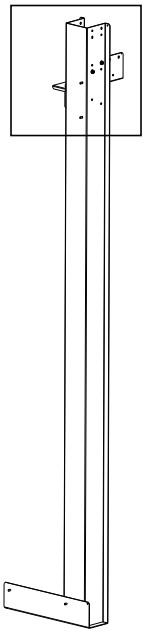

Right Post

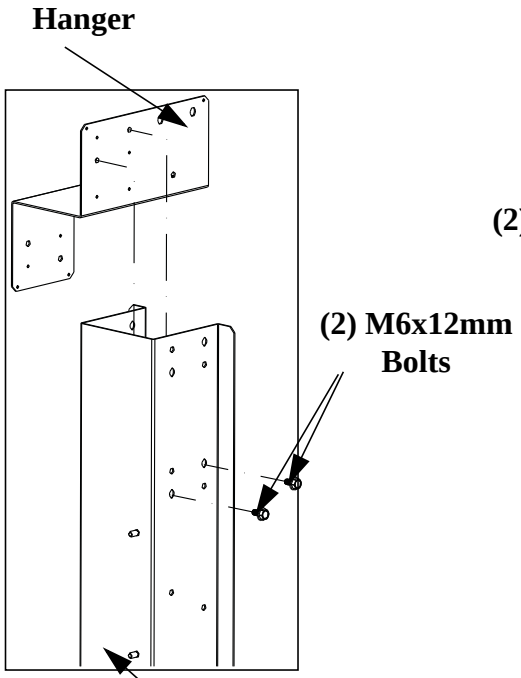

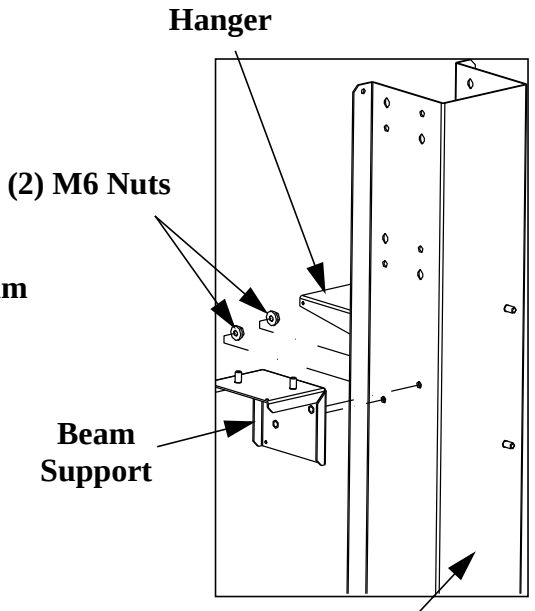

Attaching Hanger and Beam Support to Post (For 1800mm 45RU Set-Up Only)

- Using (2) M6x12mm bolts, secure the left hanger to the left side post.
- Attach (1) support beam to the left side post and left hanger with (2) M6 nuts.
- Repeat process for right side post.

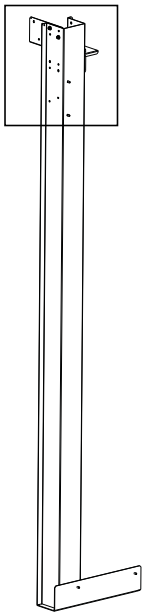

Left Post

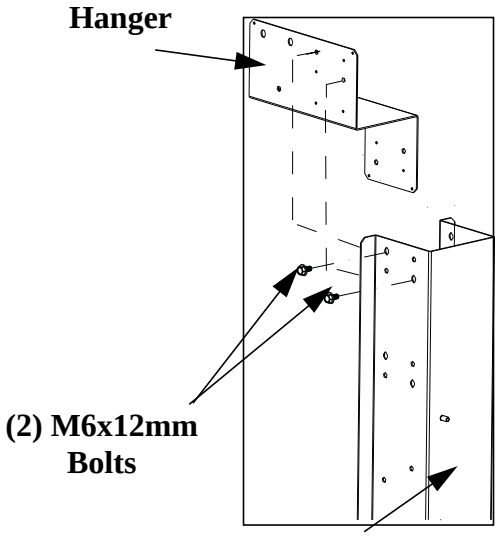

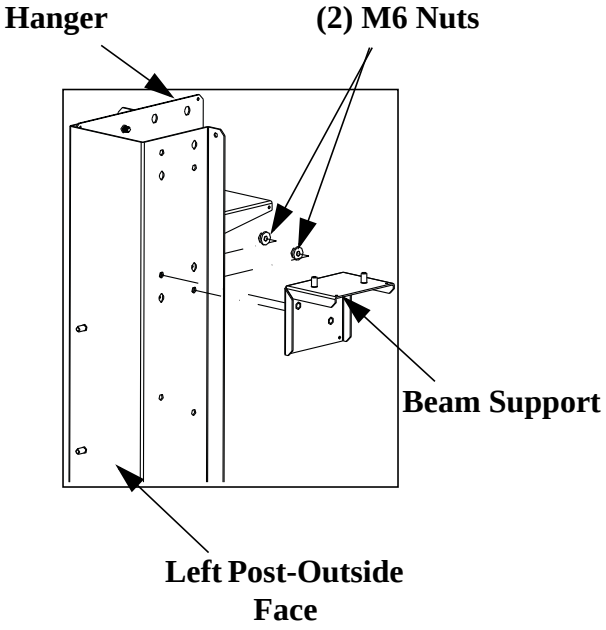

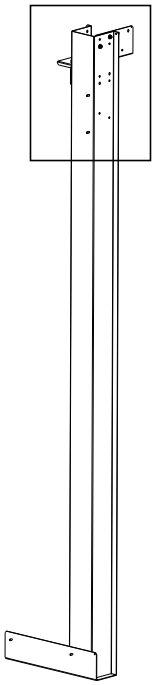

Right Post

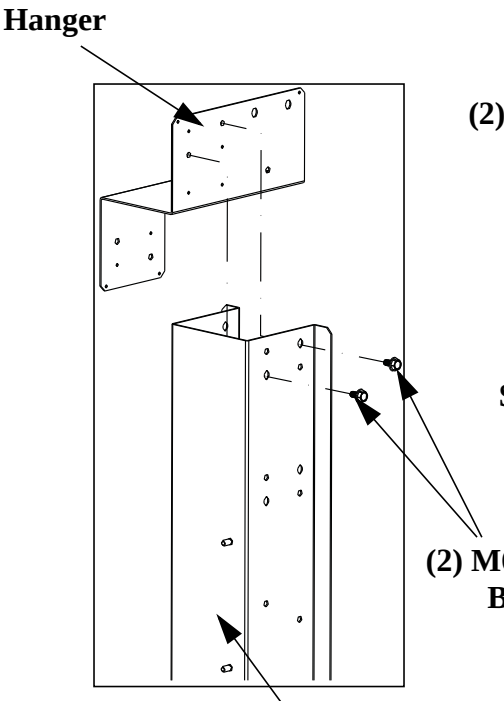

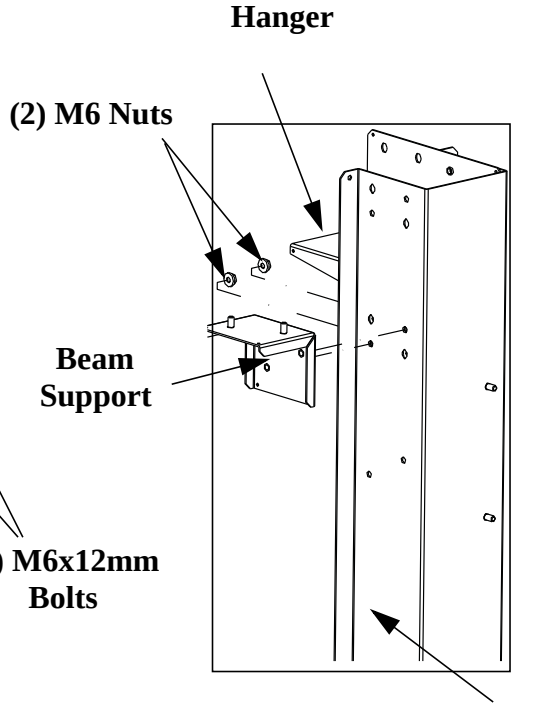

Attaching Hanger and Beam Support to Post (For 1800mm 48RU Set-Up Only)

- Using (4) M6x12mm bolts, secure the right hanger to the outside of the right side post.
- Secure the hanger in place with (2) M6x12mm bolts to the inside of the right side post.
- Attach (1) support beam to the right side post and hanger with (2) M6 nuts.
- Repeat process for left side post.

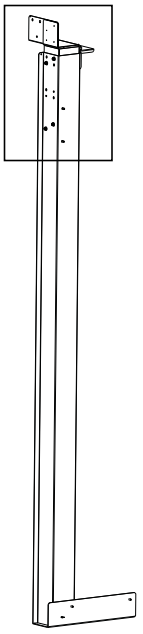

Left Post

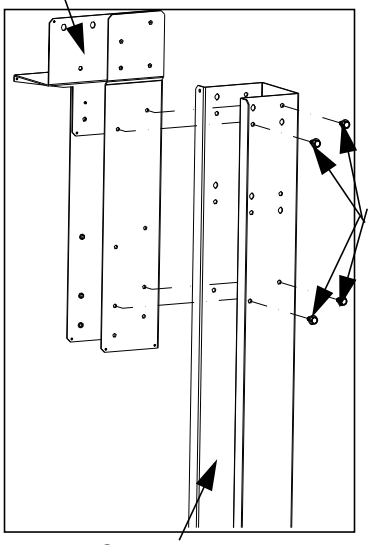

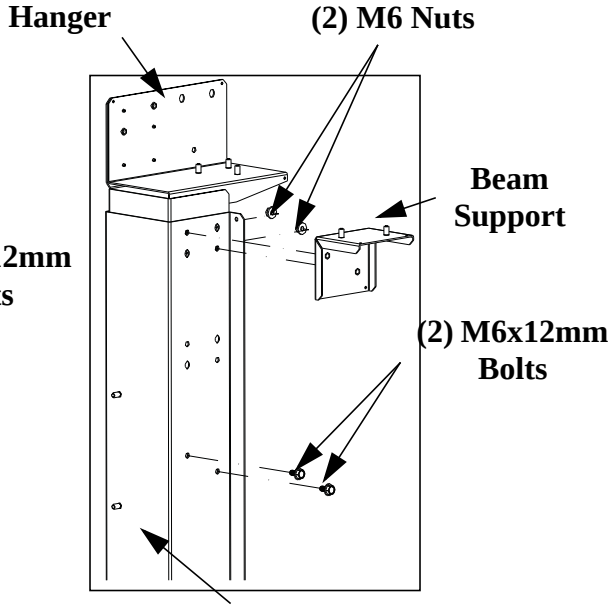

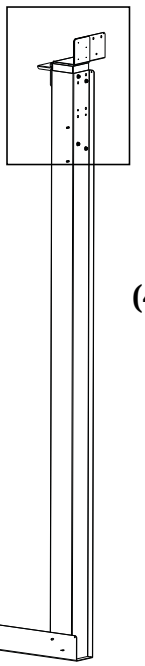

Right Post

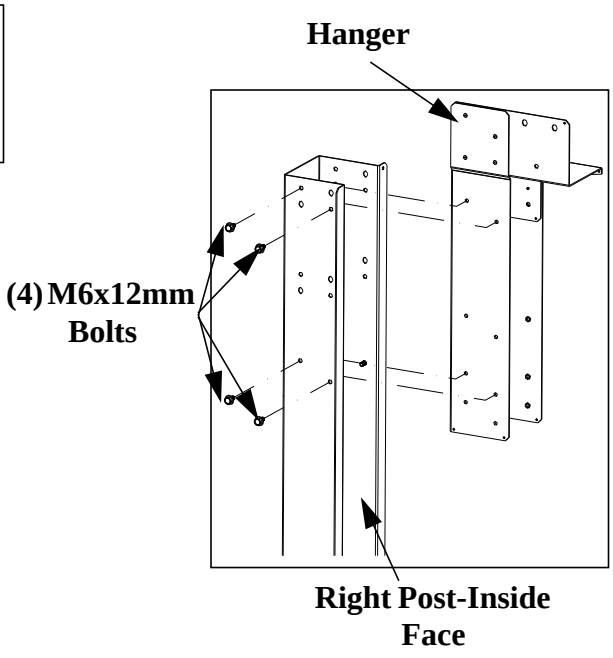

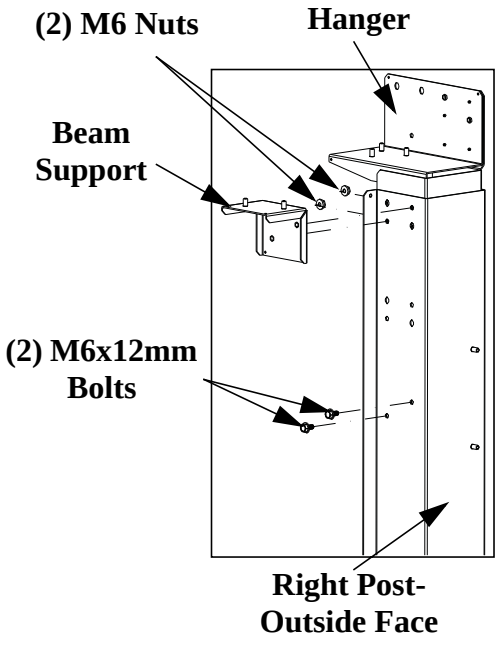

Attaching Hanger to Post (For 1800mm 52RU Set-Up Only)

- Using (4) M6x12mm bolts, secure the left hanger to the outside of the left side post.
- Secure the left hanger in place with (4) M6x12mm bolts to the inside of the left side post.
- Repeat process for right side post.

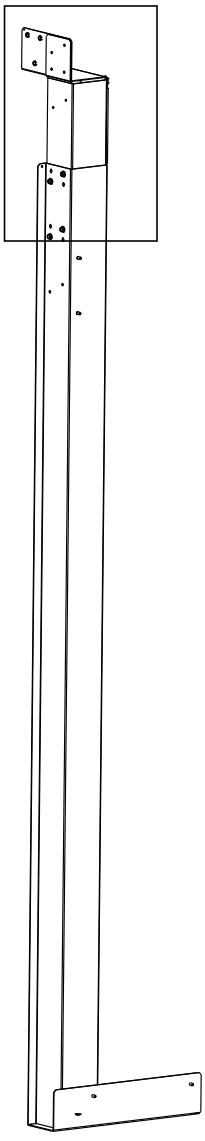

Left Post

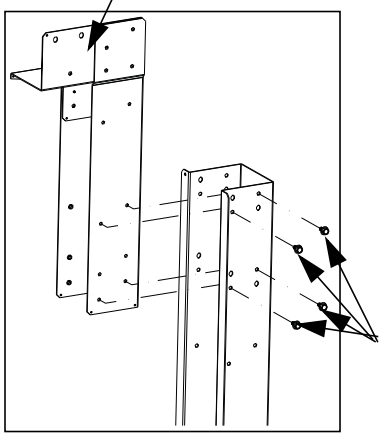

Left Post- Outside

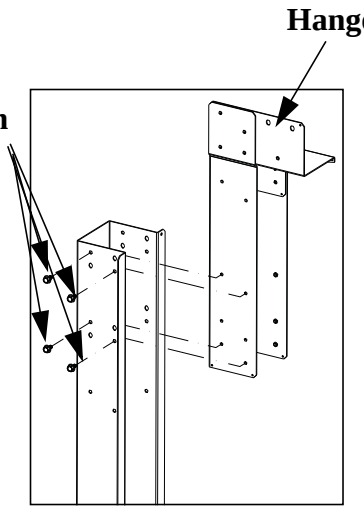

Right Post- Outside

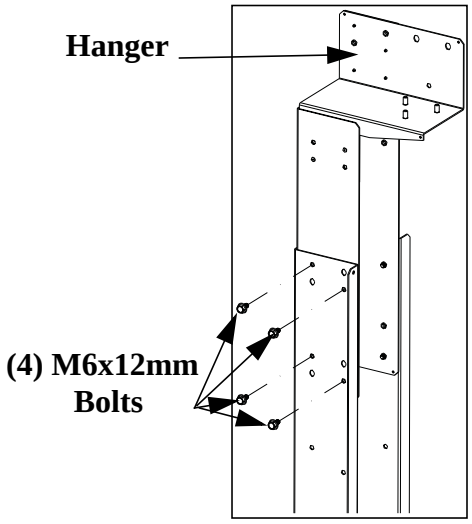

Left Post- Inside

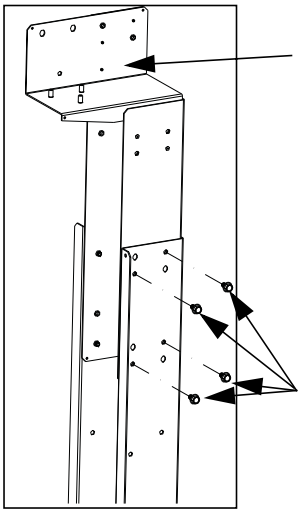

Right Post- Inside

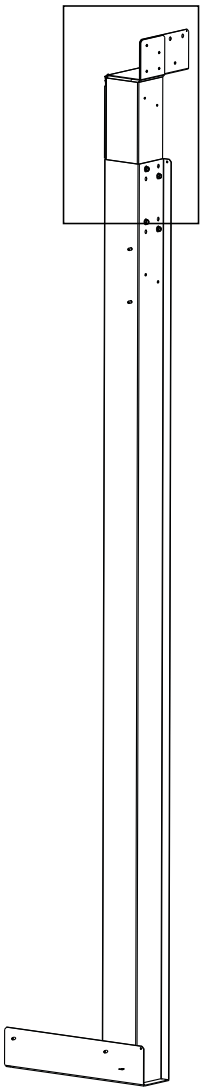

Right Post

Attaching Beam Support and Spacer (For 1800mm 52RU Set-Up Only)

- Attach (1) beam support and spacer to the left side post and hanger with (2) M6 nuts.
- Repeat process for right side post.

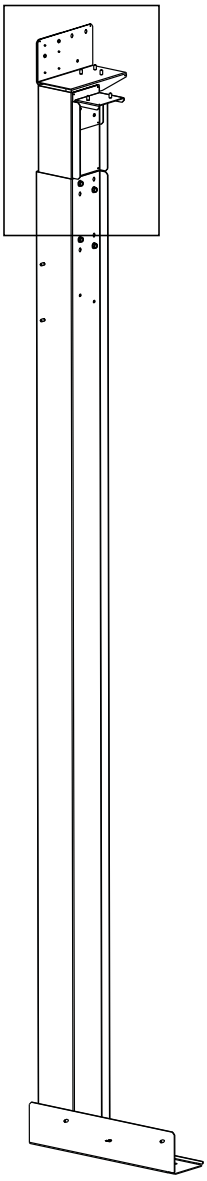

Left Post

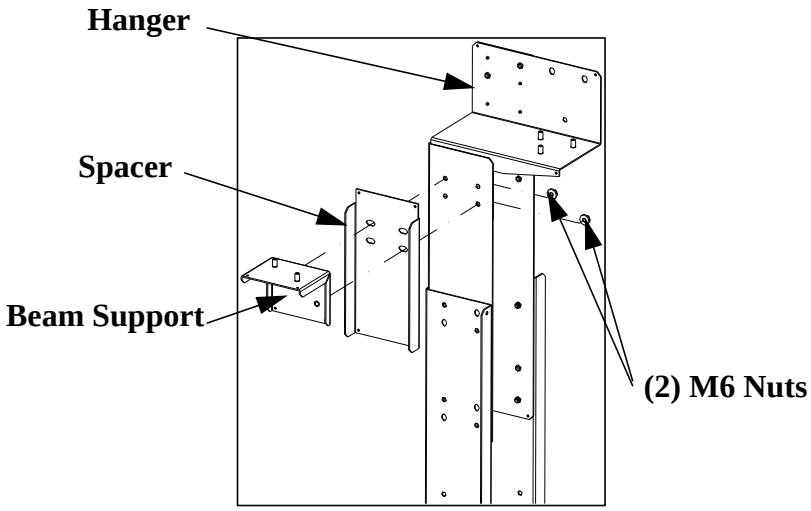

Left Post-Inside

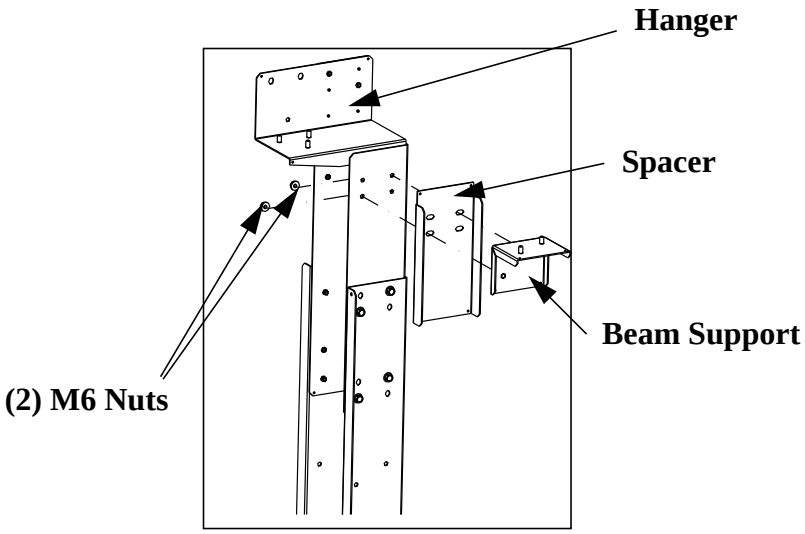

Right Post-Inside

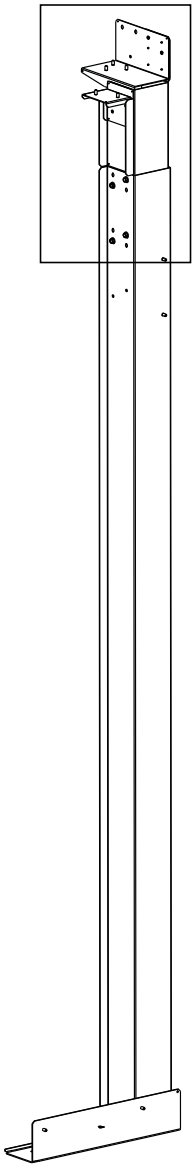

Right Post

Containment System Layout

- The containment system length is measured from inside of posts, as shown below.
- The drill layout shown below applies to all aisle widths (900mm, 1200mm, and 1800mm).

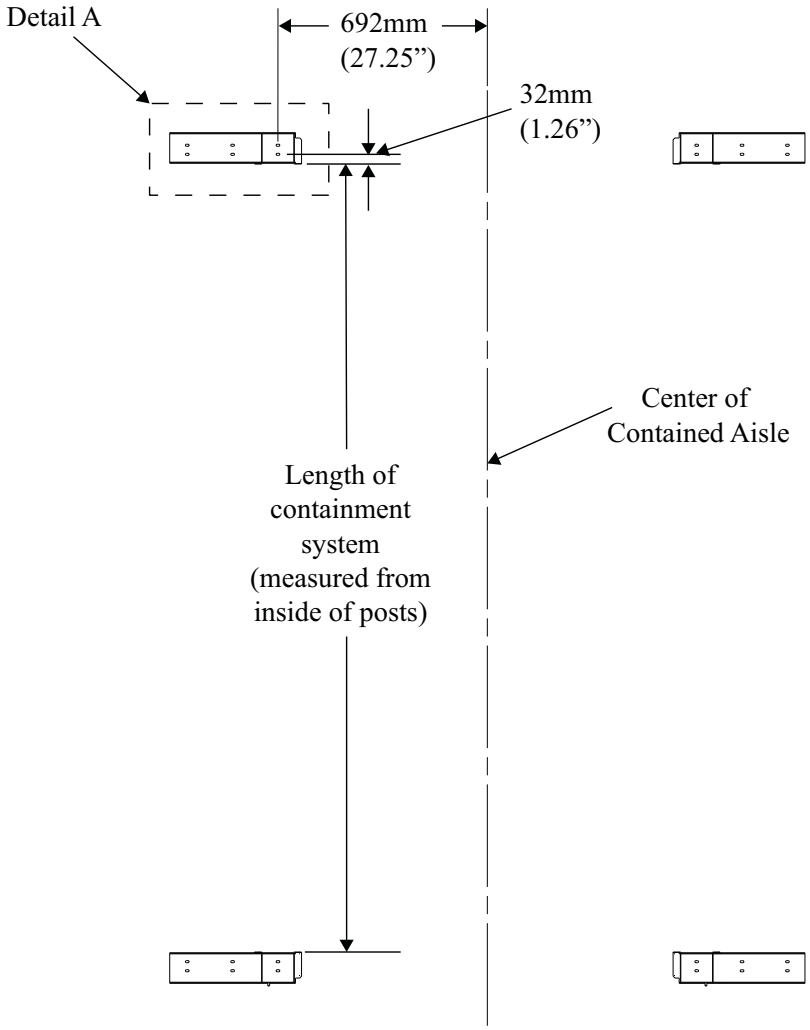

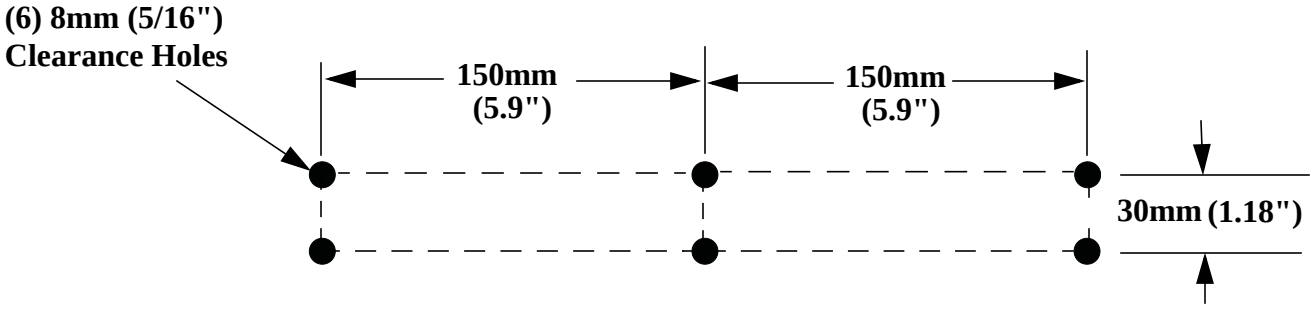

Detail A

Containment System Layout

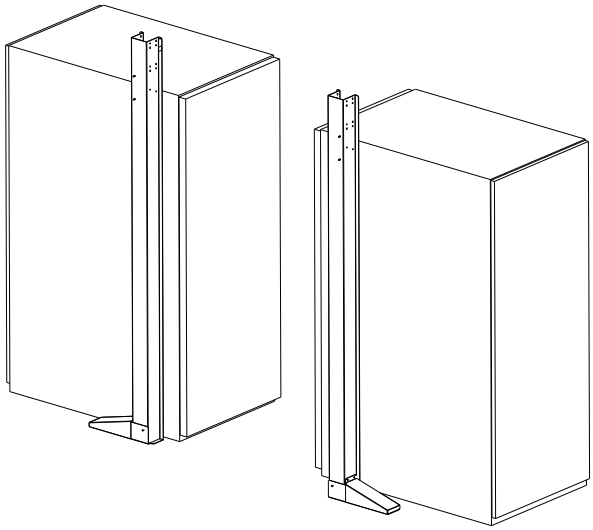

900mm (3ft) Aisle

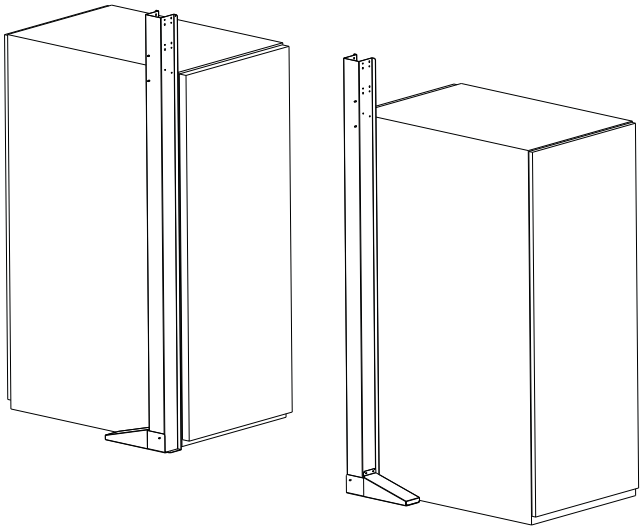

1200mm (4ft) Aisle

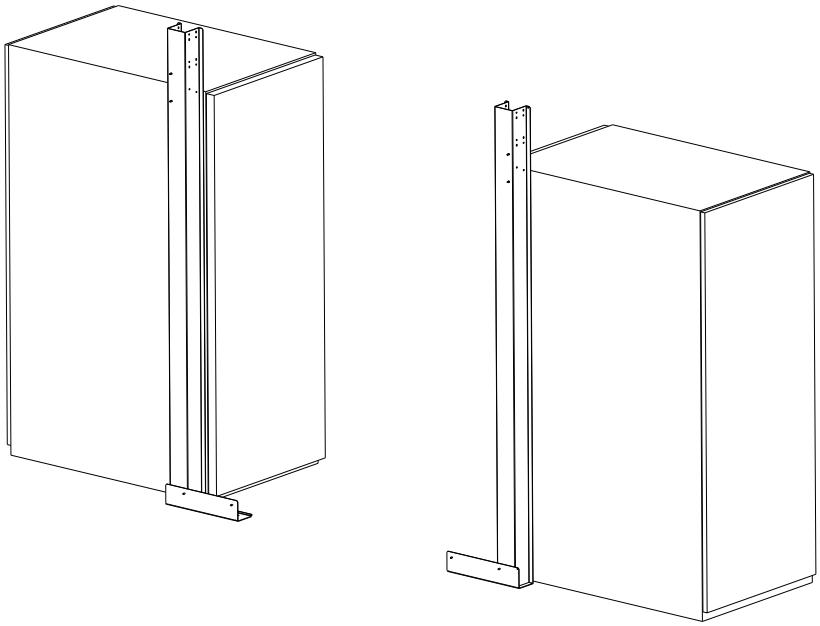

1800mm (6ft) Aisle

Attaching Post to Floor

- From the floor, remove a tile that is directly next to the tile that you will be attaching the post to.
- Have (1) person hold the post in place aligning the holes in the foot with the pilot holes in the tile.
- Have another person insert (6) M6x50mm hex head bolts through (3) foot plates on the top of the foot of the post.
- From underneath the tile slide (1) tile plate over the (6) M6x50mm hex head bolts and secure into place with (6) M6 nuts.

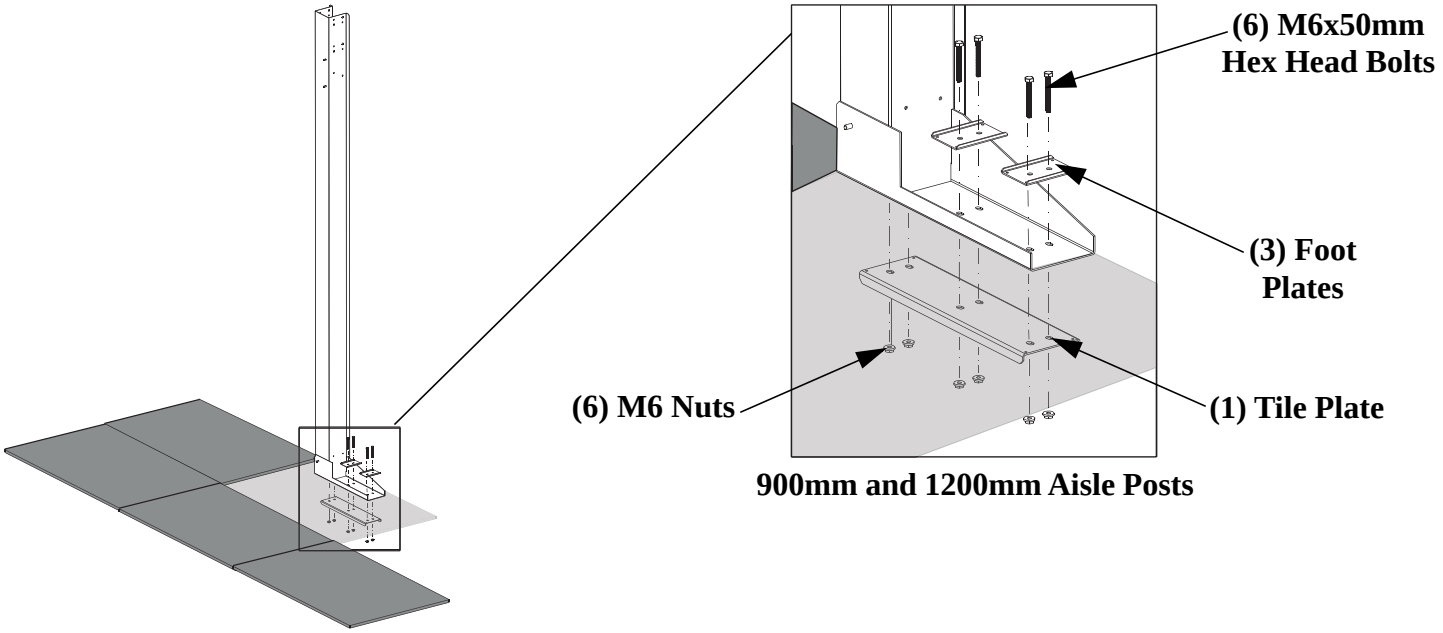

900mm and 1200mm Aisle Posts

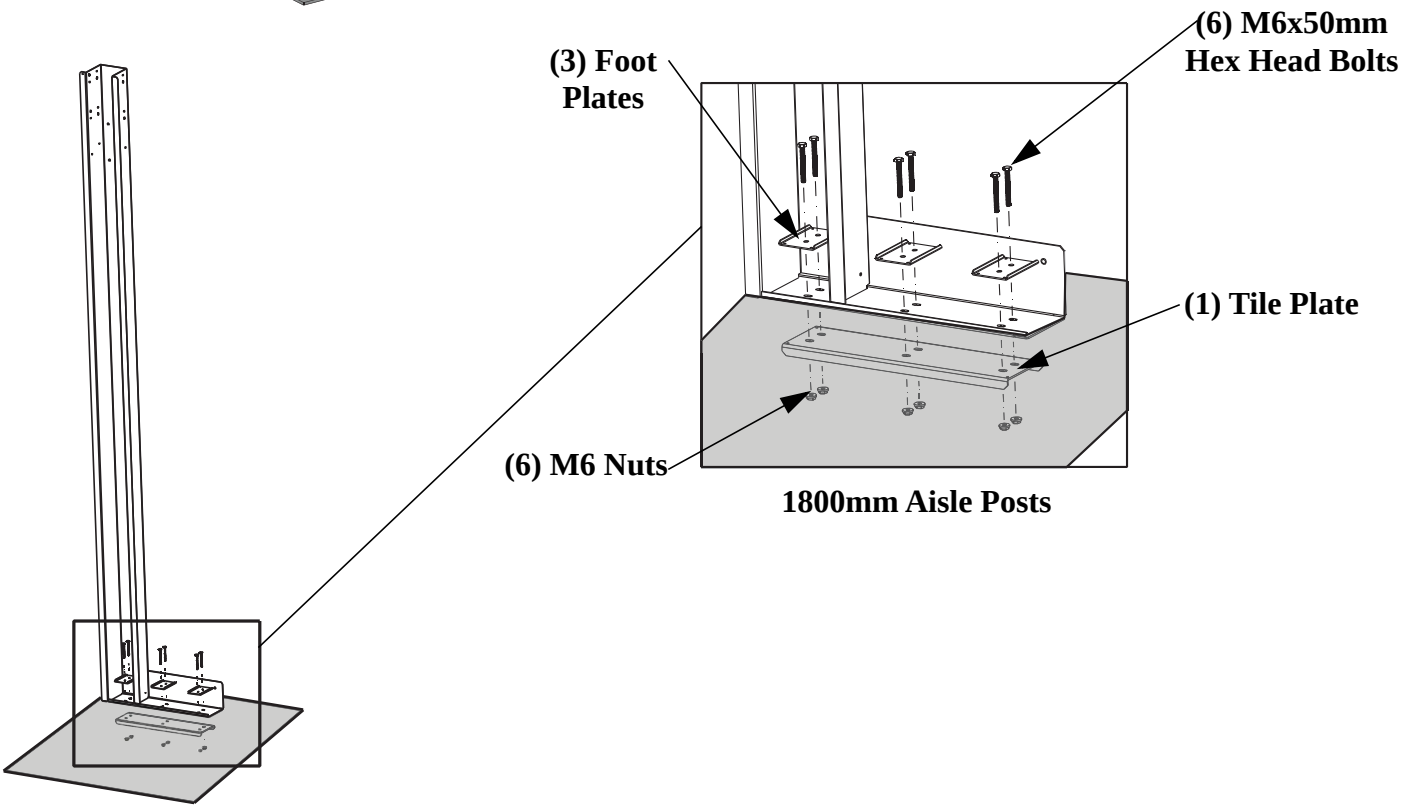

1800mm Aisle Posts

Install Post Foot Cover

- From the side, slide the foot cover over the post foot.
- Secure foot cover in place with (2) M5x10mm hex head screws.
- Repeat process for second post.

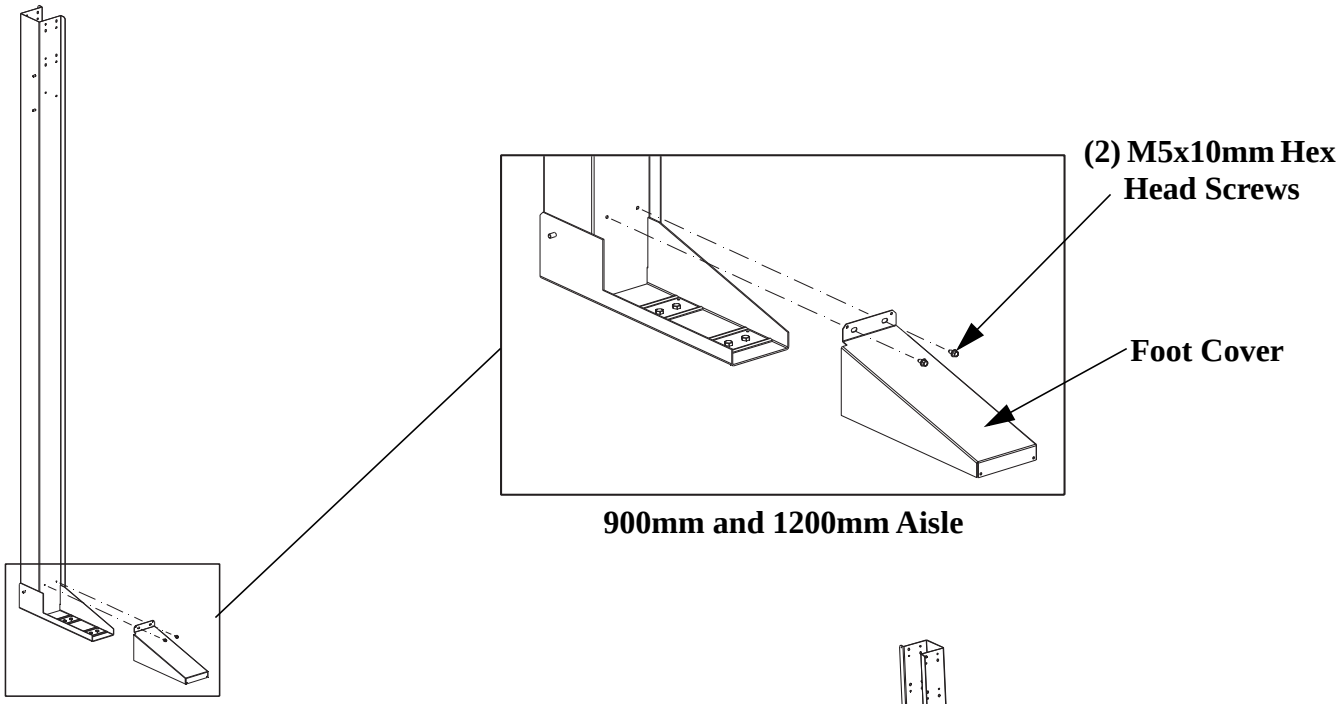

900mm and 1200mm Aisle

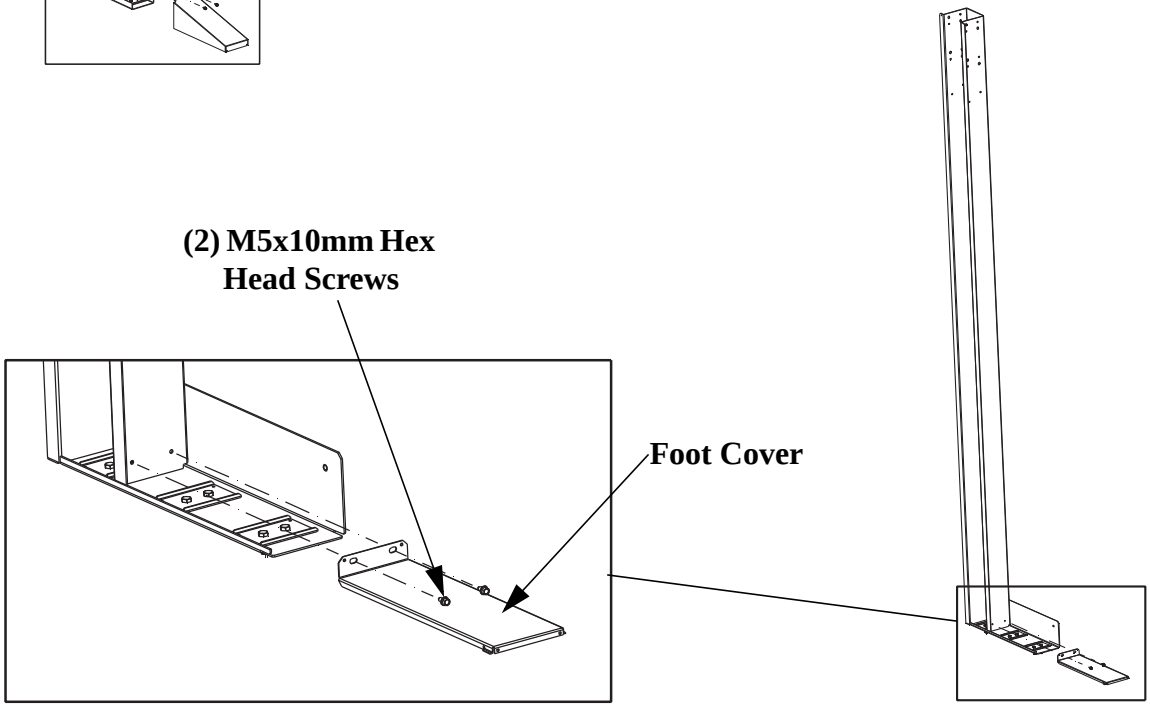

1800mm Aisle

Attaching End of Row Beam
(For 900mm and 1200mm Aisles, 42RU-45RU Set-Up Only)

- Attach an end of row beam to the (2) beam supports with (2) M6 nuts at each end.

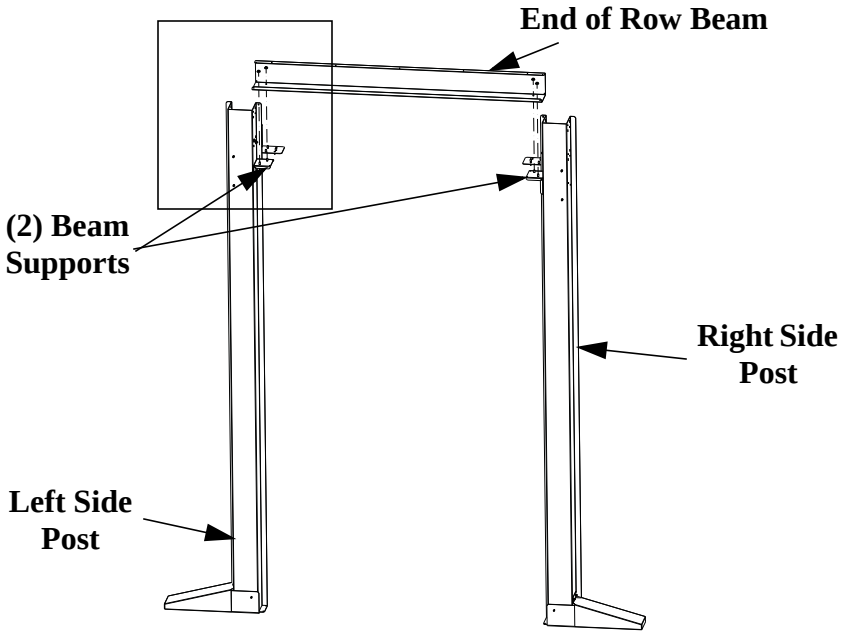

42RU Setup View

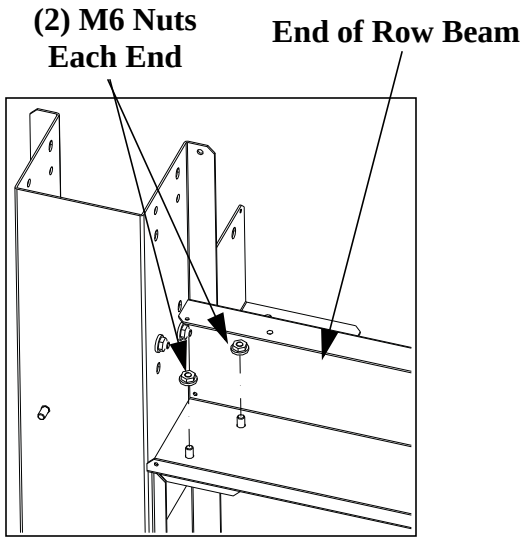

Detail View

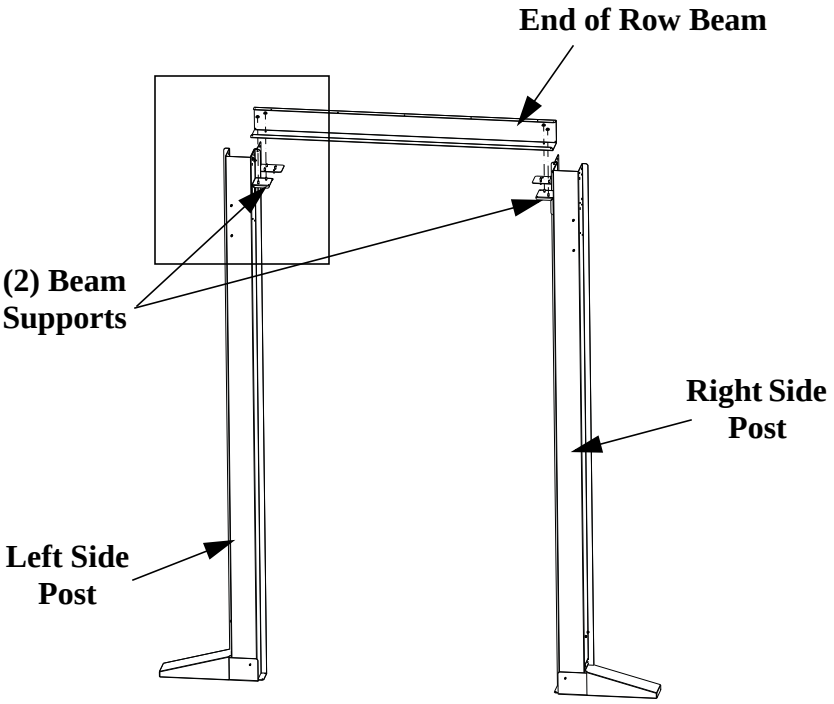

45RU Setup View

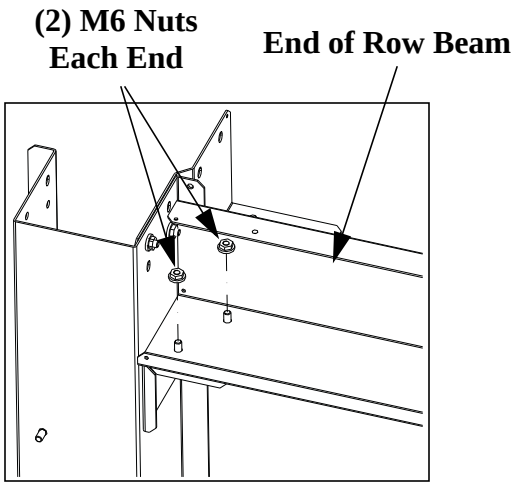

Detail View

Attaching End of Row Beam (For 900mm and 1200mm Aisles, 48RU-52RU Set-Up Only)

- Attach an end of row beam to the (2) end of beam support brackets with (4) M6 nuts.

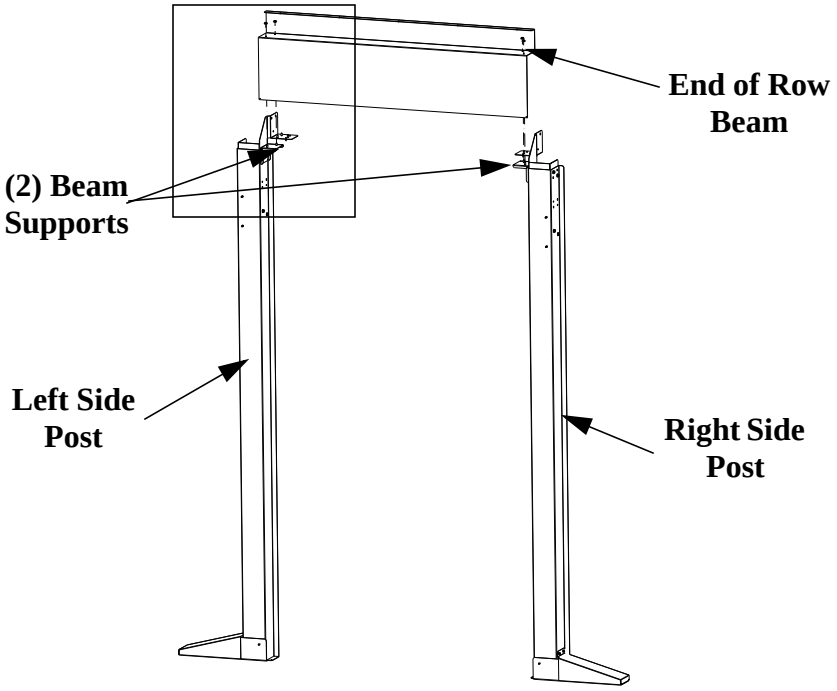

48RU Setup View

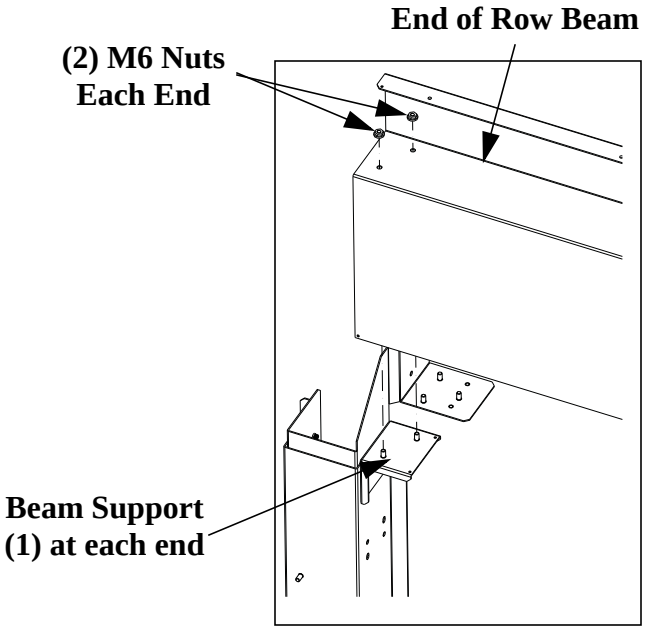

Detail View

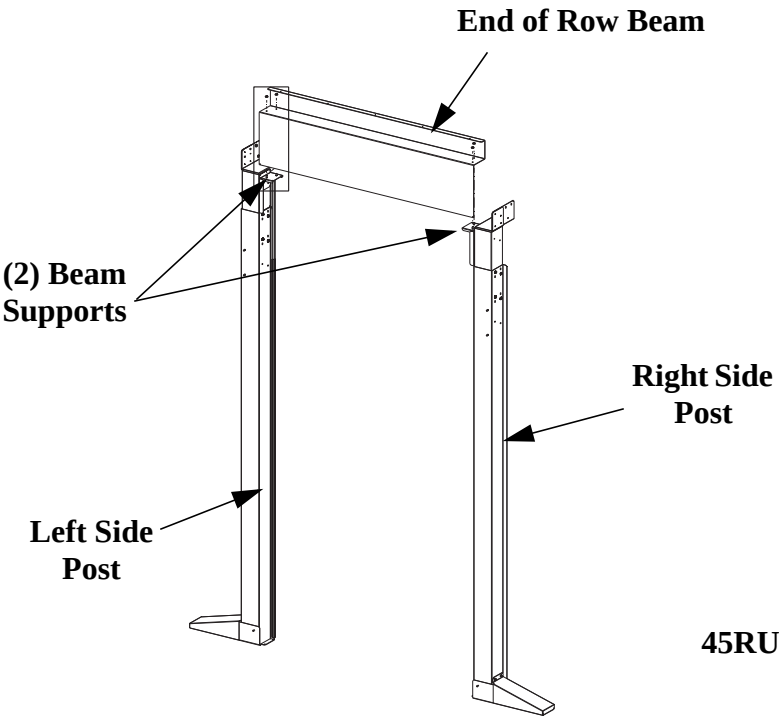

52RU Setup View

45RU Setup View

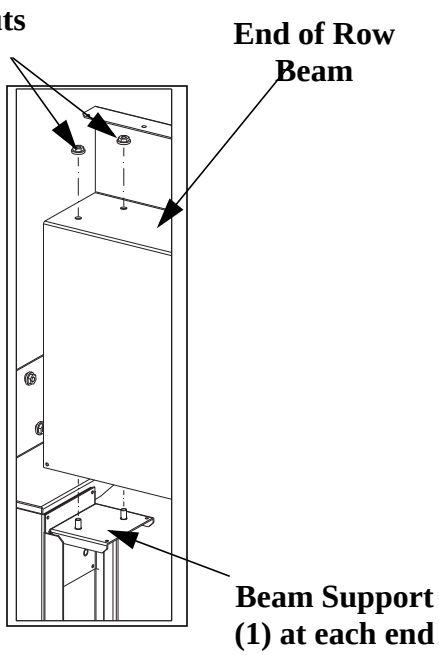

Detail View

Attaching End of Row Beam
(For 1800mm Aisles, 42RU-45RU Set-Up Only)

- Attach an end of row beam to the (2) beam supports with (2) M6 nuts at each end.

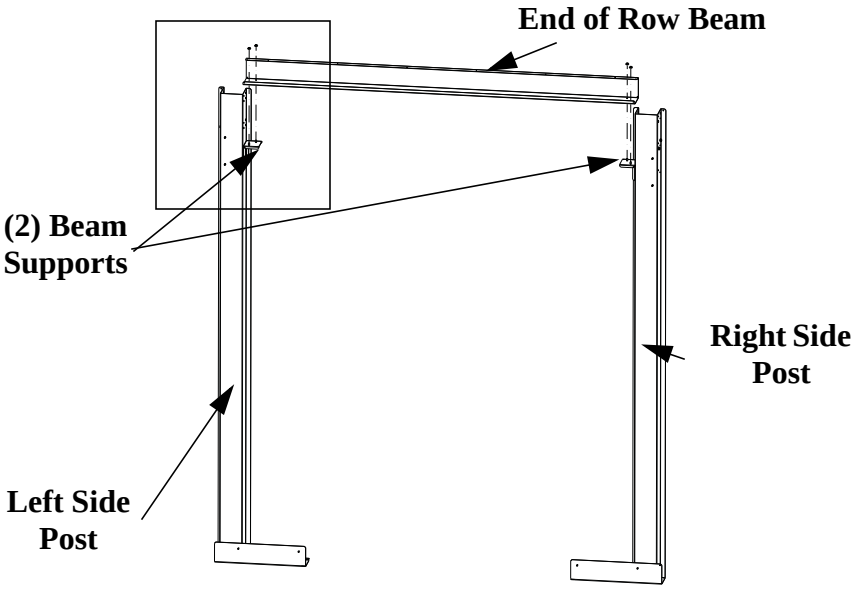

42RU Setup View

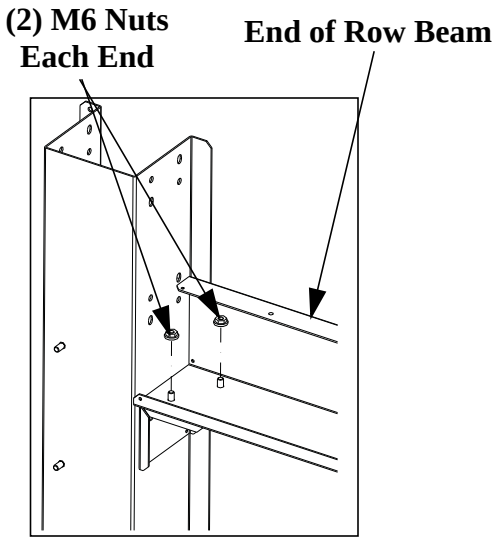

Detail View

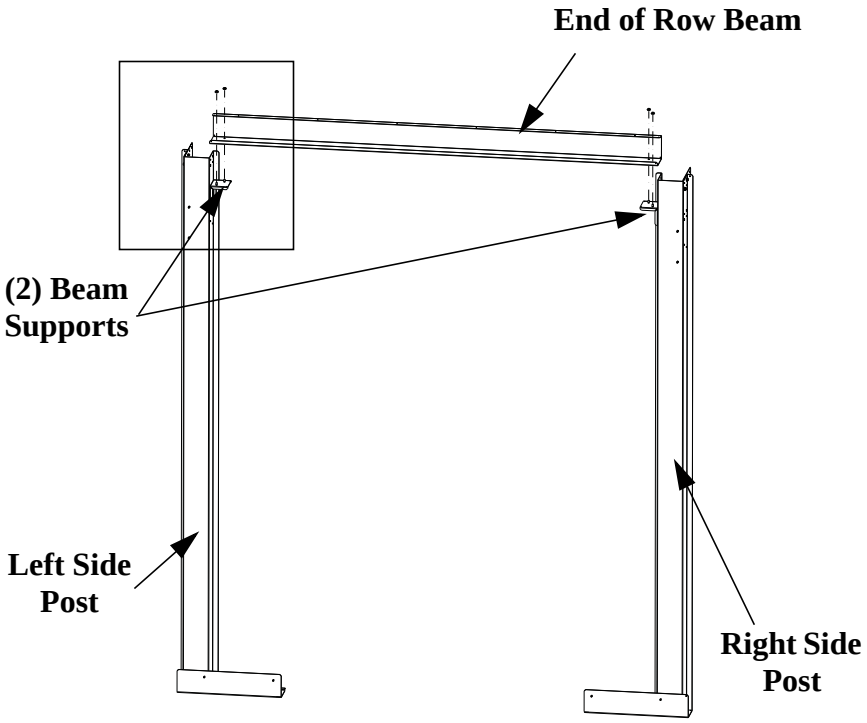

45RU Setup View

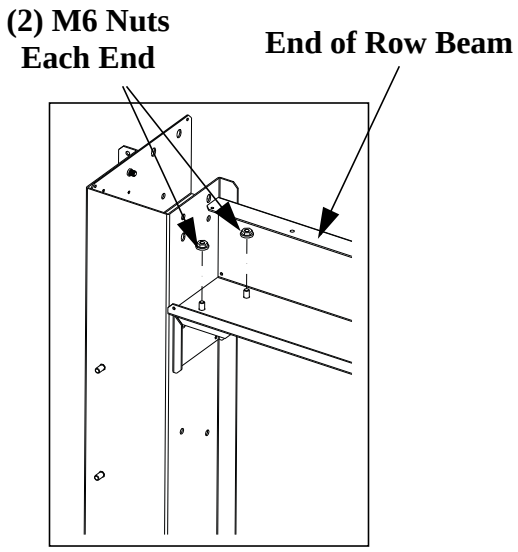

Detail View

Attaching End of Row Beam (For 1800mm Aisles, 48RU-52RU Set-Up Only)

- Attach an end of row beam to the (2) end of beam support brackets with (4) M6 nuts.

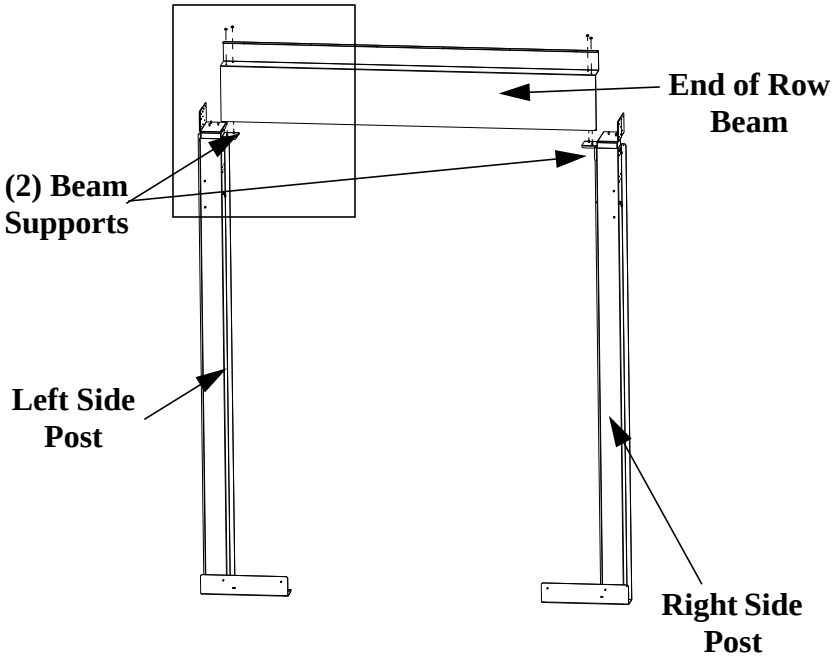

48RU Setup View

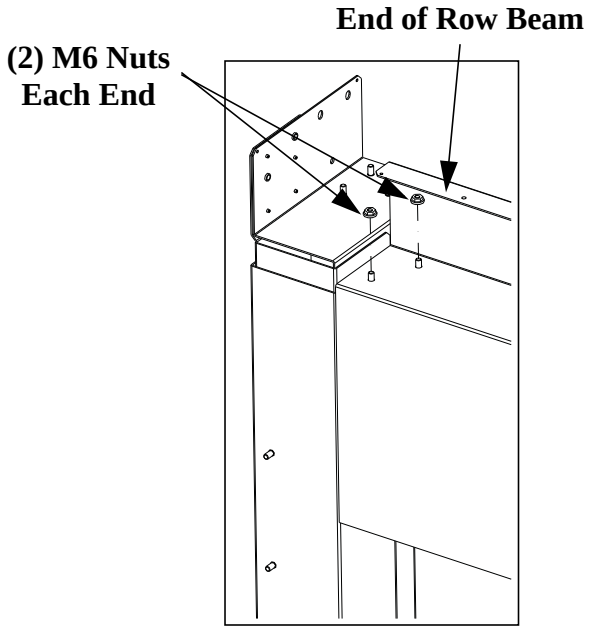

Detail View

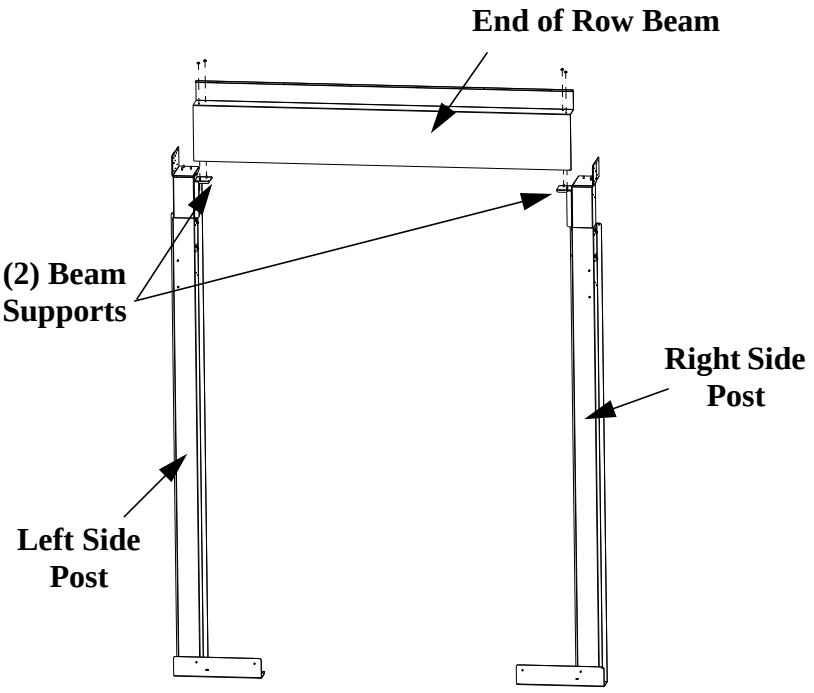

52RU Setup View

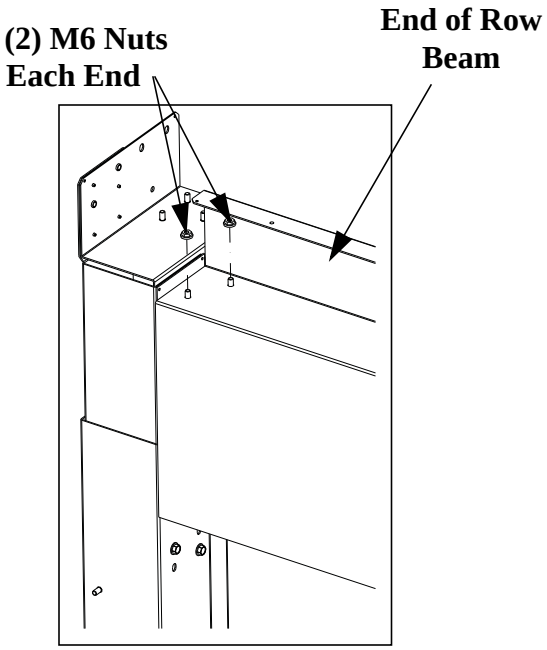

Detail View

Attaching Vertical Wall End of Row Beam (For Vertical Wall Set-Up Only)

- Attach a hot aisle containment end of row beam to the top of the end of row beam with (5) M5x10mm screws.

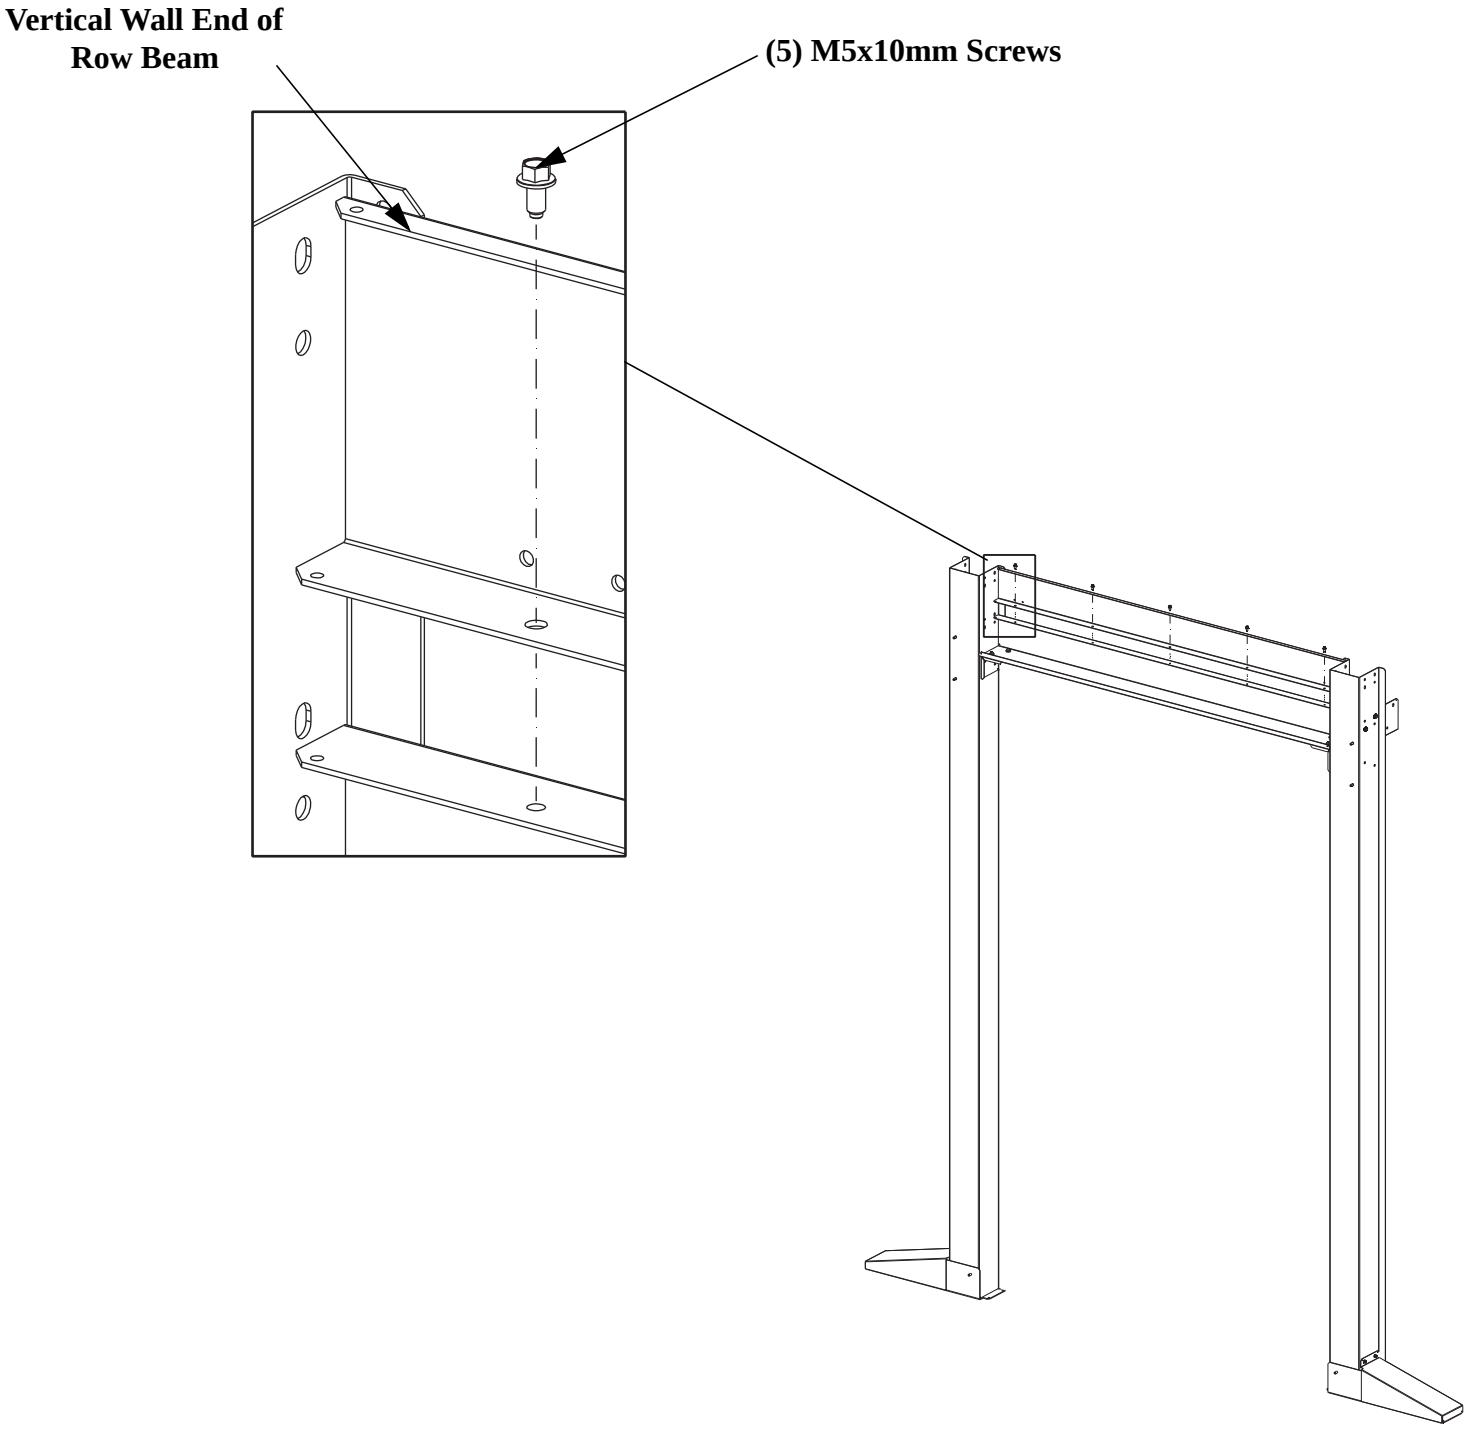

Front View-End of Row Frame

Applying Foam Seal to Vertical Wall End Beam (For Vertical Wall Set-Up Only)

- Apply (1) strip of foam seal along the top edge of the Vertical Wall end beam from one end to the other.

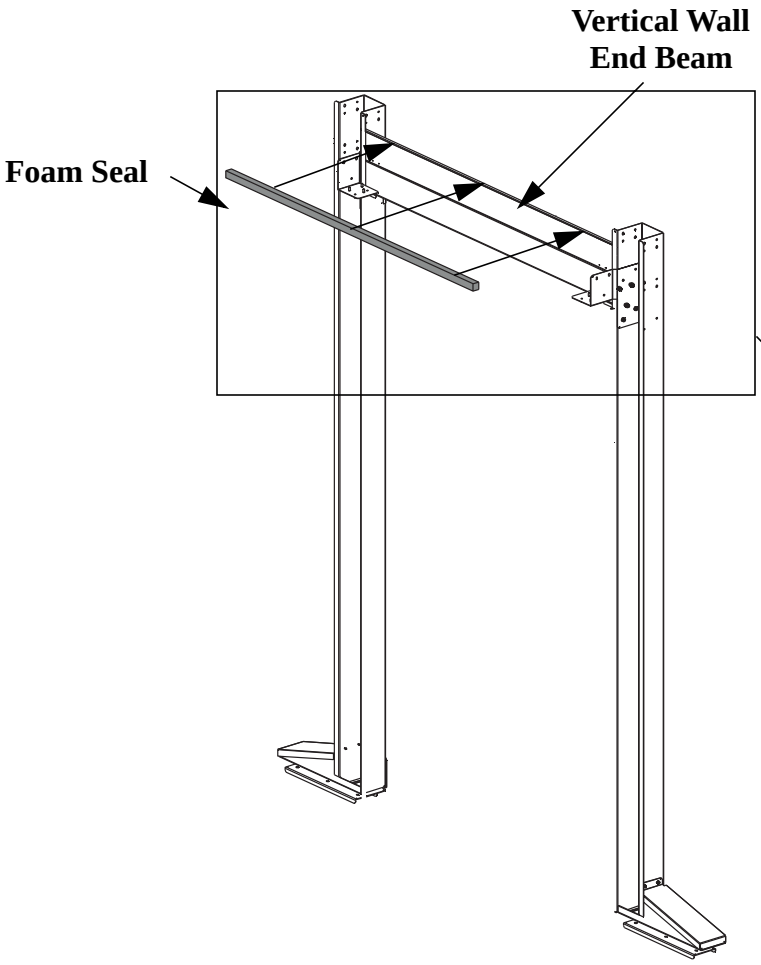

Rear View-End of Row Frame

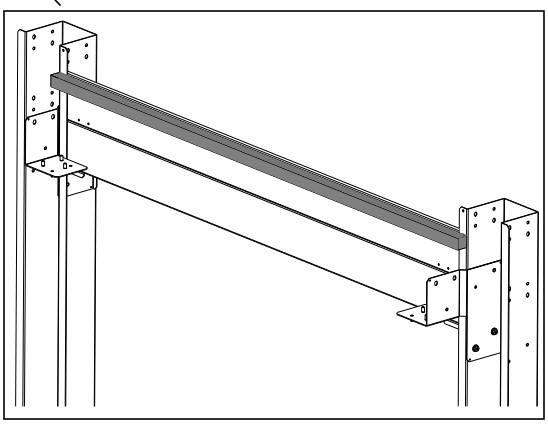

Detail View-Foam Attached

Attaching Support Hanger
(For 900mm Vertical Wall Set-Up Only)

- Place the left support hanger on top of the left hanger.
- Secure the left support hanger to the Vertical Wall end beam with (2) M5x10mm screws.
- Repeat process for right support hanger.

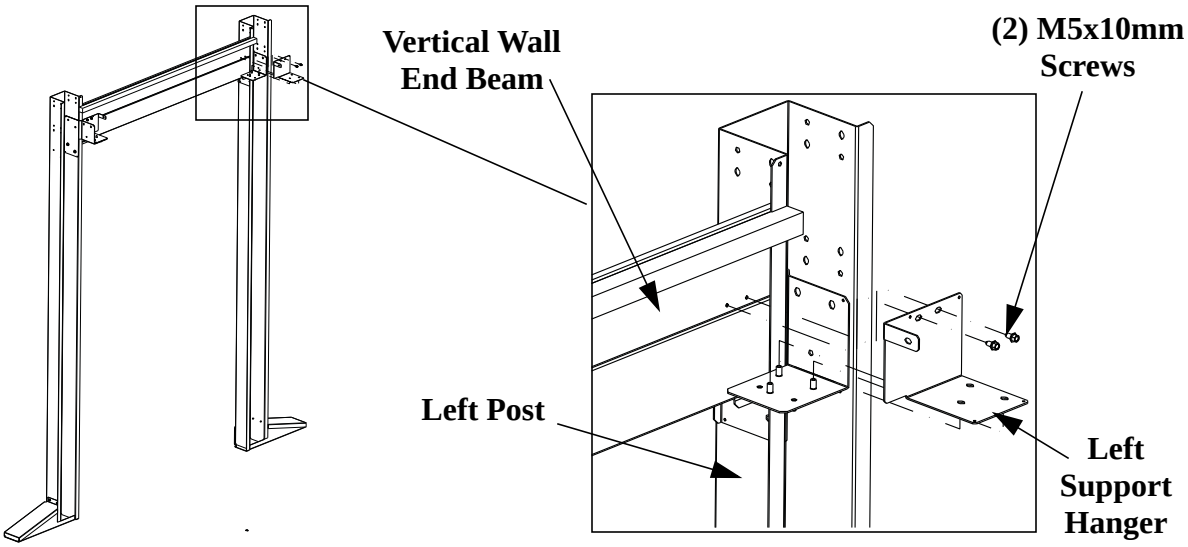

Rear View-End of Row Frame

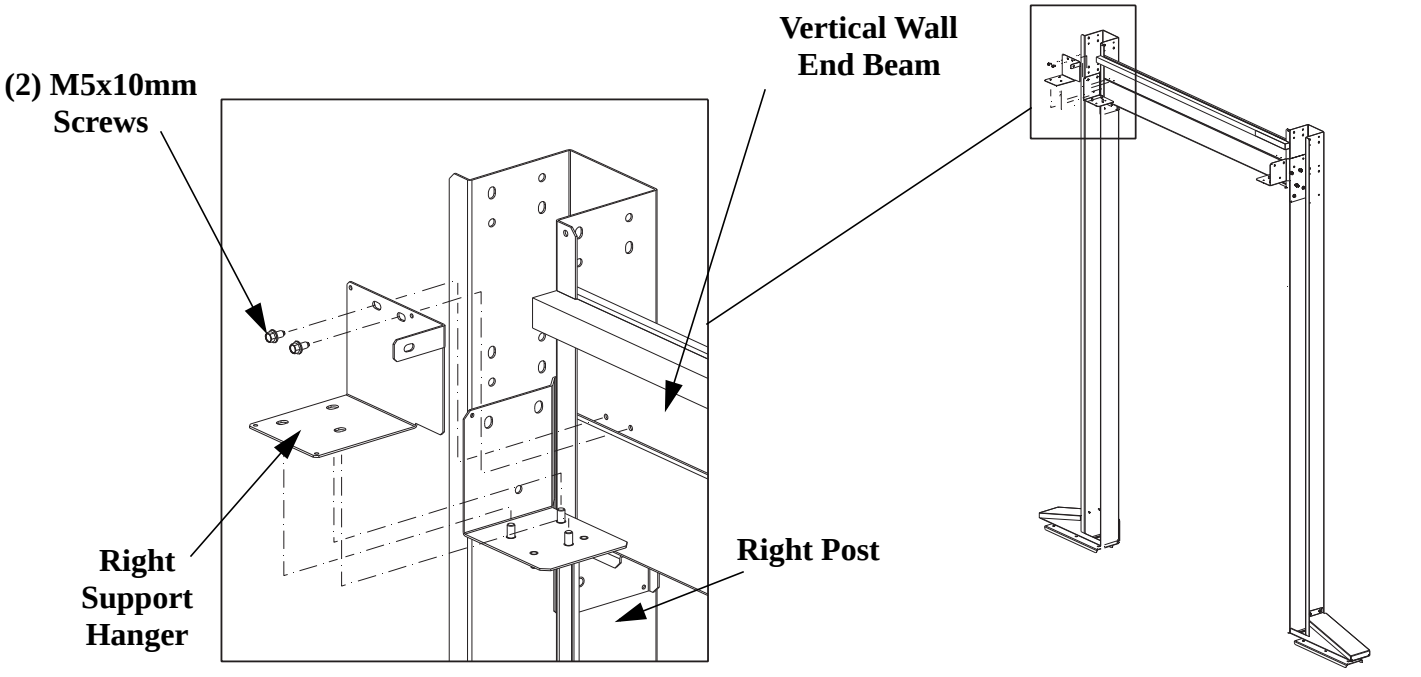

Rear View-End of Row Frame

Attaching Support Bracket
(For 1200mm Vertical Wall Set-Up Only)

- Attach (1) wall beam support bracket to each end of the Vertical Wall with (2) M5x10mm screws each.

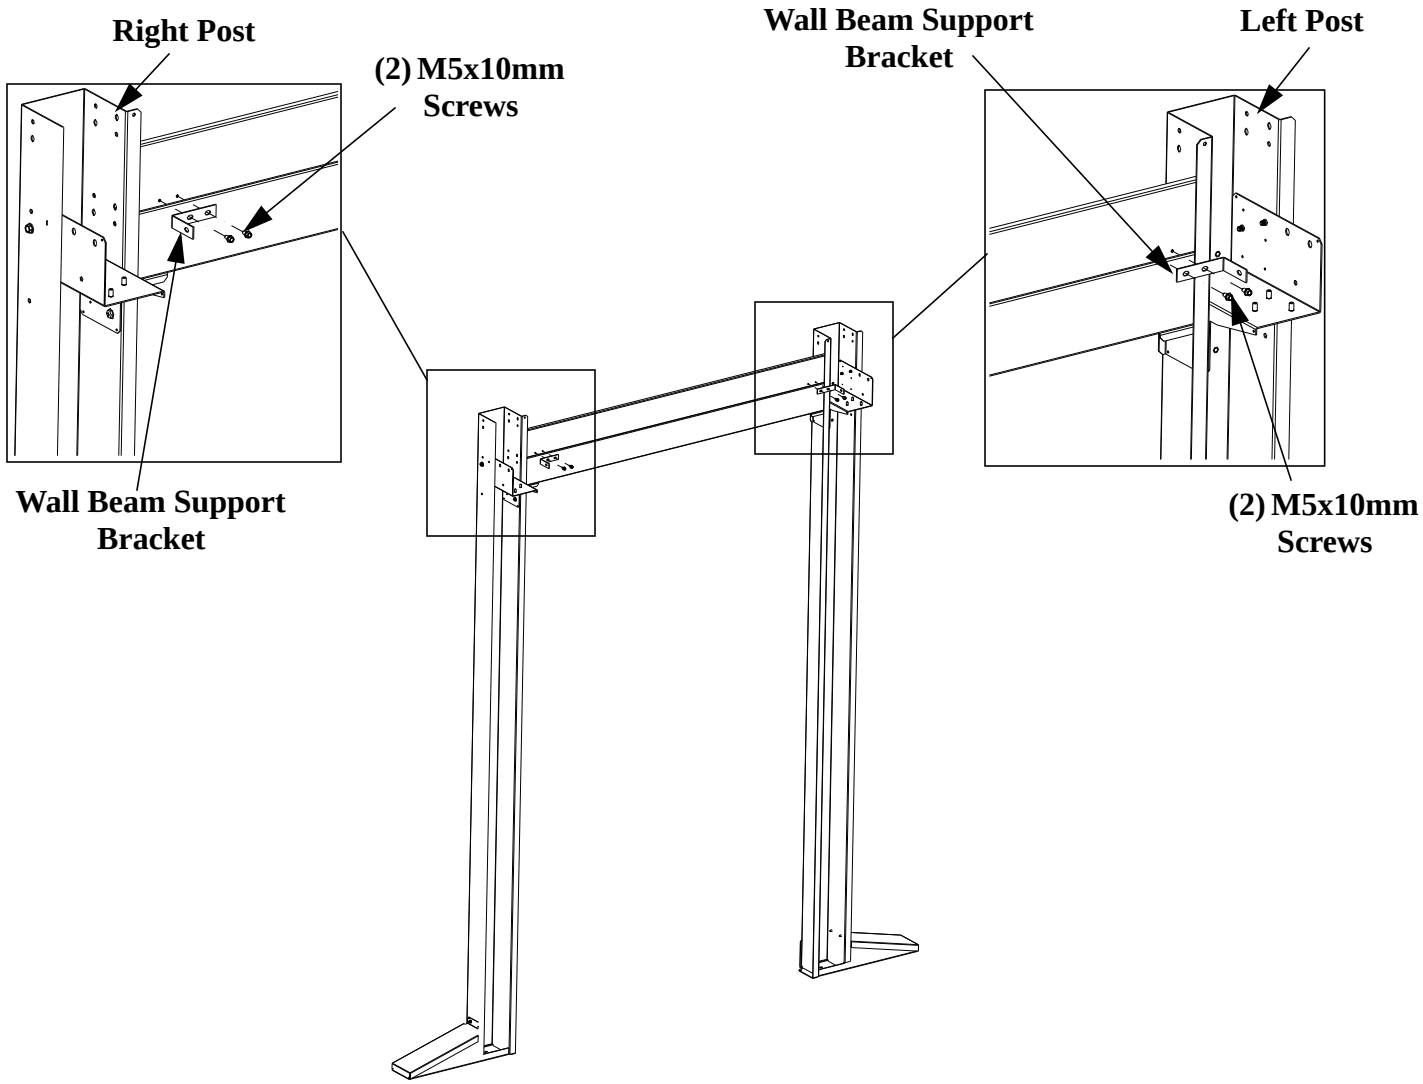

Rear View-End of Row Frame

Attaching Support Hanger (For 900mm Roofing Set-Up Only)

- Place the left support hanger on top of the left hanger.
- Secure the support hanger to the end of row beam with (1) M5x10mm screw.
- Repeat process for right support hanger.

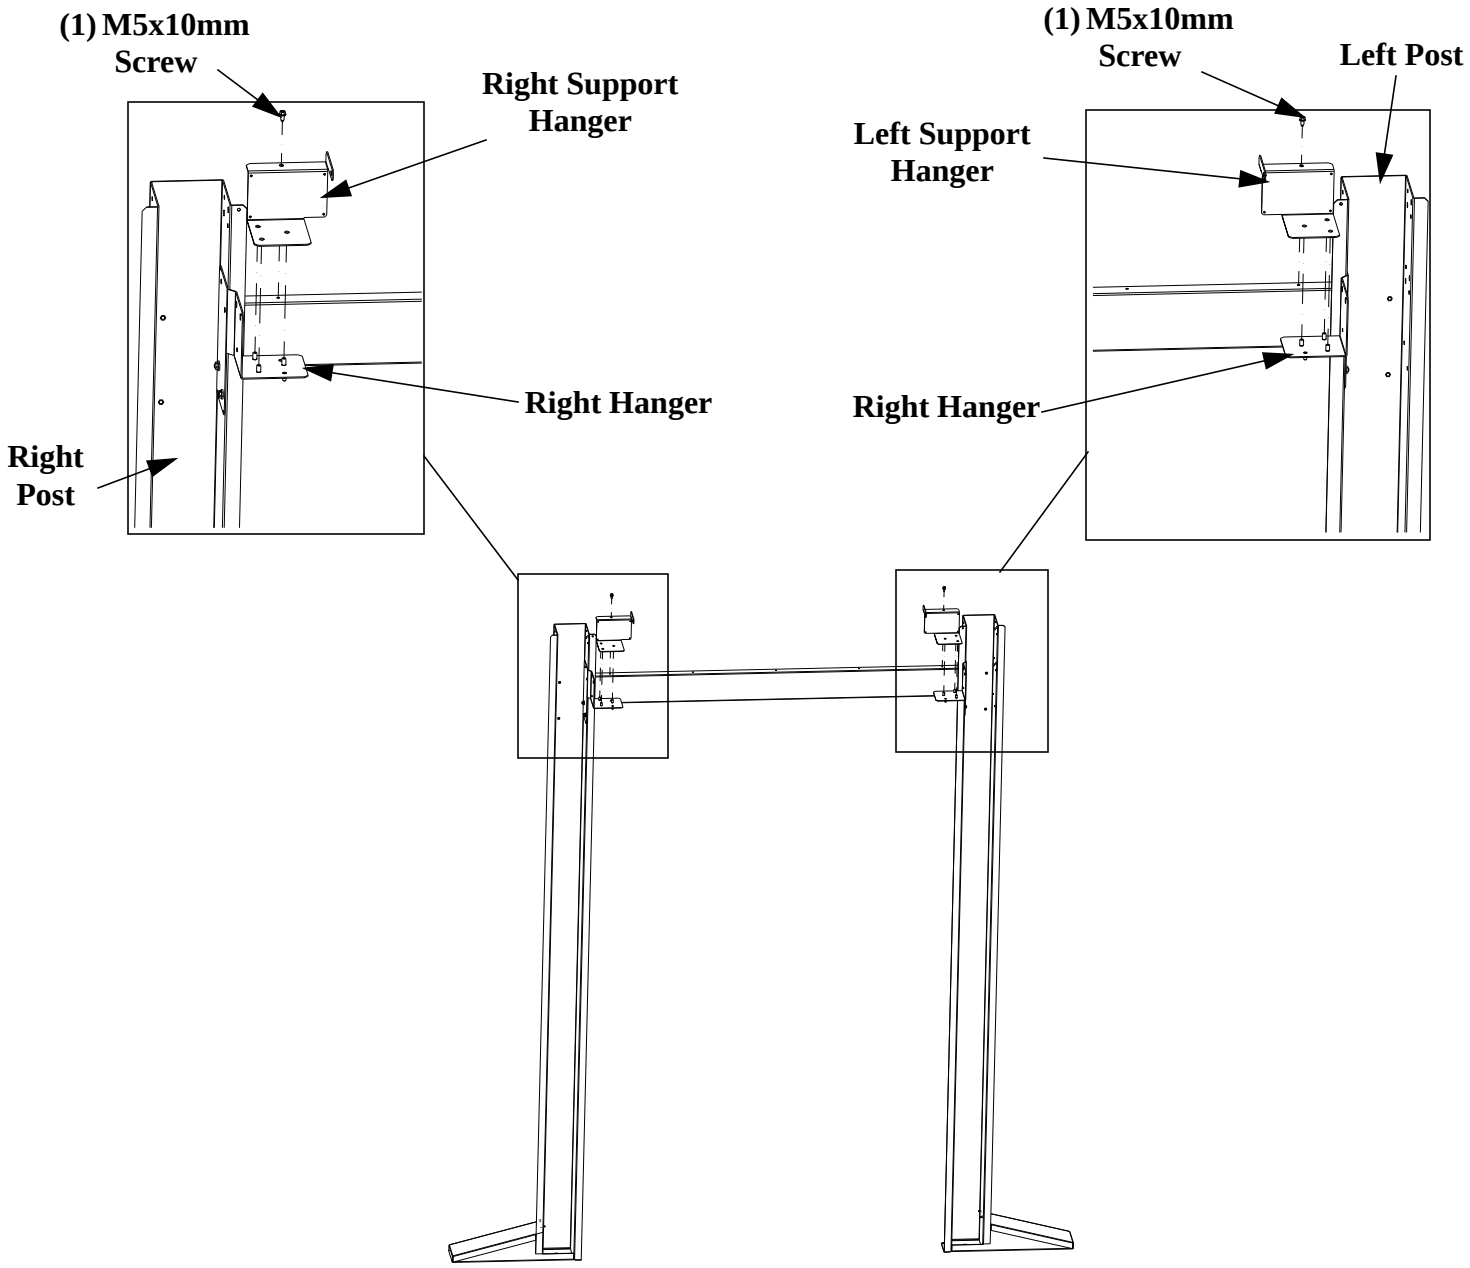

Rear View-End of Row Frame

Attaching Upper End Panel (For 900mm Aisle Only)

- Using (2) M5 nuts, attach an upper end panel to the bottom of the right side end of row beam support bracket.
- Repeat Process for left side end of row beam support bracket.

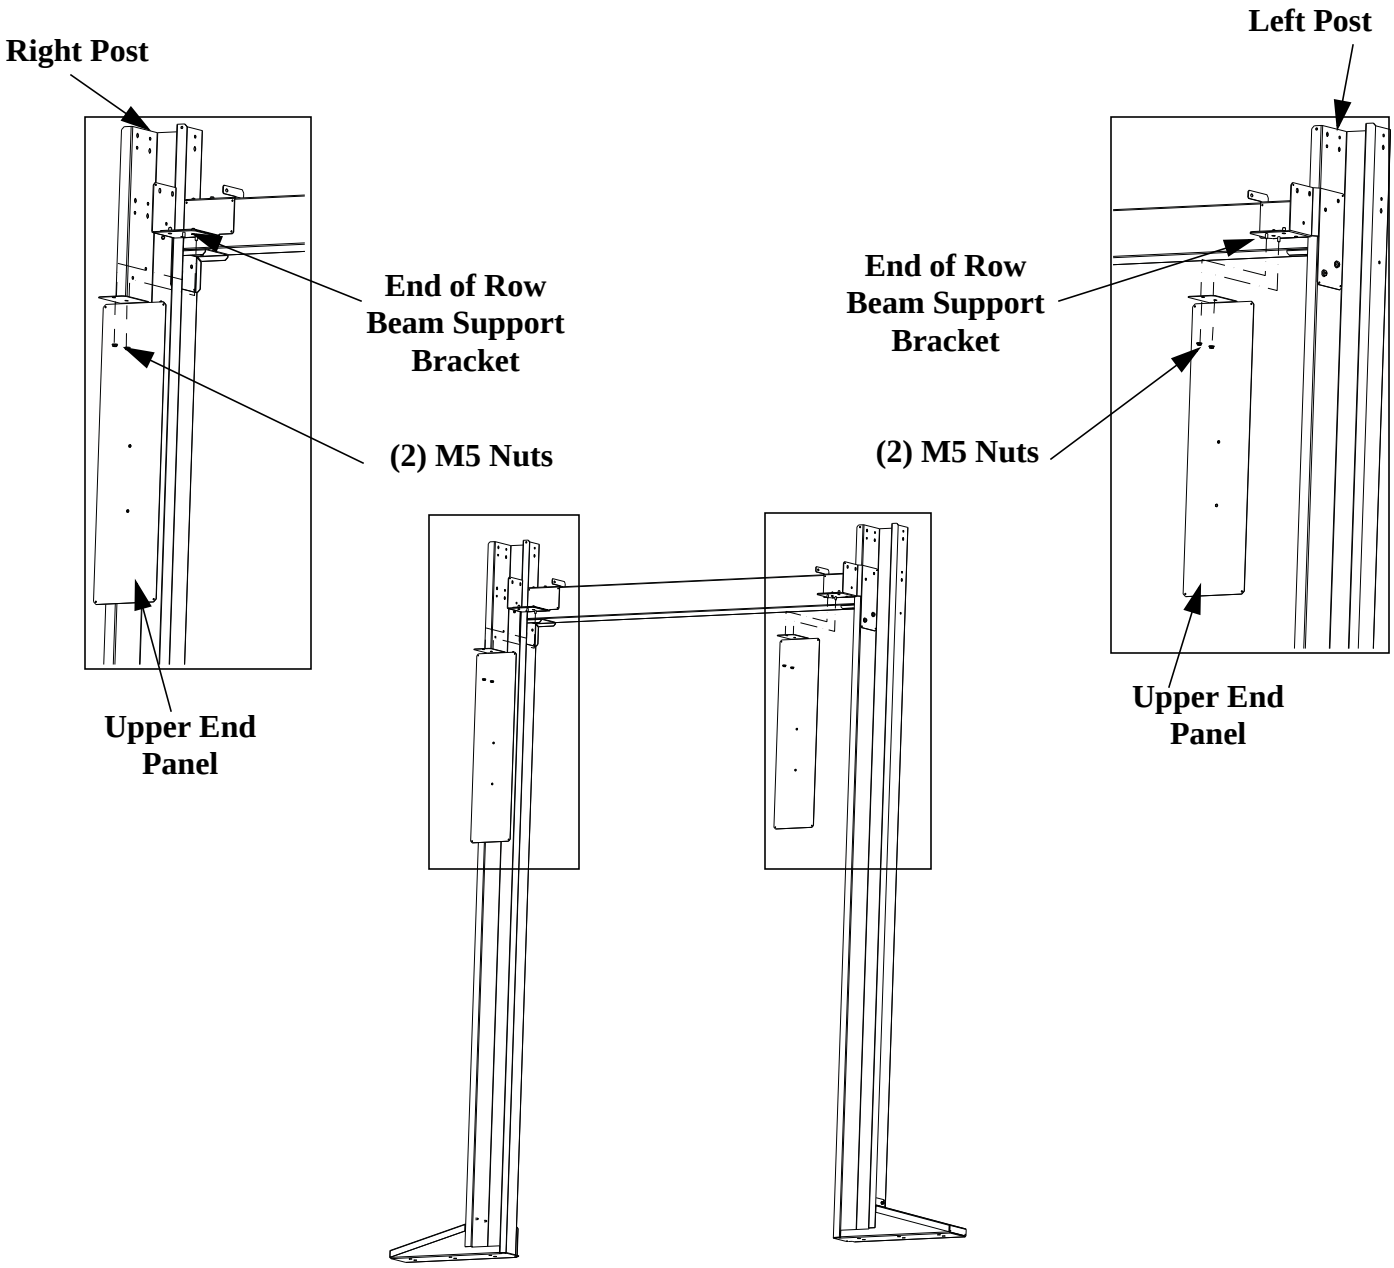

Rear View-End of Row Frame

Attaching Lower End Panel (For 900mm Aisle Only)

- Using (2) M5 nuts, attach a lower end panel to the upper end panel on left side of frame.
- Repeat process for right side.

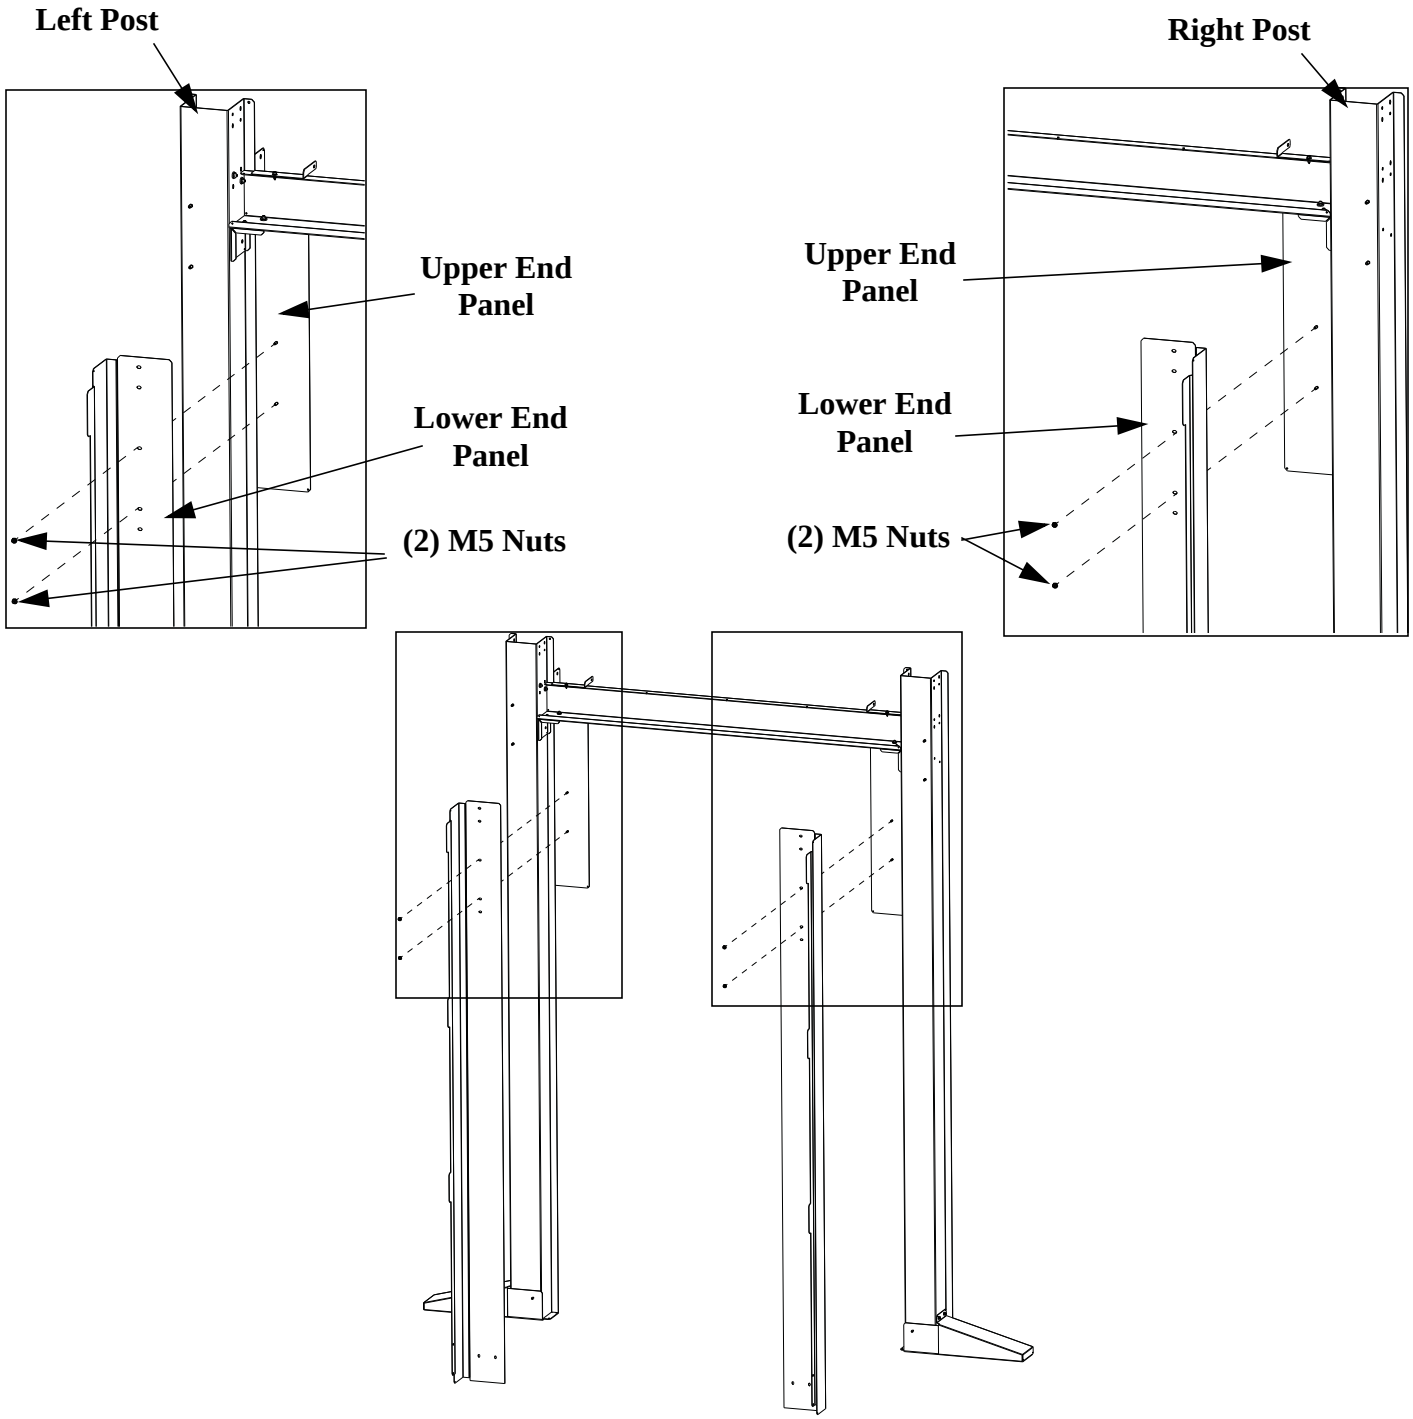

Front View-End of Row Frame

Attaching Lower End Panel Brace (For 900mm Aisle Only)

- Attach a lower end panel brace to the lower end panel with (2) M5 nuts making sure that the lower end panel brace wraps around the post.
- Repeat process for left side.

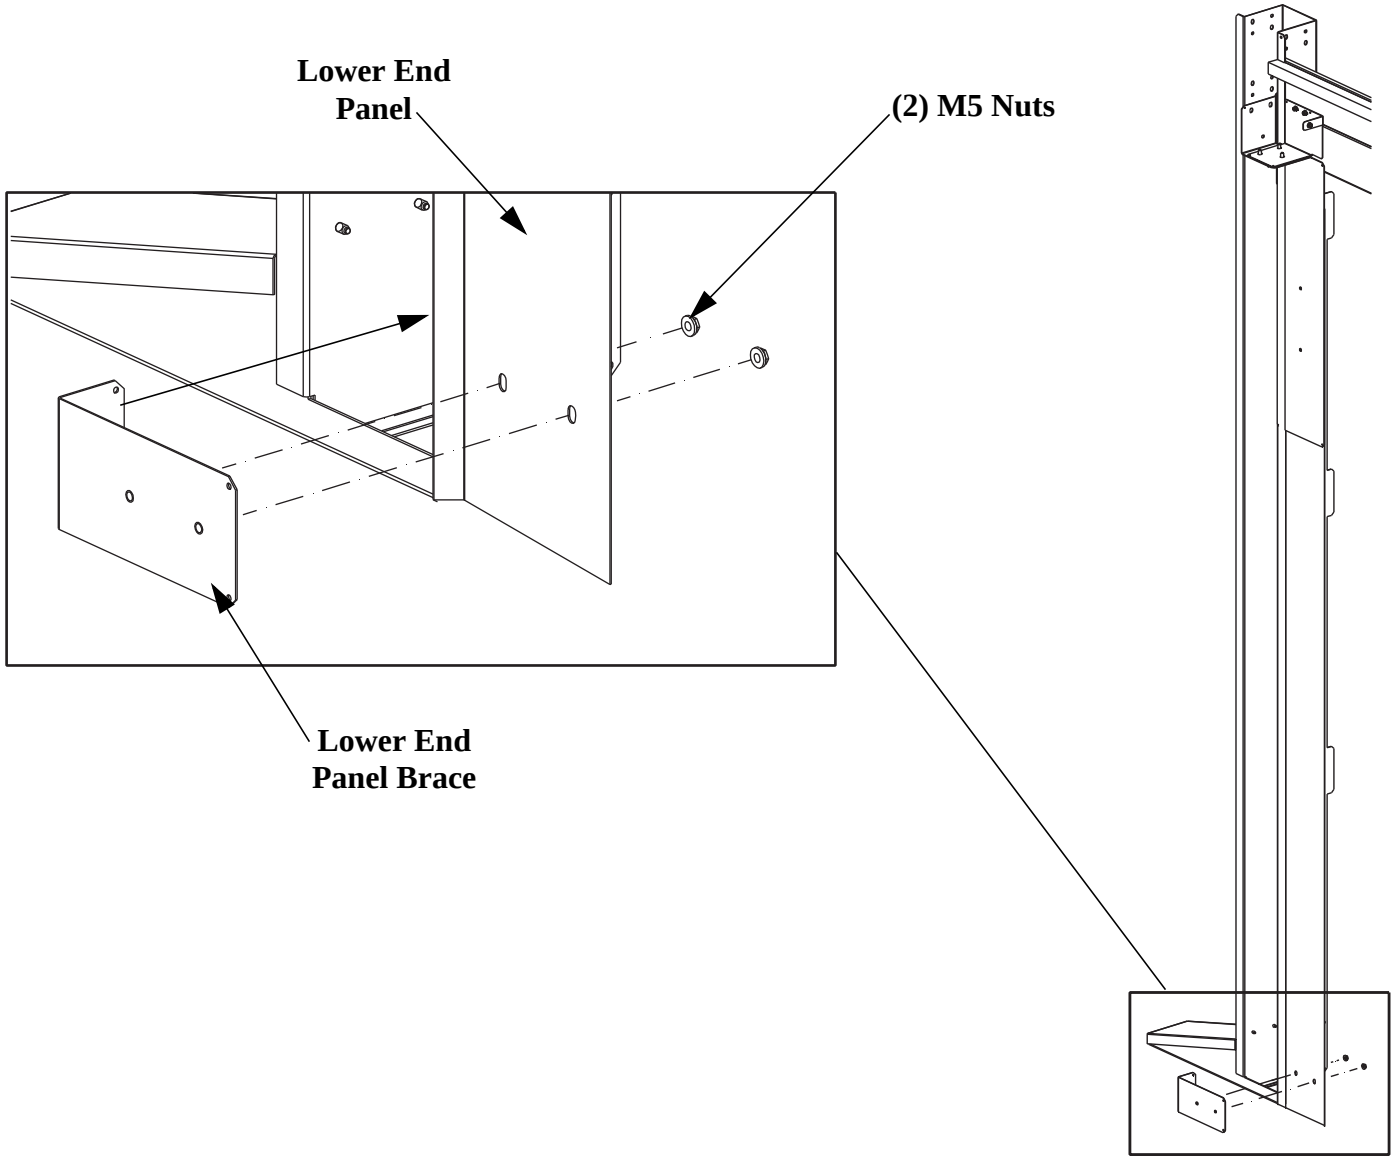

• Grounding the End-of-Row Frame

• The end-of-row frame can be grounded at either the top or bottom of the vertical posts. A common bonding network (CBN) jumper kit can be attached to any of the points noted below.

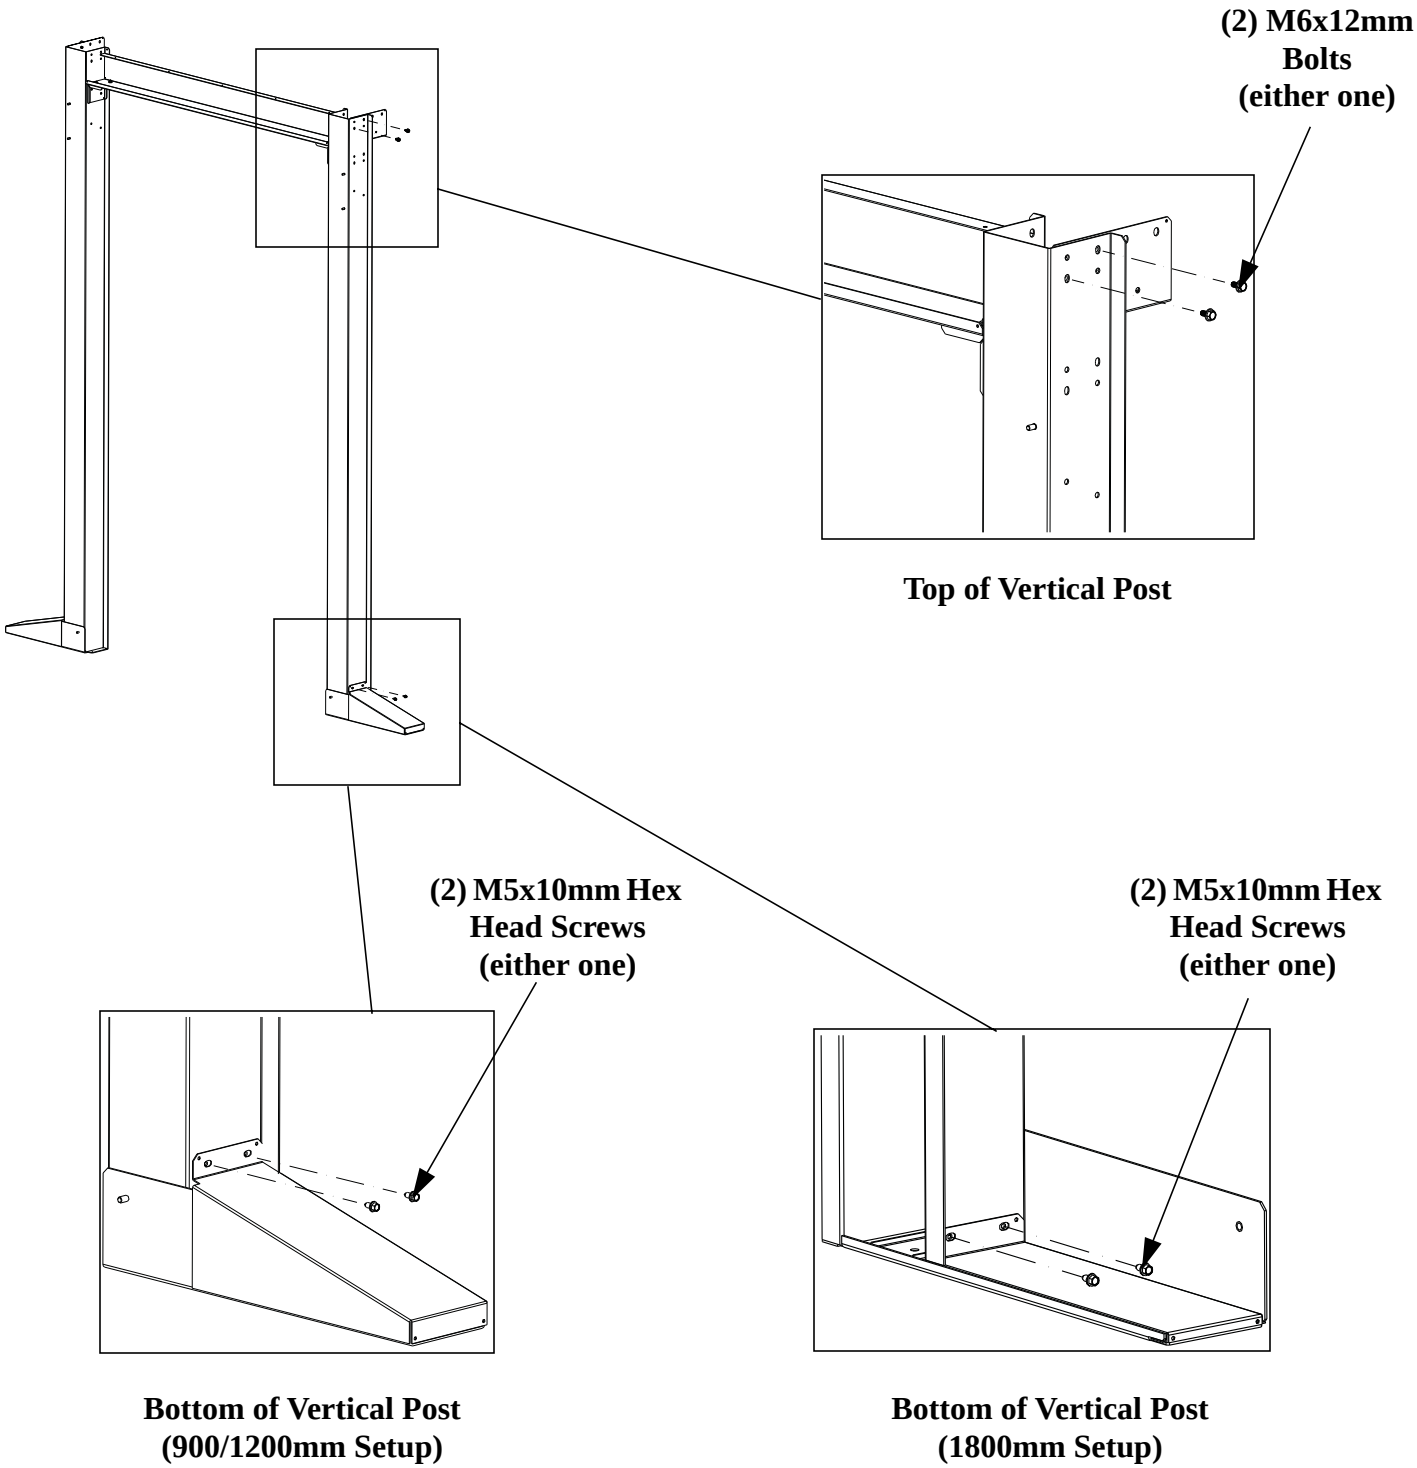

SECTION 2

INSTALLATION OF WALL BEAM, MID-SPAN SUPPORT POST AND MID-SPAN CABINET SUPPORT



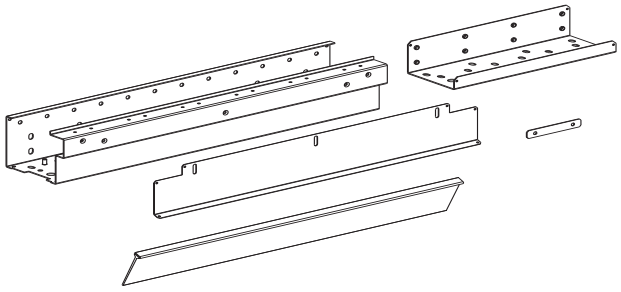



Aligning Wall Beams

- Place the required number of wall beams next to each other, end to end.
- Ensure that wall beams are matching lengths on both sides of the aisle.
- i.e. 600mm wall beam across from 600mm beam; 2400mm wall beam across from 2400mm beam, etc.

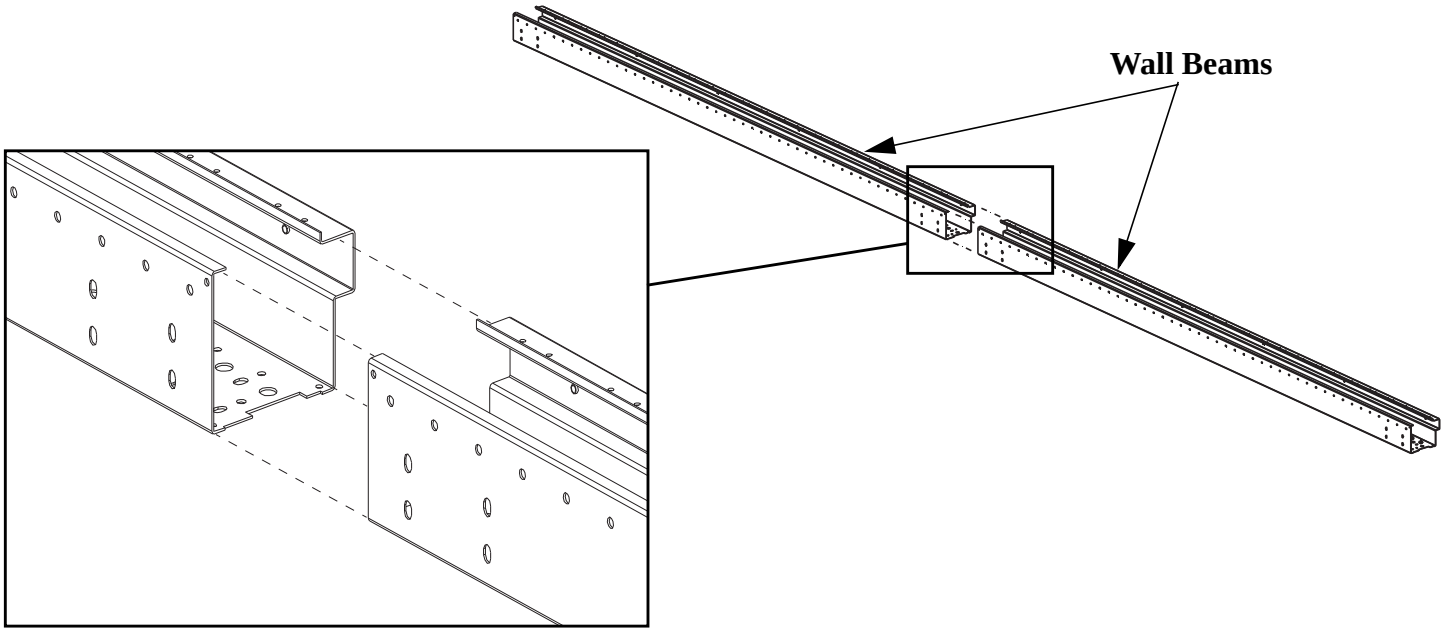

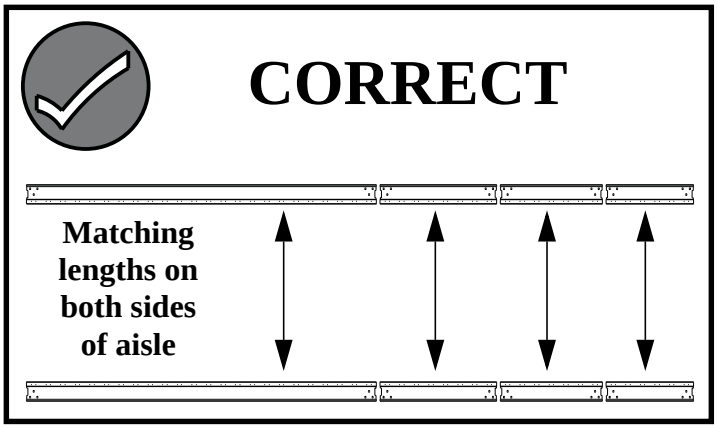

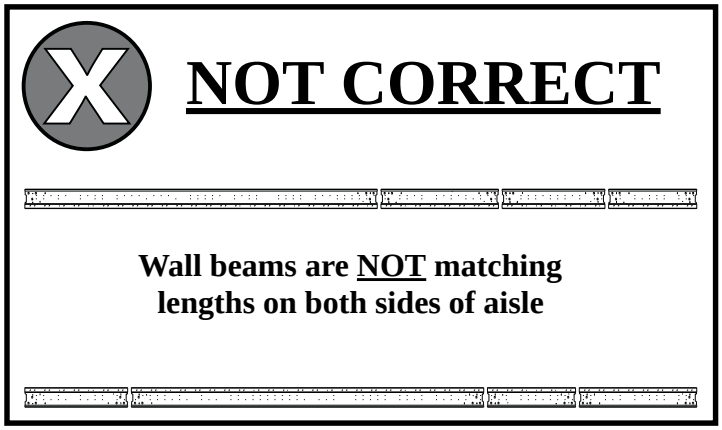

Attaching Wall Beam Connector

- Place the wall beam connector in between (2) wall beams so that the (8) studs pass through the wall beam connector.
- Fasten the wall beam connector to the (2) wall beams with (8) M6x12mm bolts.
- Secure the wall beam connector in place with (8) M6 hex nuts.

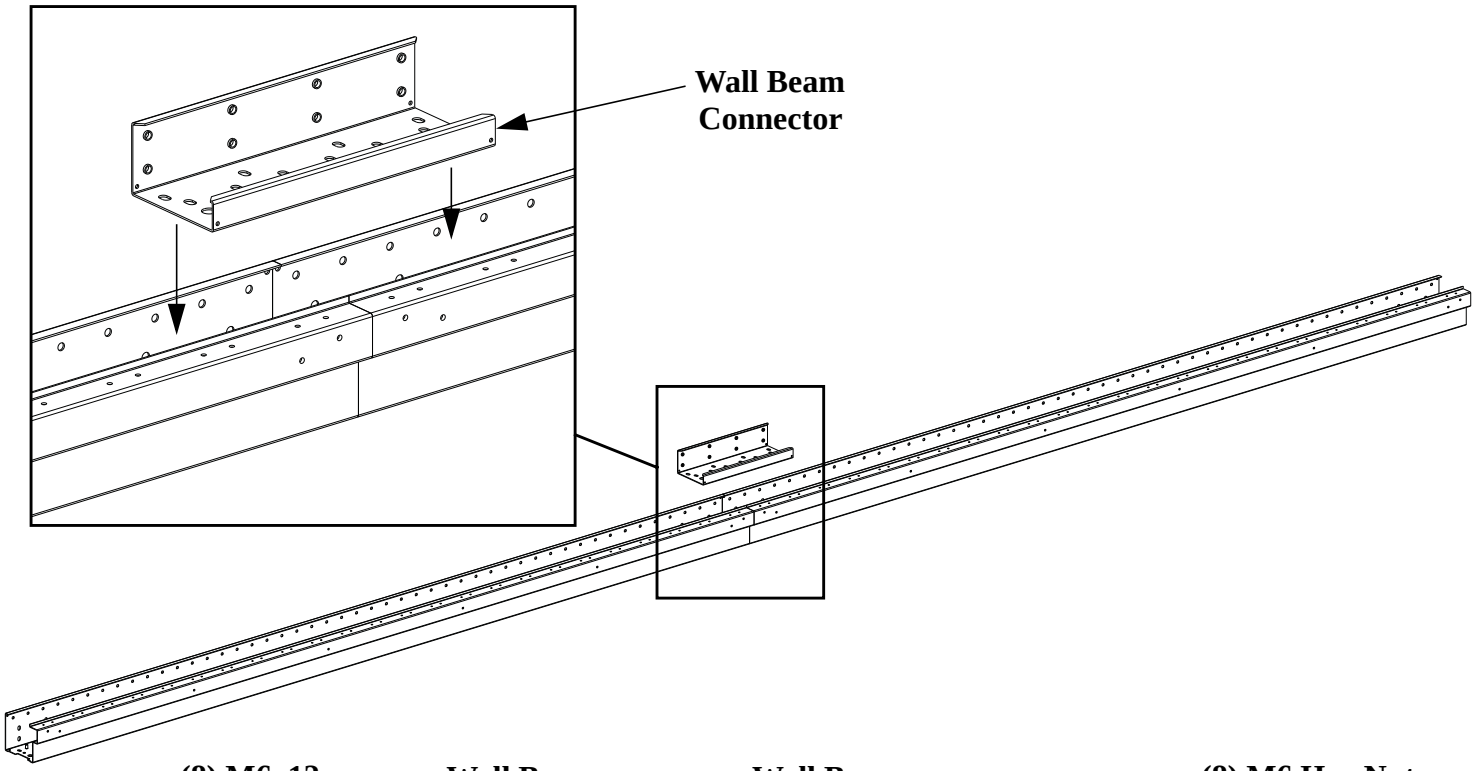

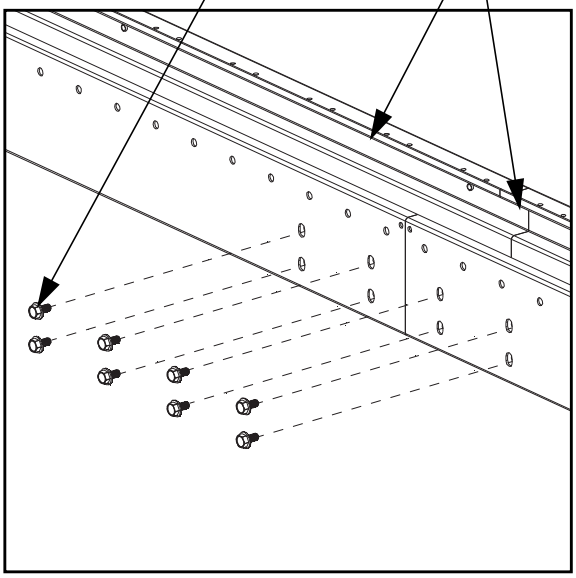

VIEW SHOWS BACK OF WALL BEAMS

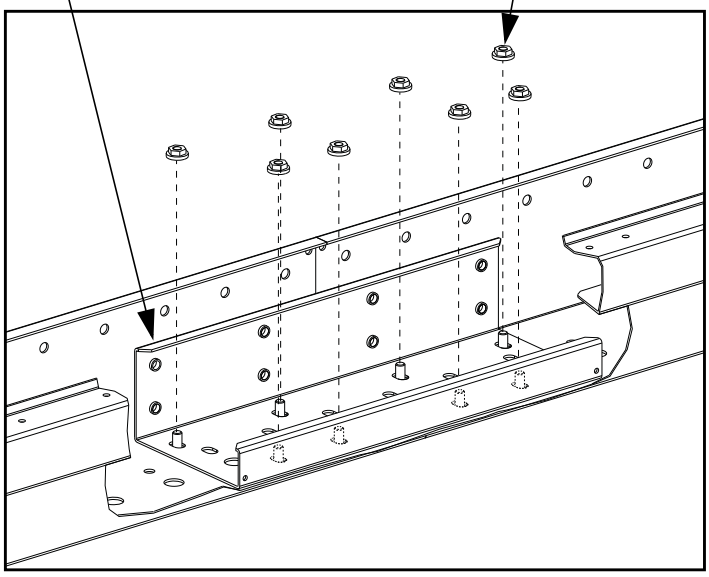

PORTIONS OF WALL BEAMS HAVE BEEN CUT AWAY TO ENHANCE VIEW

Attaching Wall Beam Ganging Bracket

- Attach (1) wall beam ganging bracket in between every pair of wall beams with (2) M5x12mm button head screws.

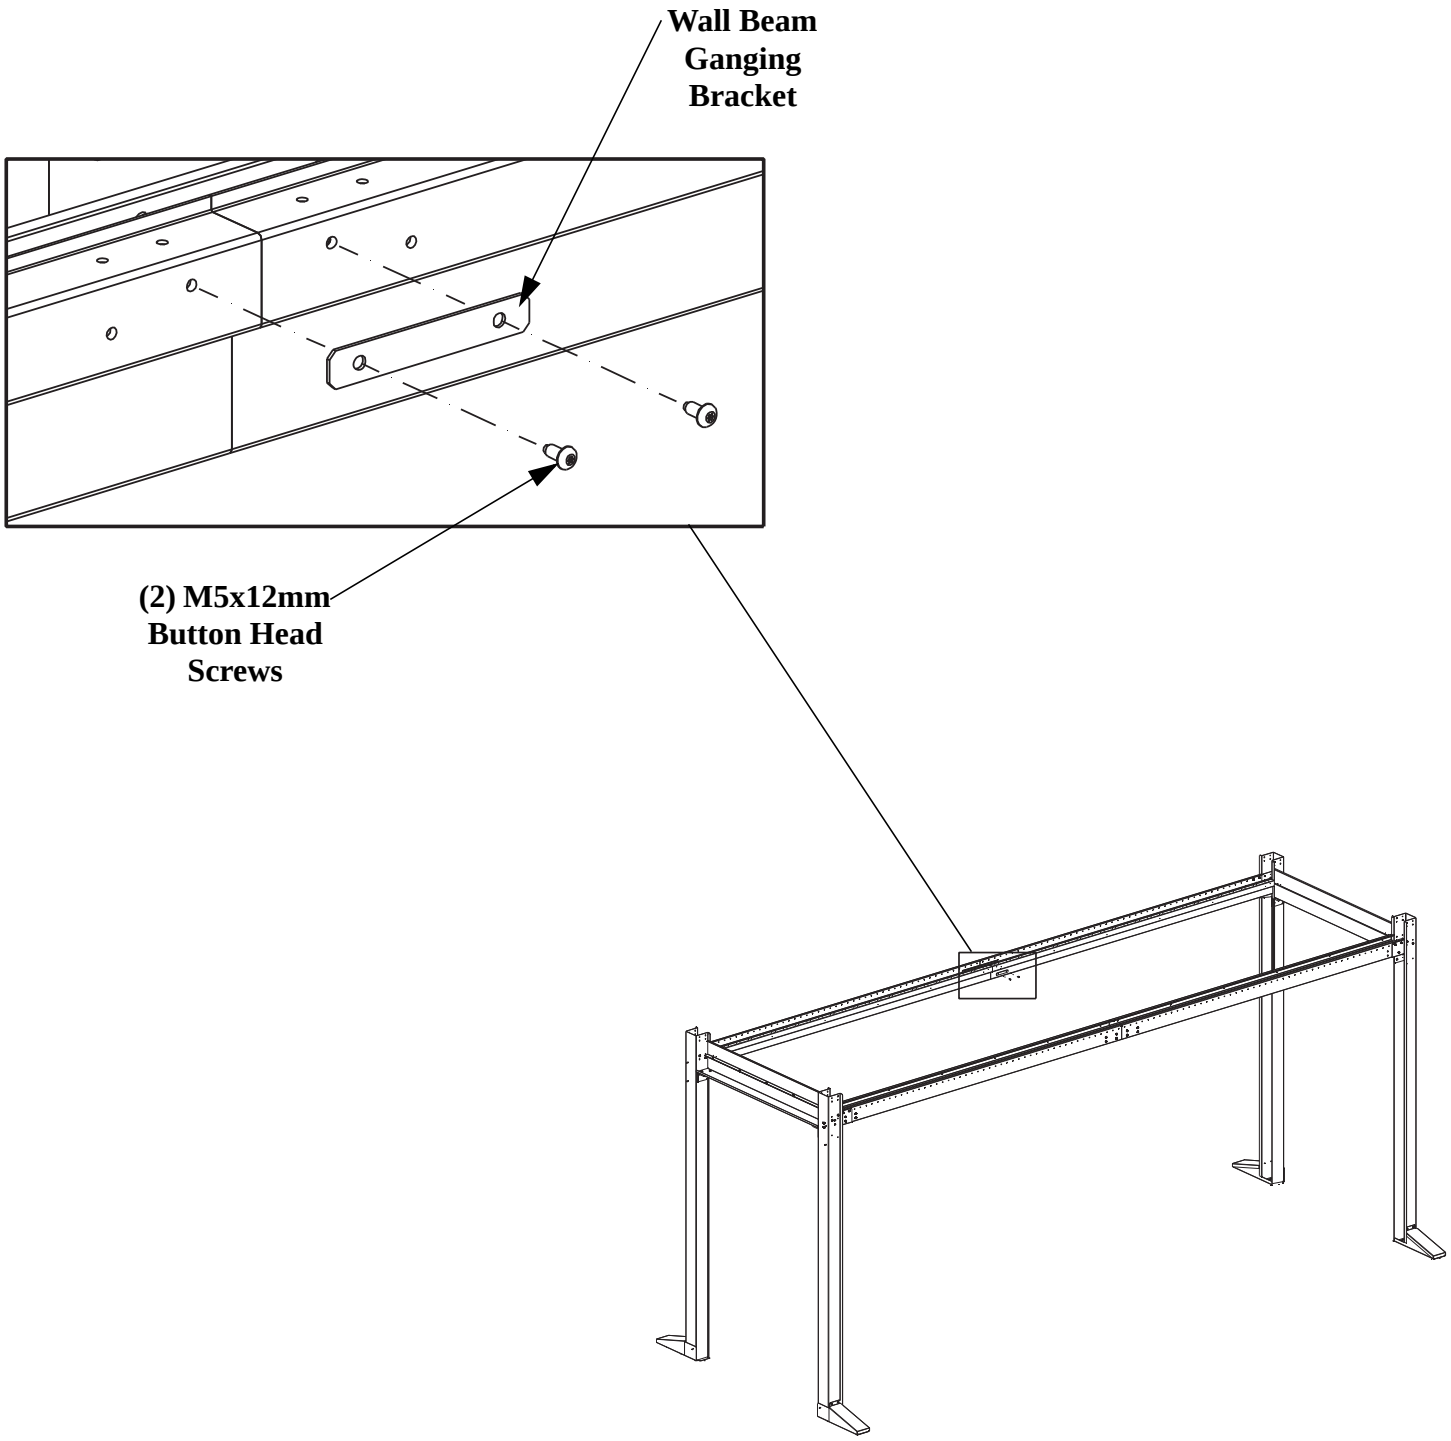

Mid-Span Support for Wall Beams

- Panduit recommends a mid-span support every 3,600mm (11.8’). The maximum distance without a mid-span support is 4,800mm (16’).
- Wall beams can be supported using any of the following:
  --Mid-span cabinet support
  --Threaded rod suspended from the ceiling
  --Mid-span support post

Supporting Wall Beams using Mid-Span Cabinet Support

- Thread the mid-span cabinet support rod through a M12 hex nut, a 1/2" washer, the wall beam, then through another 1/2" washer, M12 hex nut and finally into the swiveling level mount.

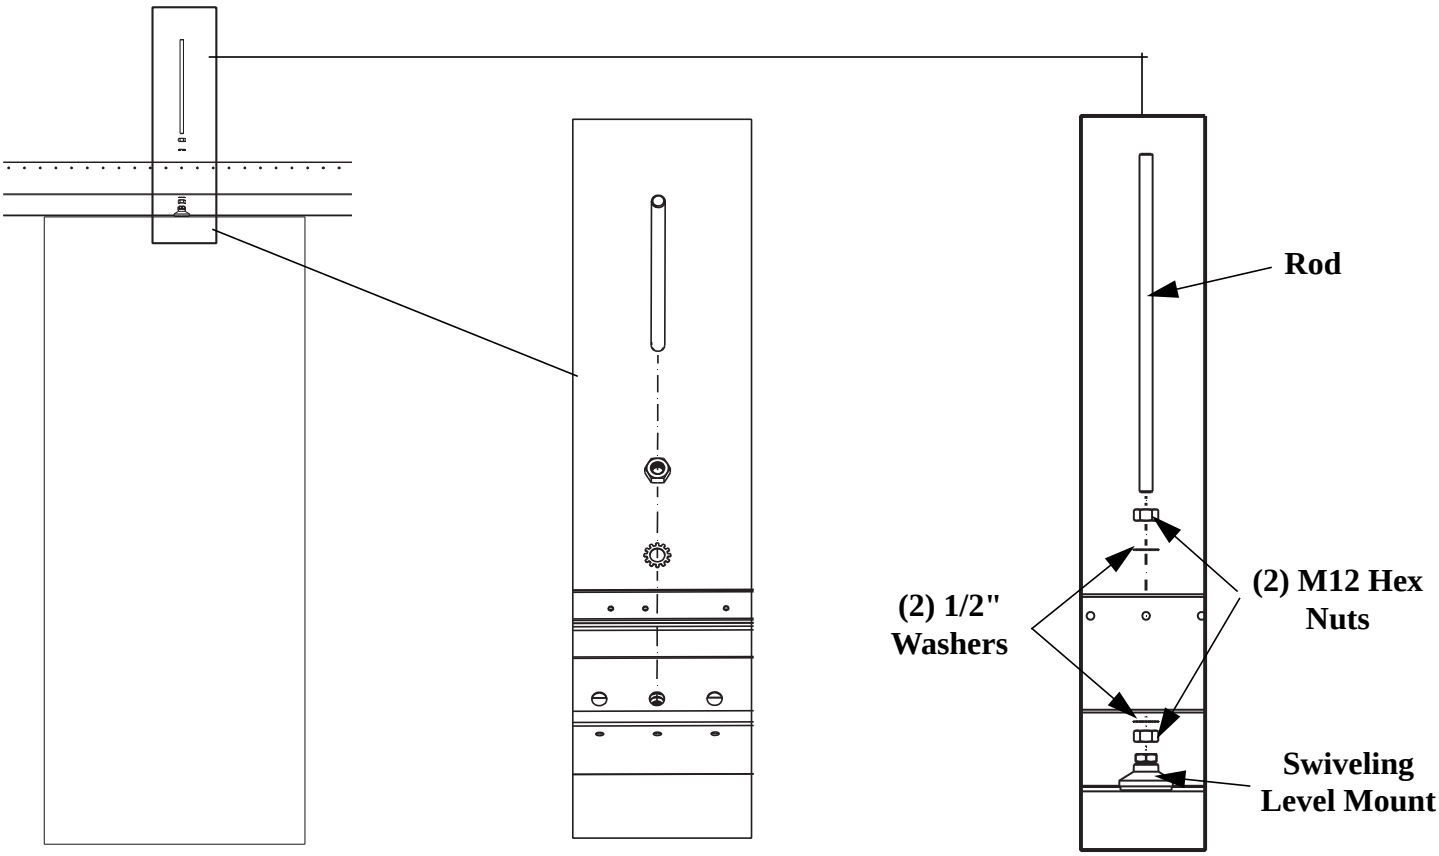

Supporting Wall Beams using Threaded Rod

- Wall beams can be supported using threaded rod suspended from the ceiling. Threaded rod can be attached using the same holes as the Mid-Span cabinet support shown above.

Locating Mid-Span Support Post

- See detail view shown below for dimensions for drilling pilot holes for Mid-Span support posts.

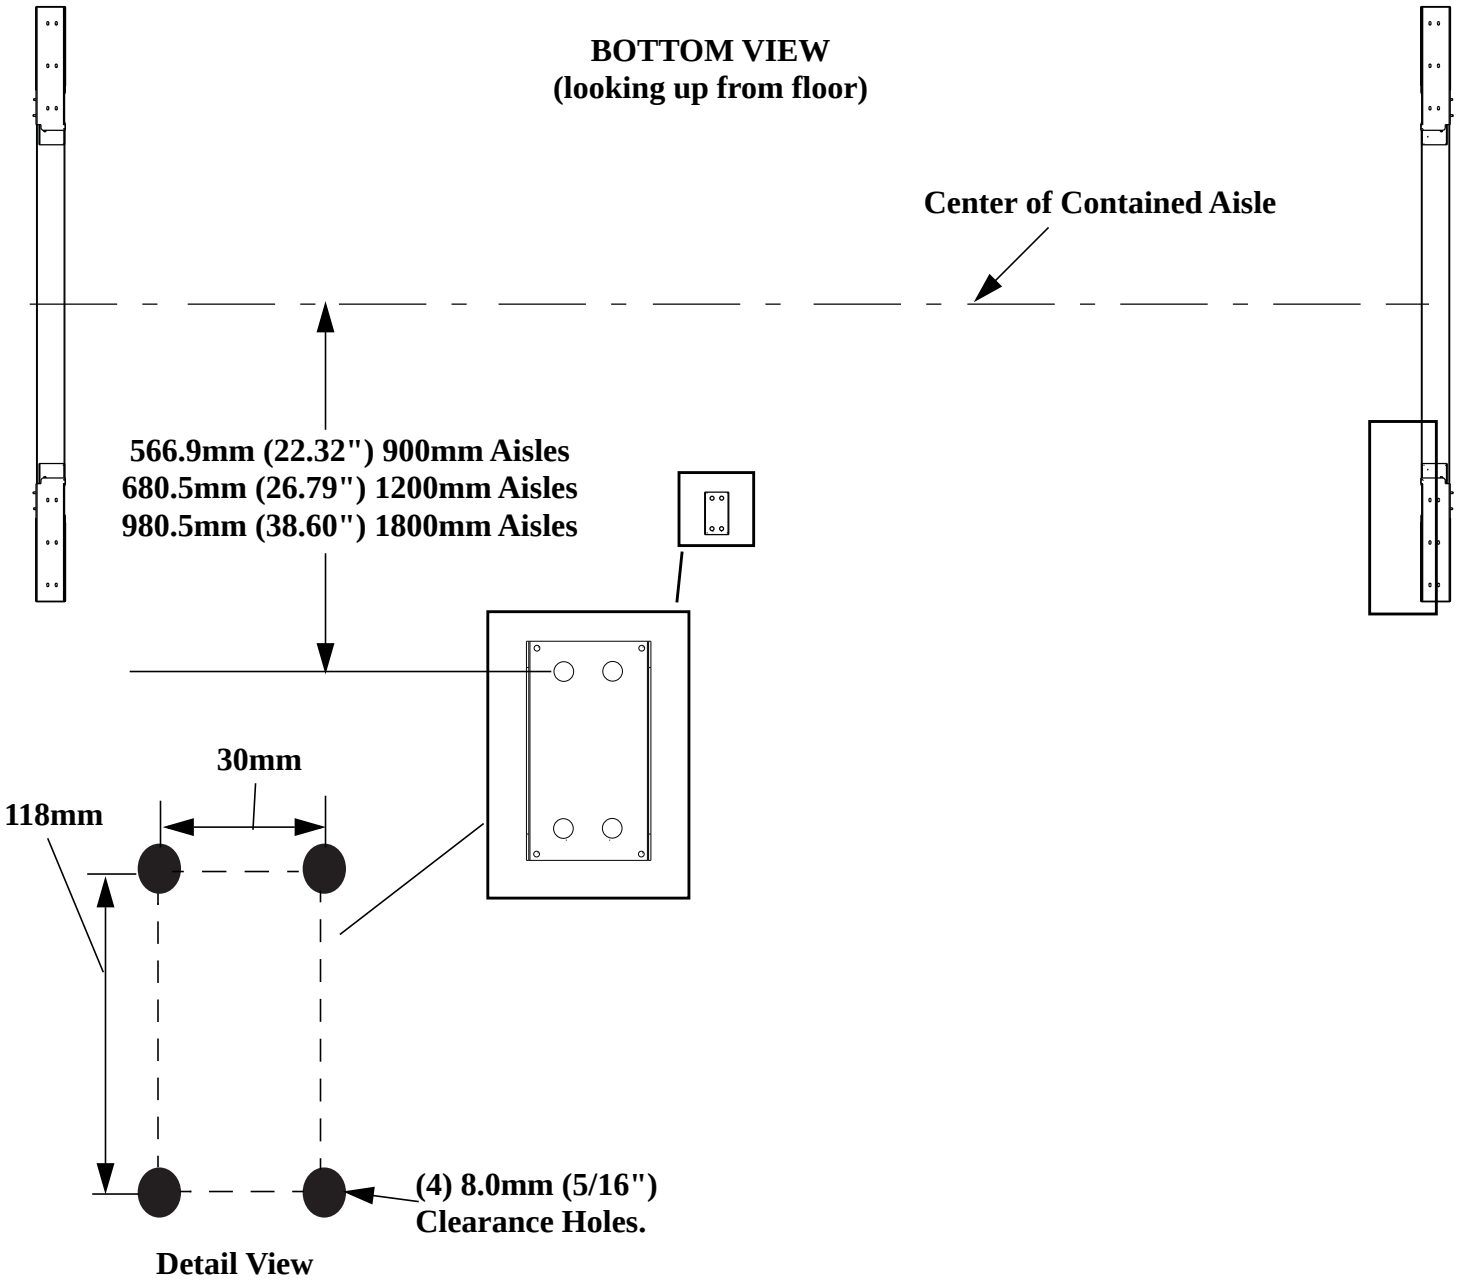

NOTE: Views are not shown to scale to help illustrate dimensional requirements

Attaching Support Bracket to Support Post

- Attach support bracket to support post using (4) M6 X 12mm Hex Bolts.
- See chart below for orientation of holes for 42RU, 45RU, 48RU, and 52RU setups.
- Repeat process for every support post required.

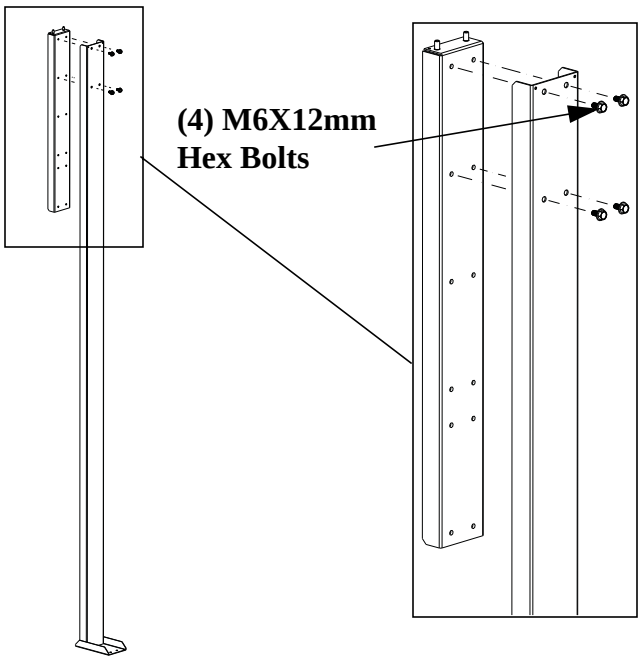

42RU Setup

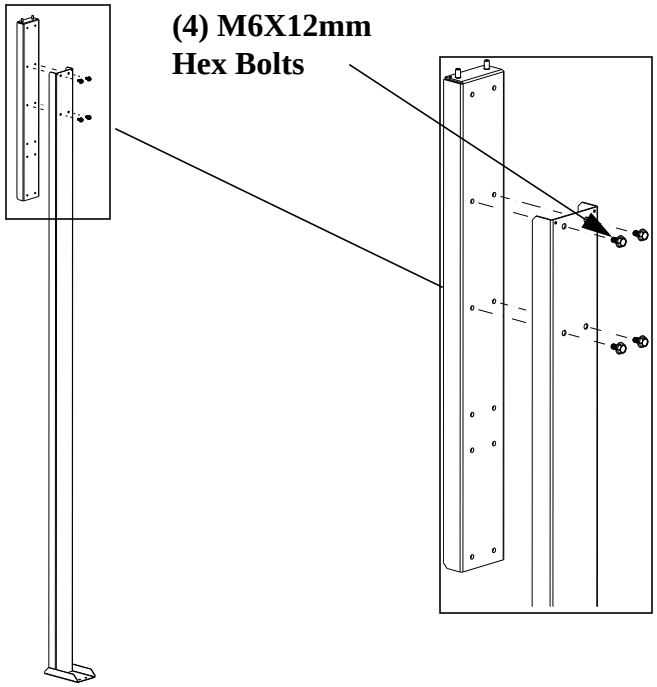

45RU Setup

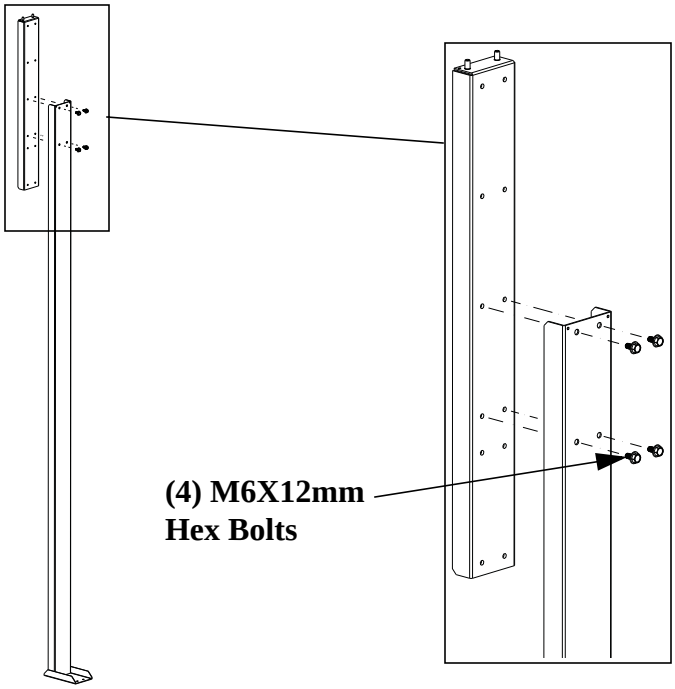

48RU Setup

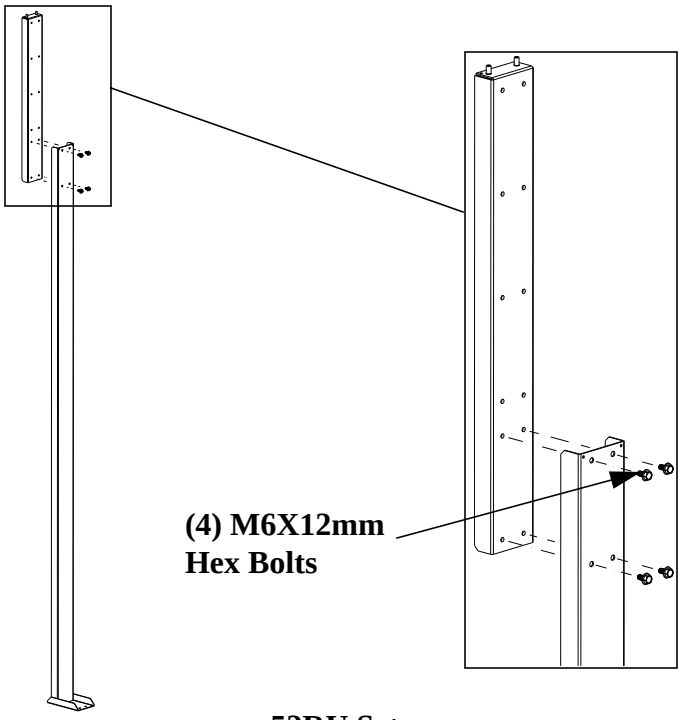

52RU Setup

Attaching Support Post to Floor

- From the floor, remove a tile that is directly next to the tile that you will be attaching the support post to.
- Have (1) person hold the support post in place aligning the holes in the foot with the pilot holes in the tile.
- Have another person insert (4) M6x50 hex head bolts through the foot of the support post.
- From underneath the tile slide (2) tile plates over the (4) M6x50 hex head bolts and secure into place with (6) M6 nuts.
- Repeat process for every support post required.

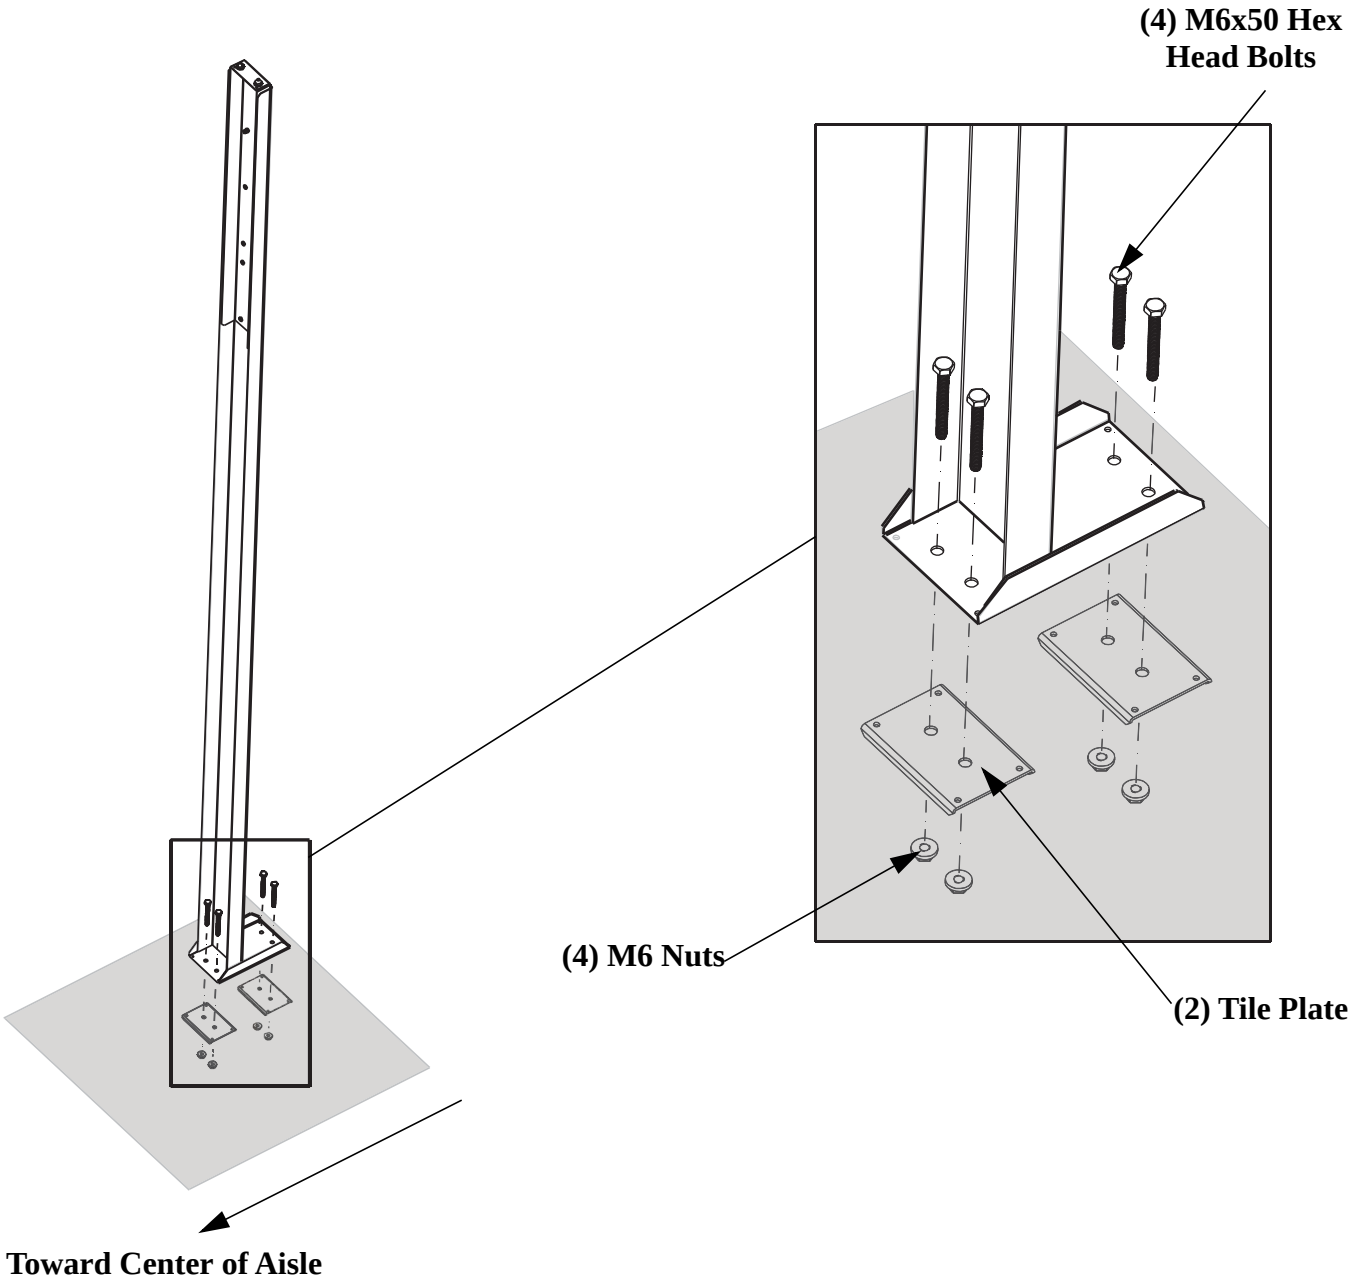

Attaching Wall Beam Assembly to End of Row Frames (A Minimum of 2 People are Required for this Step.)

- Lift (1) wall beam assembly above the end of row frames.
- Lower the wall beam assembly onto the hanger bracket.
- Secure wall beam assembly in to each hanger bracket with a total of (6) M6 hex nuts.
- If required fasten wall beam assembly to mid-span support post with (2) M6 hex nuts.

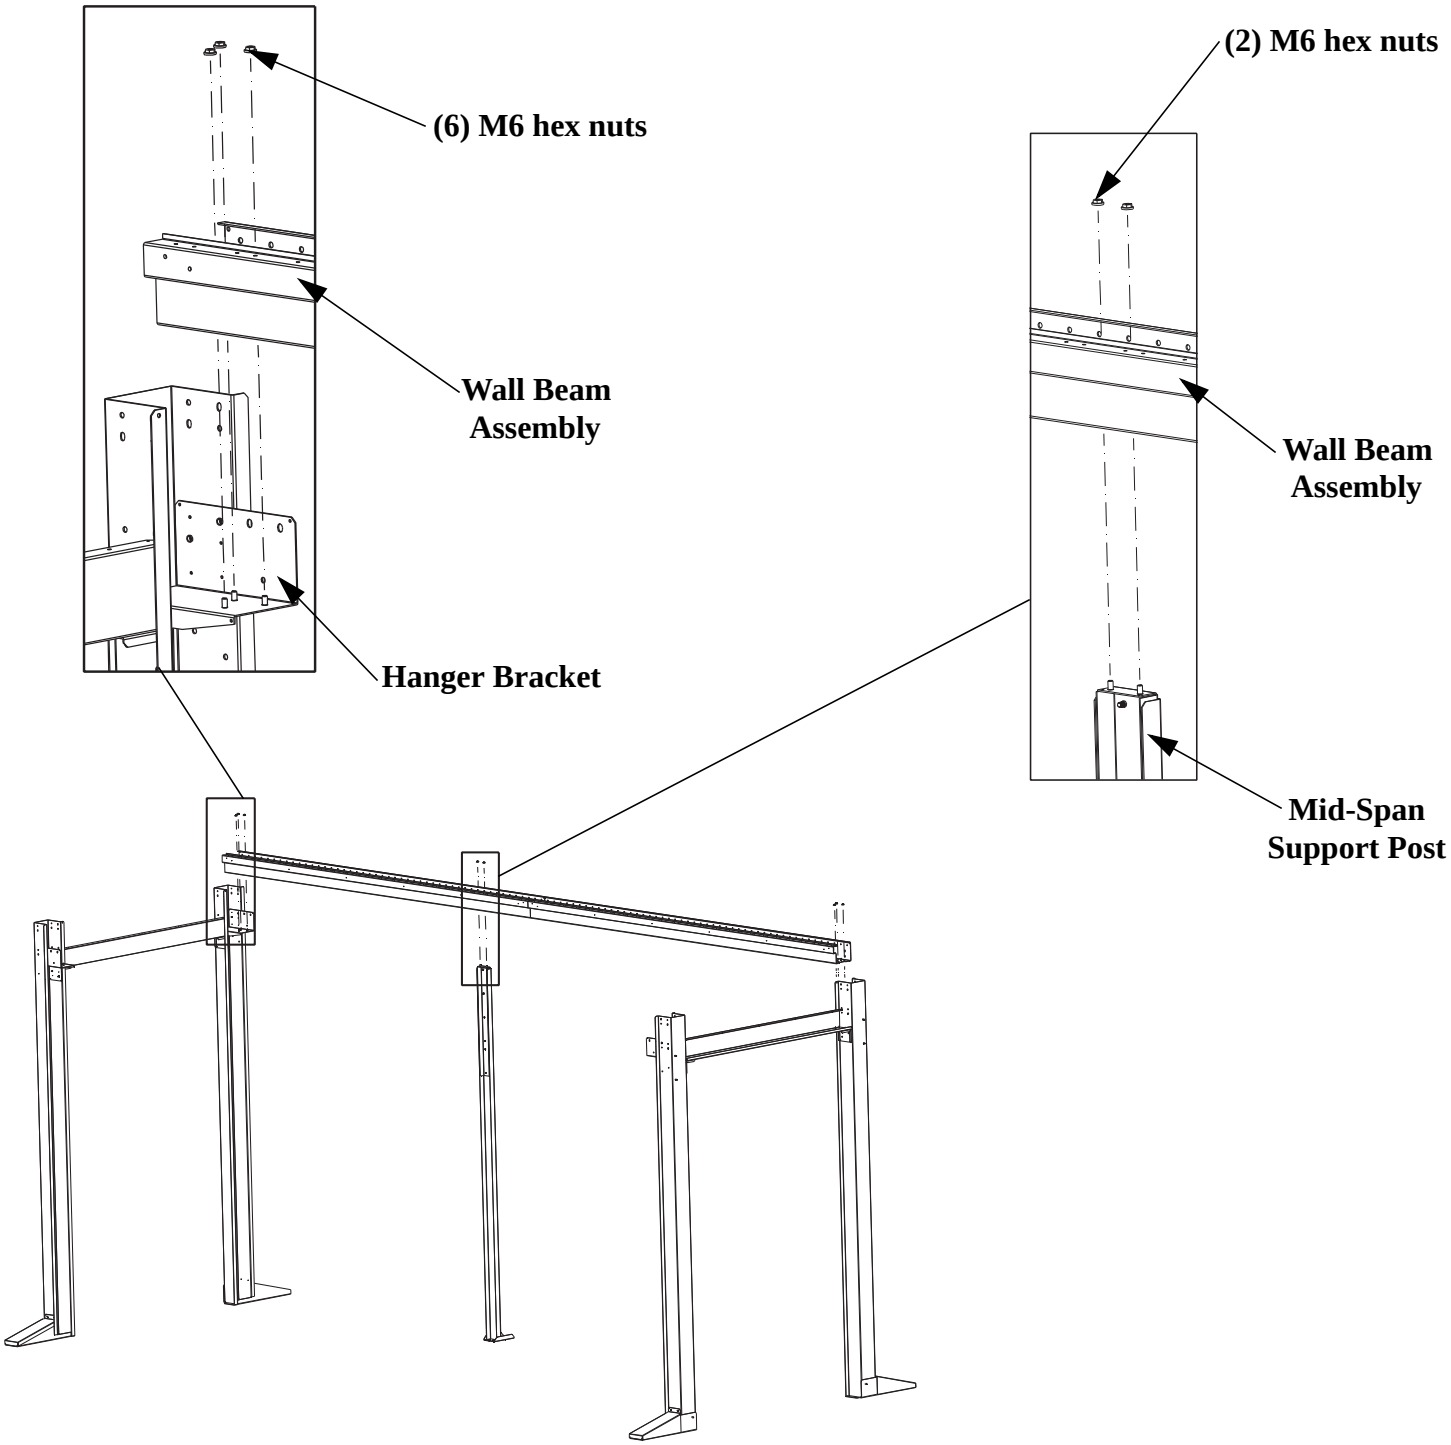

Securing Wall Beam
(For 900mm Vertical Wall Containment Set-Up Only)

- Fasten (1) M5x10mm screw through the wall beam bracket into the wall beam from the inside of the aisle.
- Fasten (3) M6x12mm bolts and (3) M6 nuts to the hanger and wall beam.
- Repeat process for every hanger.

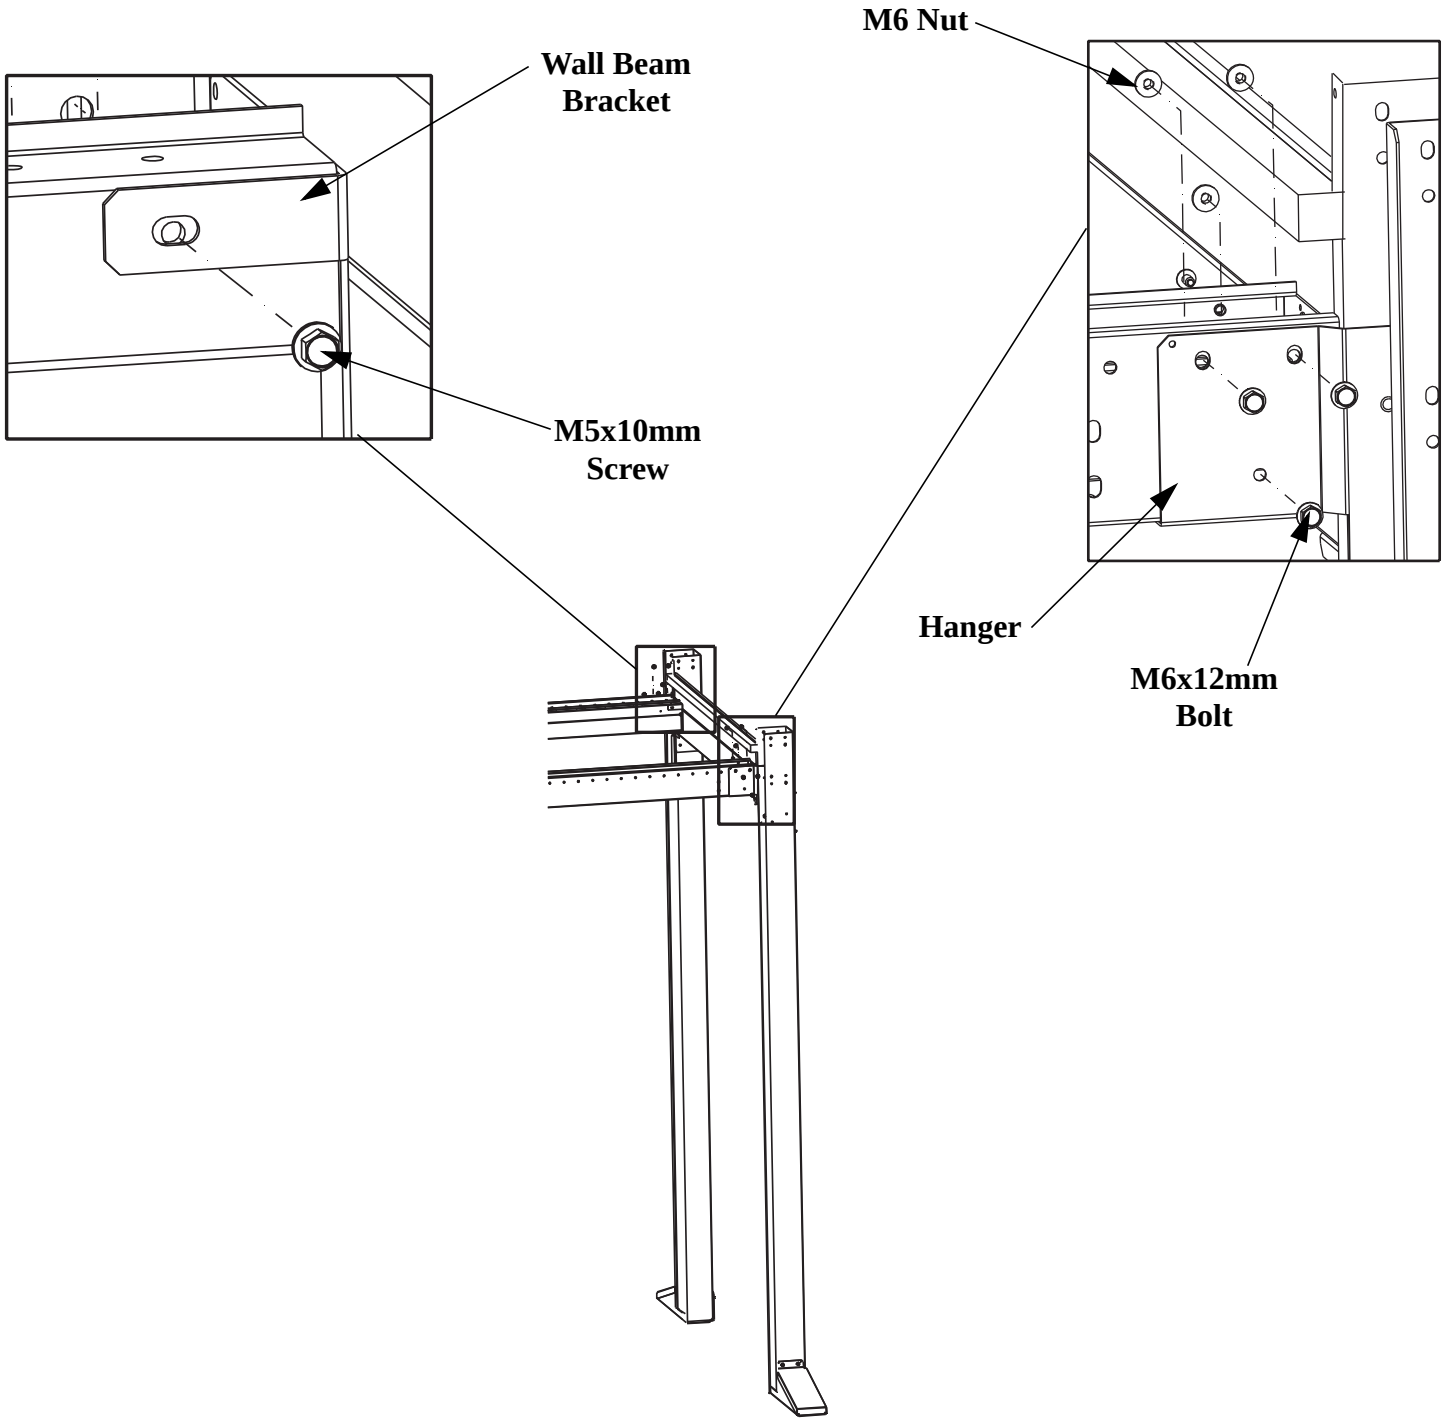

Securing Wall Beam
(For 900mm Roofing Containment Set-Up Only)

- Fasten (1) M5x10mm screw through the support hanger into the wall beam from the inside of the aisle.
- Fasten (3) M6x12mm bolts and (3) M6 nuts to the hanger and wall beam.
- Repeat process for every hanger.

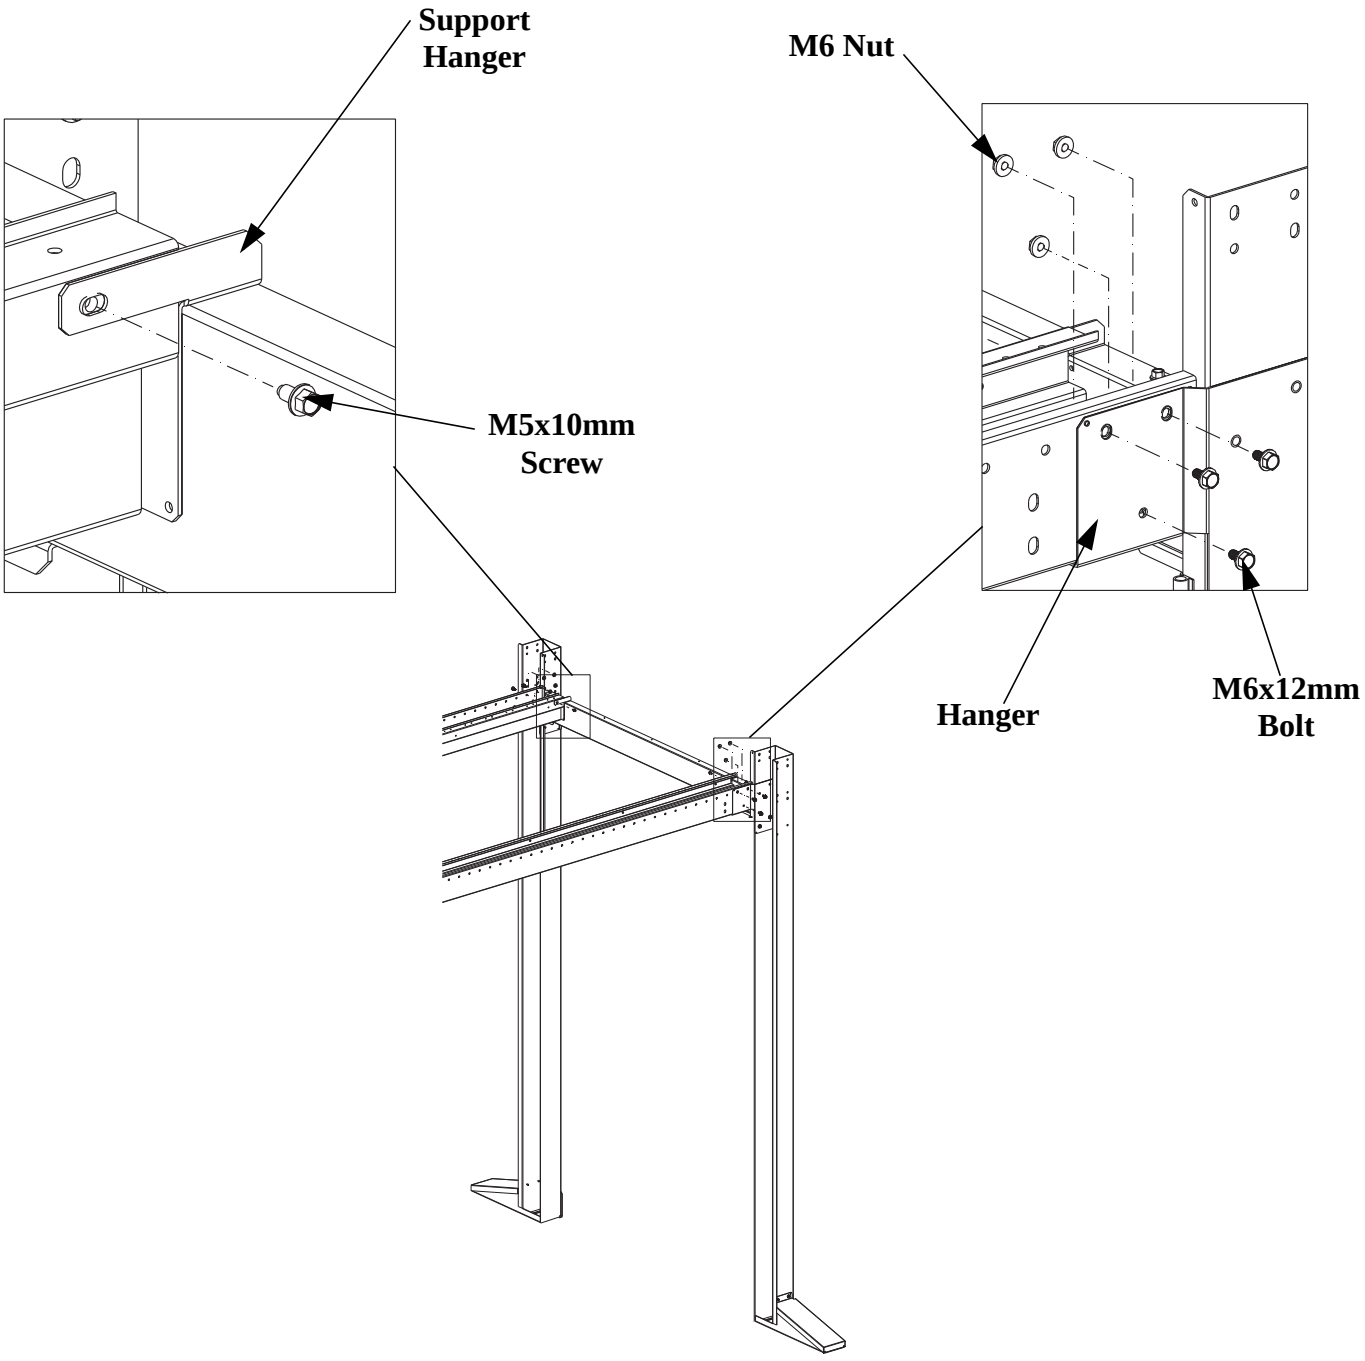

Securing Wall Beam
(For 1200mm Vertical Wall Containment Set-Up Only)

- Fasten (1) M5x10mm screw through the wall beam bracket into the wall beam from the inside of the aisle.
- Fasten (3) M6x12mm bolts and (3) M6 nuts to the hanger and wall beam.
- Repeat process for every hanger.

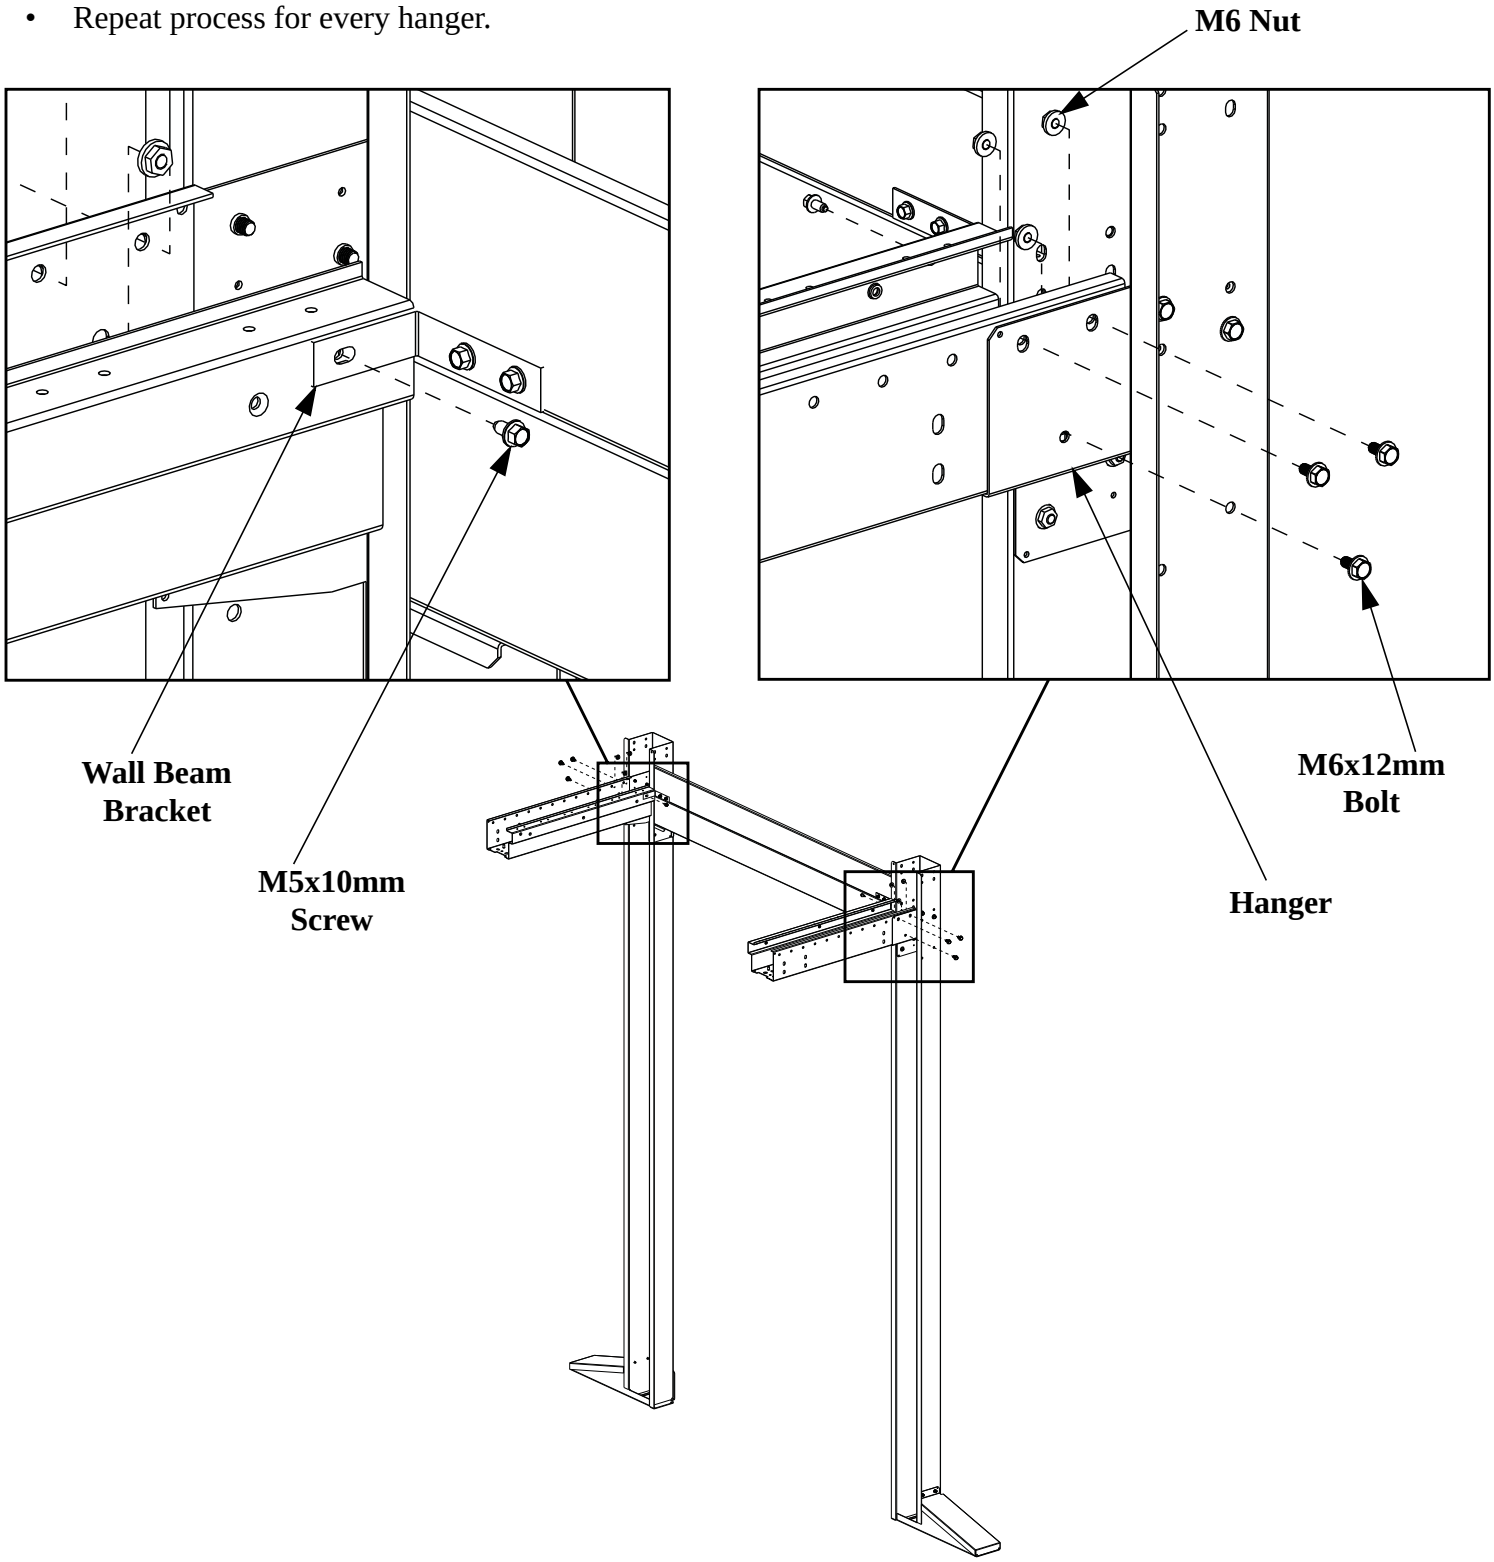

Securing Wall Beam
(For 1200/1800mm Roofing Containment Set-Up Only)

- Fasten (3) M6x12mm bolts and (3) M6 nuts to the hanger and wall beam.
- Repeat process for every hanger.

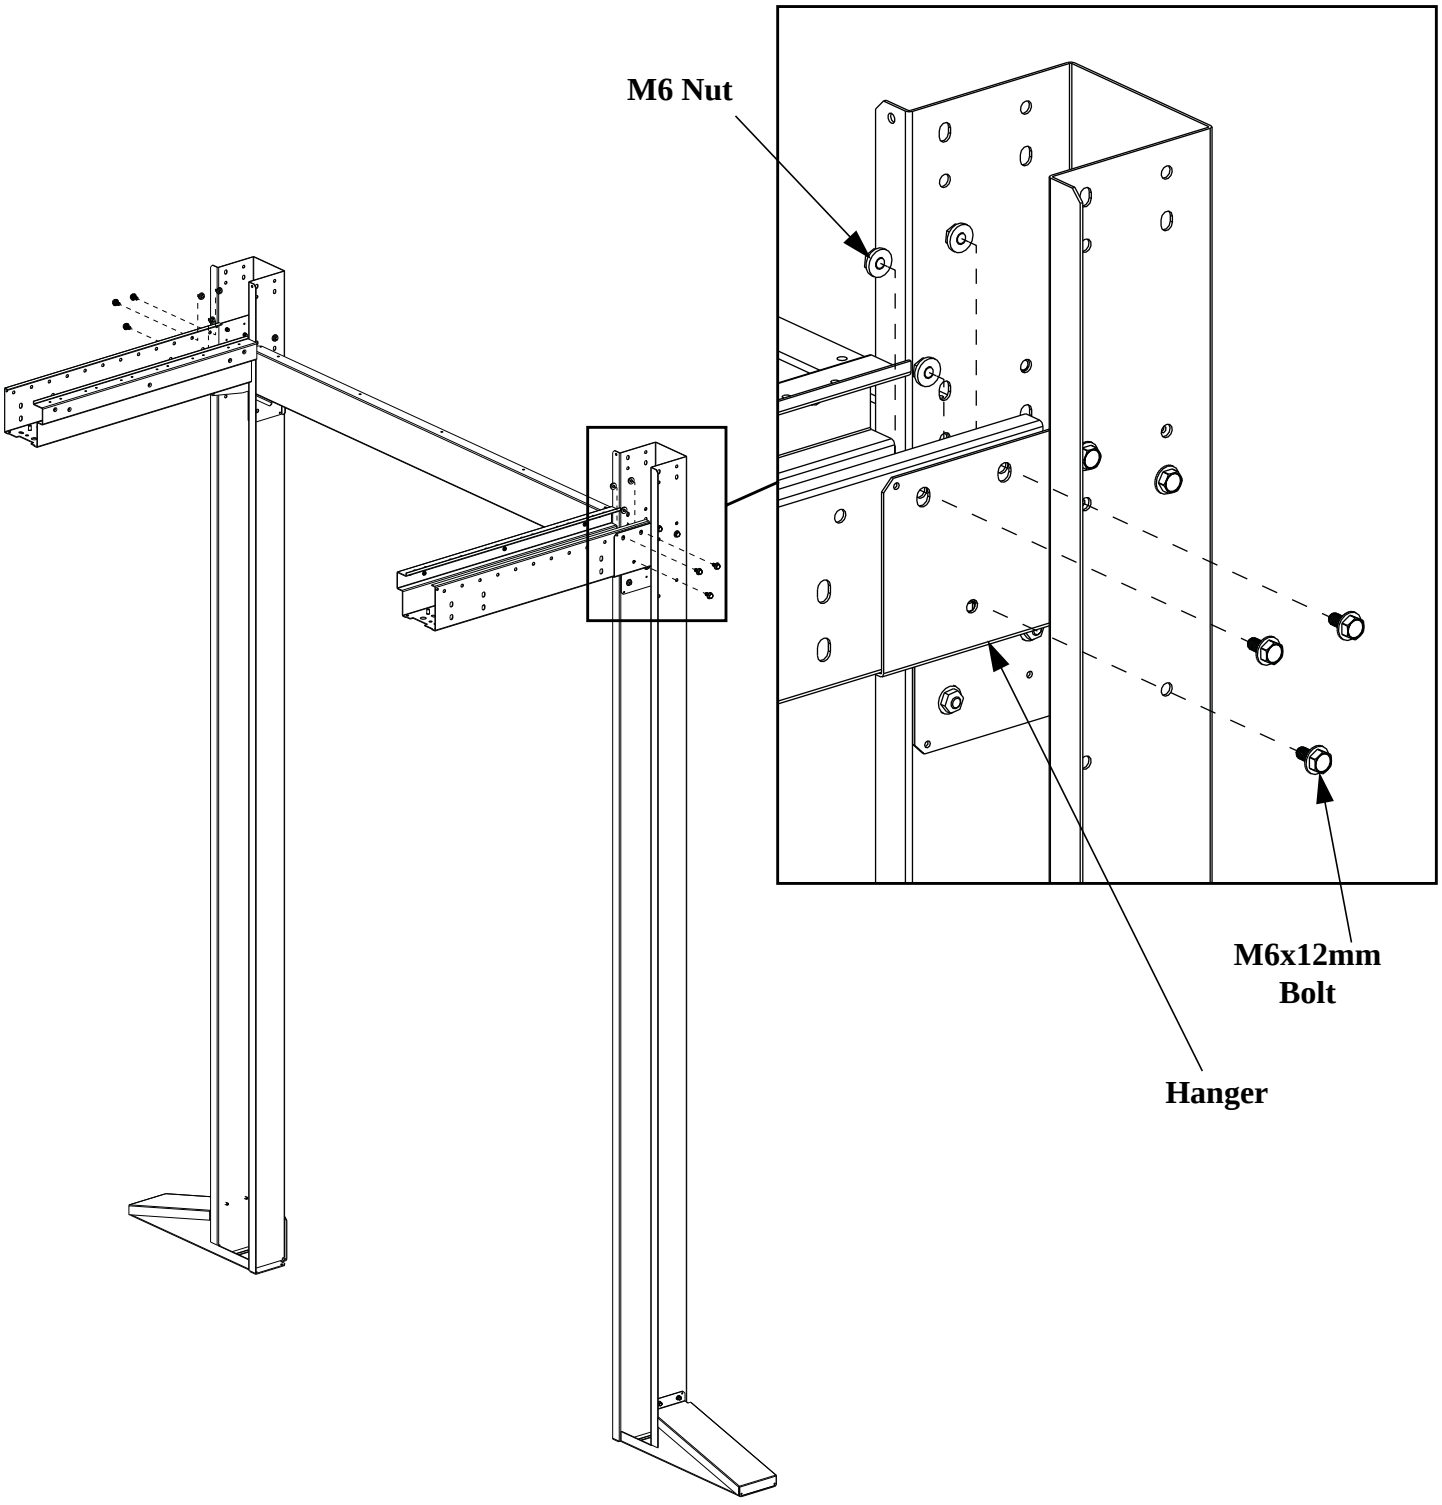

Attaching Roofing Beam
(For Roofing Containment Set-Up Only)

- Attach the roofing beam to the end of row beam with M5x10mm screws.
- Secure the roofing beam to each wall beam with (2) M5x10mm screws.
- Repeat process for opposite side of POD.

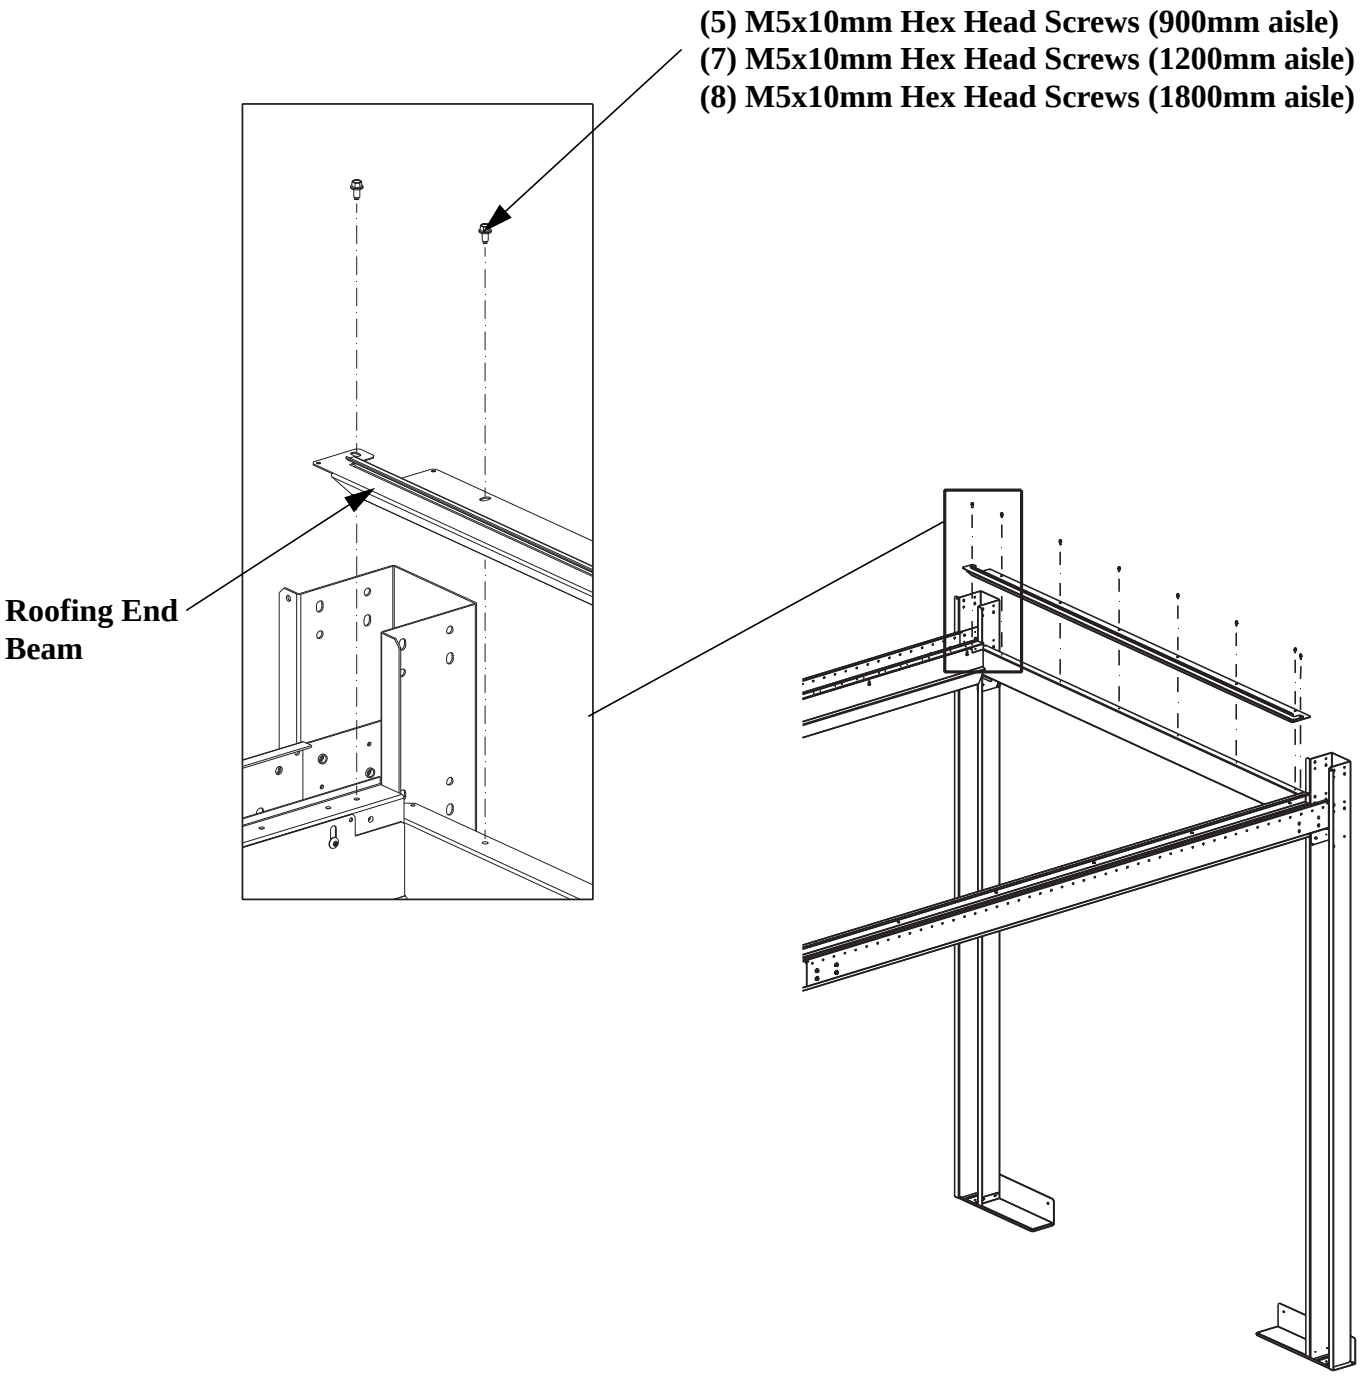
(5) M5x10mm Hex Head Screws (900mm aisle)
(7) M5x10mm Hex Head Screws (1200mm aisle)
(8) M5x10mm Hex Head Screws (1800mm aisle)
Roofing End Beam

Installing Wall Beam Clamp

- Attach the required number of beam clamps to span the length of the aisle with M5x12mm button head screws.

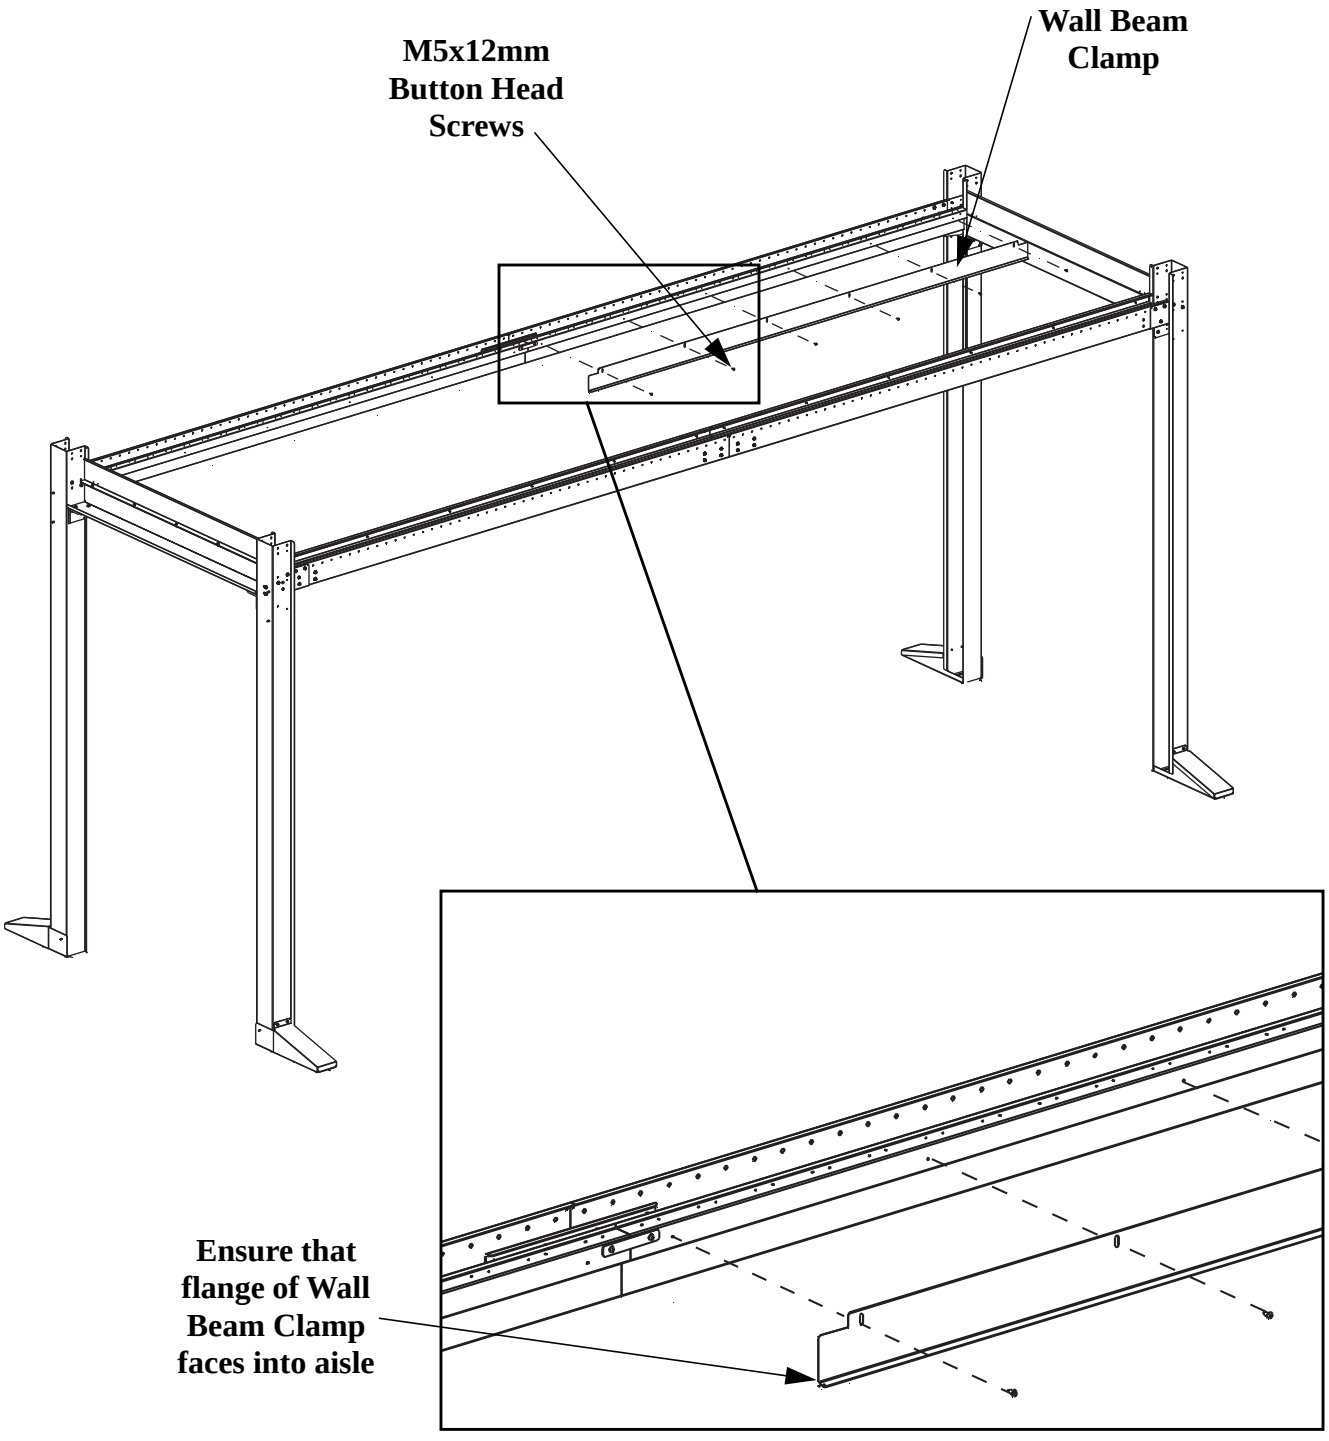

Attaching Flap Seal to Wall Beam Clamp

- Install the flap seal onto the wall beam clamp for each wall beam as shown.

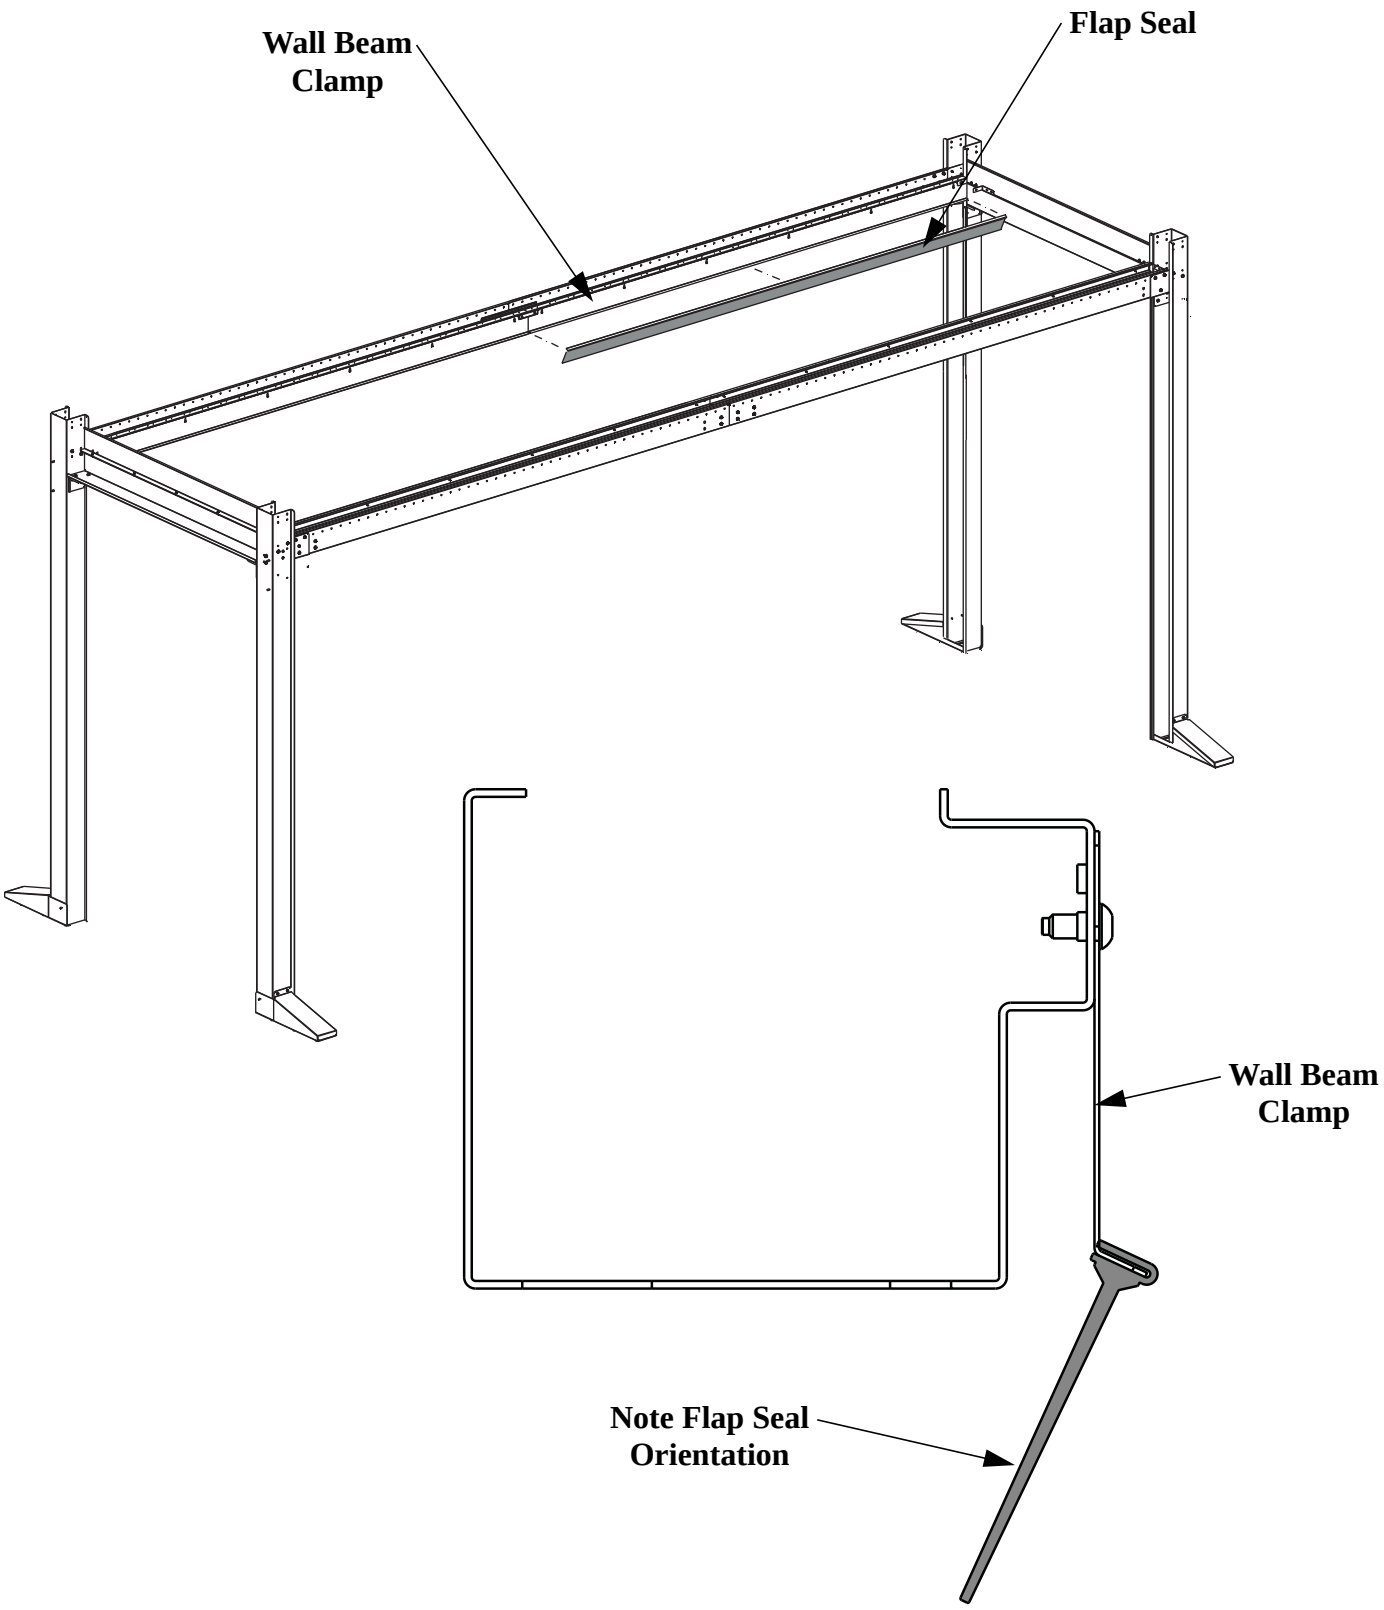

SECTION 3

INSTALLATION OF
AISLE CONTAINMENT ROOFING
CURFS06F03HB**,CURFS06F04HB**,CURFS06F06HB**,
CURFS07F03HB**,CURFS07F04HB**,CURFS07F06HB**,
CURFS08F03HB**,CURFS08F04HB**,CURFS08F06HB**

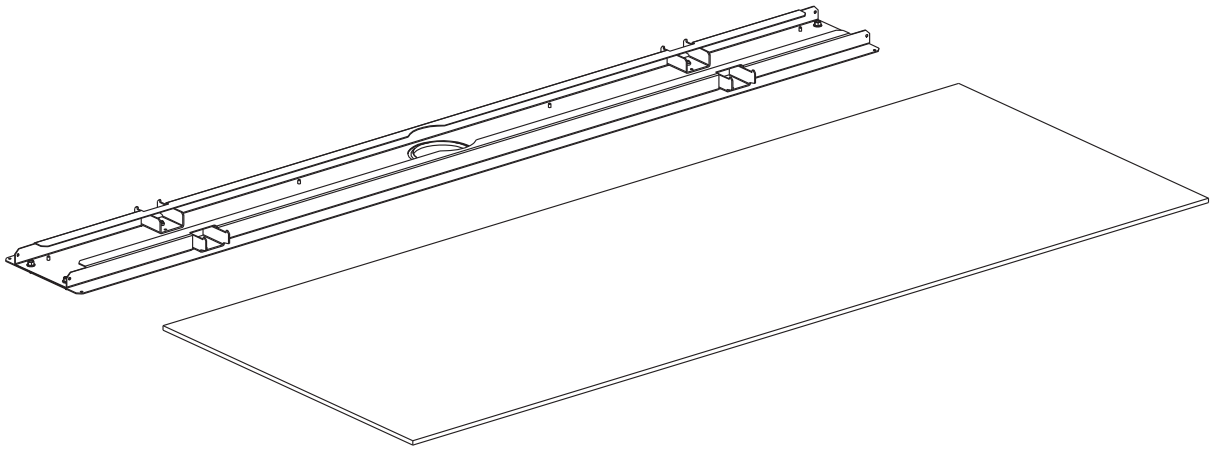

Installing Aisle Containment Roofing Aisle Beam

- Position the roofing aisle beam on the (2) wall beams at approximate location(s).

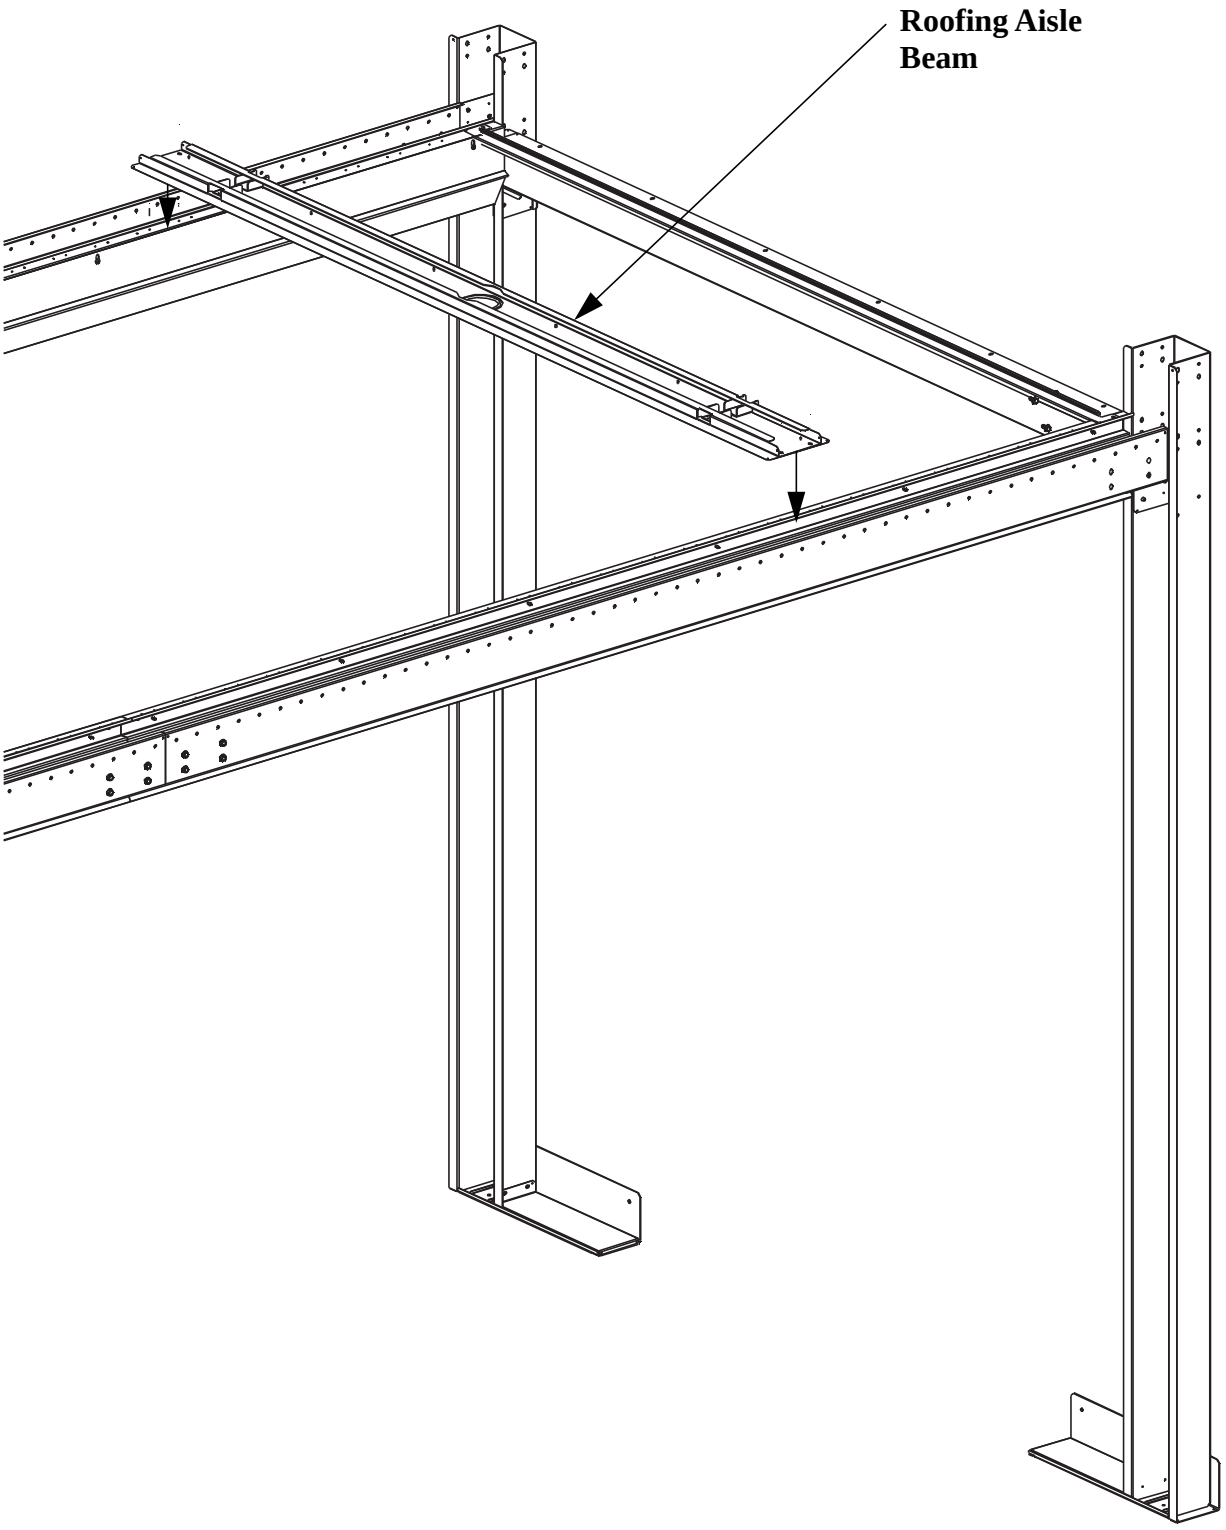

Placing Ceiling Panel

- Lower (1) ceiling panel between the roofing end beam and the roofing aisle beam.
- Adjust the position of the roofing aisle beam using the ceiling panel as a guide.

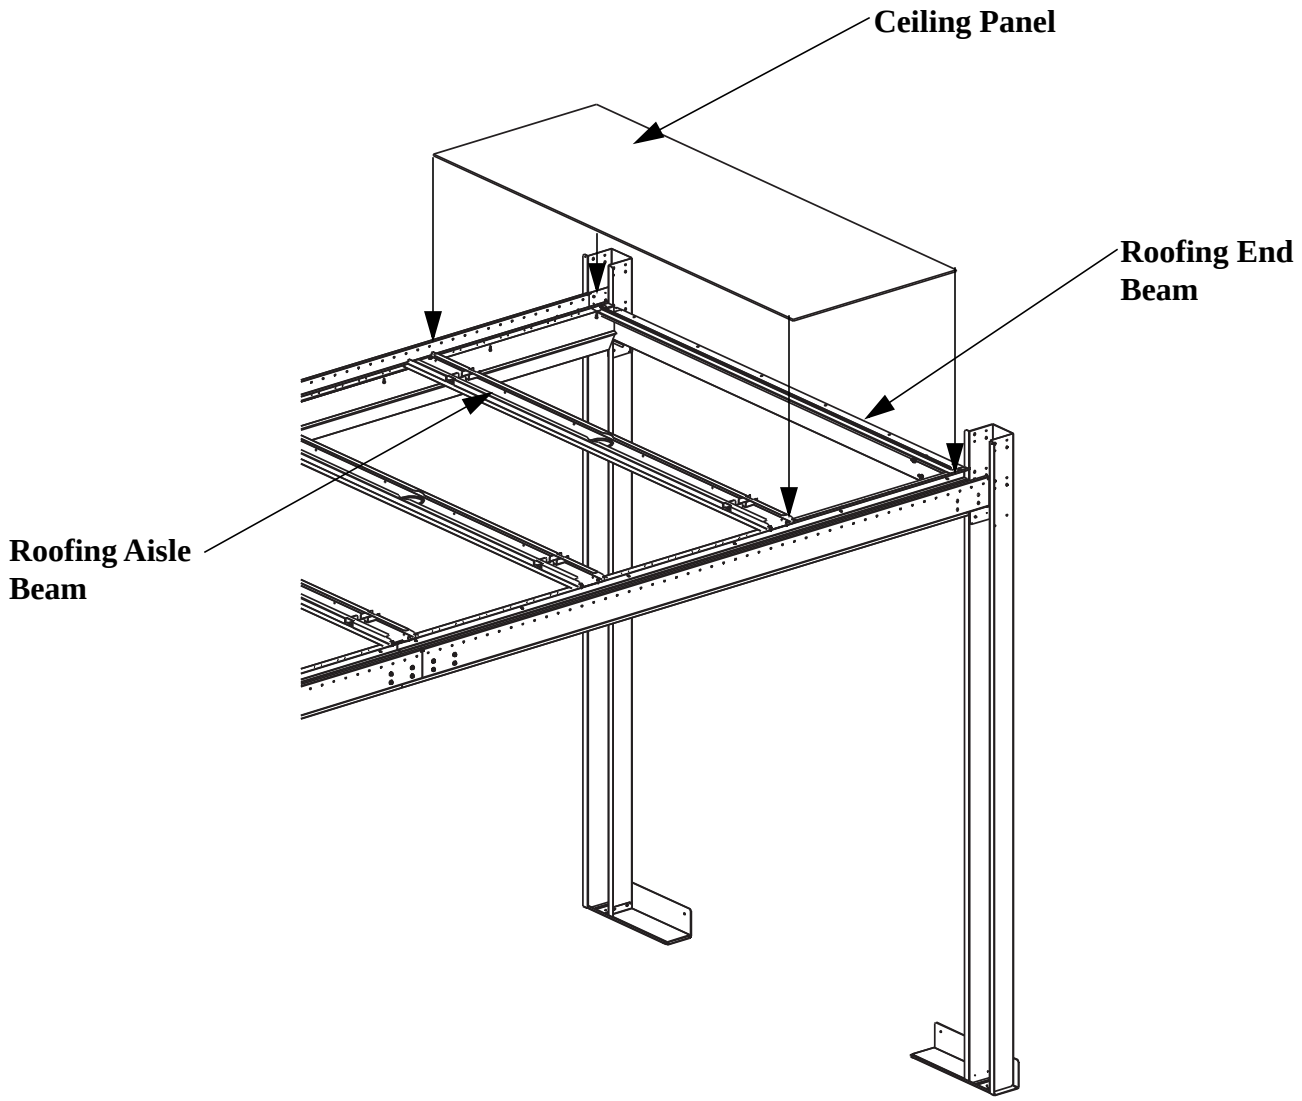

Securing Aisle Containment Roofing Aisle Beam

- Attach the roofing aisle beam to the (2) wall beams with (4) M5x10mm hex head screws.
- Repeat process for each roofing aisle beam.

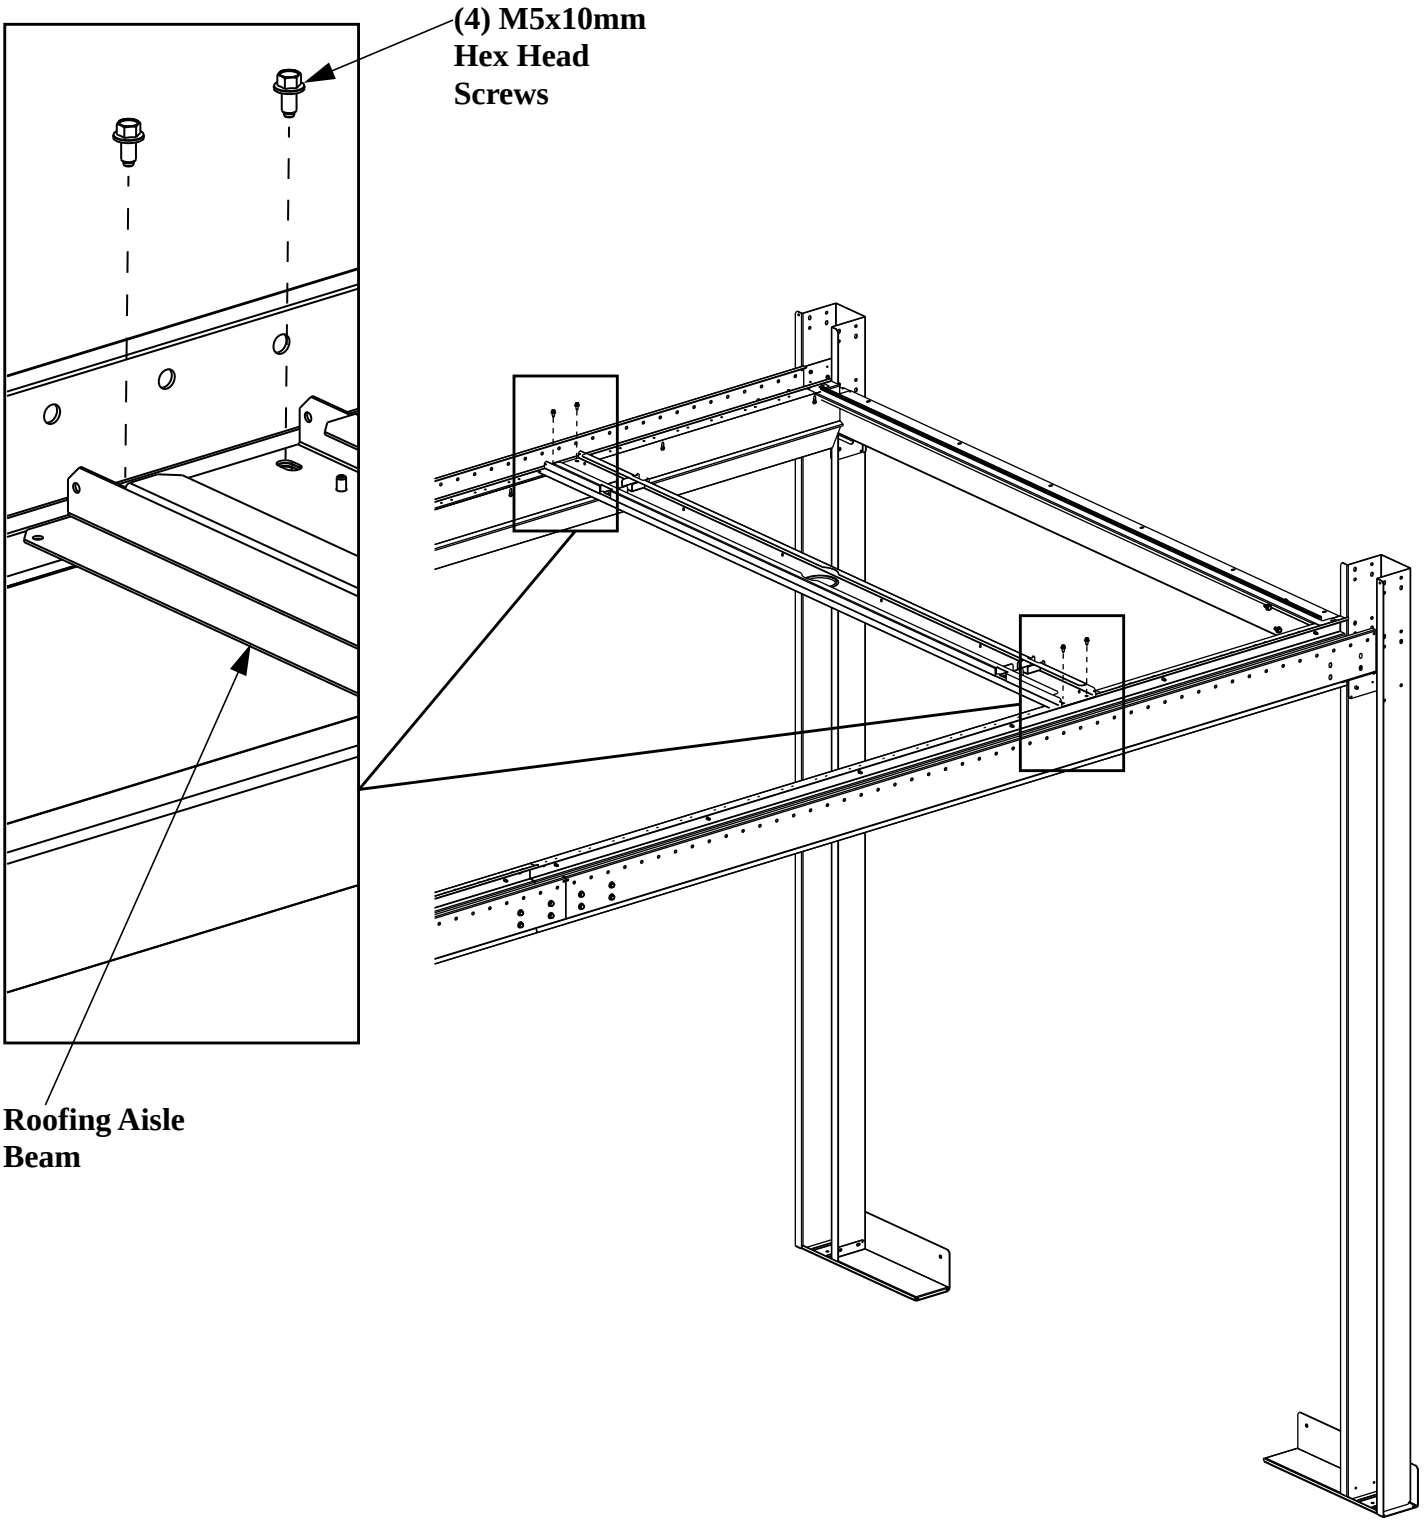

Securing Ceiling Panel

- From underneath the roofing aisle beam, loosen the (4) M5 button head screws.
- Slide the (4) M5 button head screws out causing the ceiling panel hold down to slide over the ceiling panel securing it in place.
- Re-tighten the (4) M5 button head screws in the roofing aisle beam.
- Repeat process for every roofing aisle beam in pod.

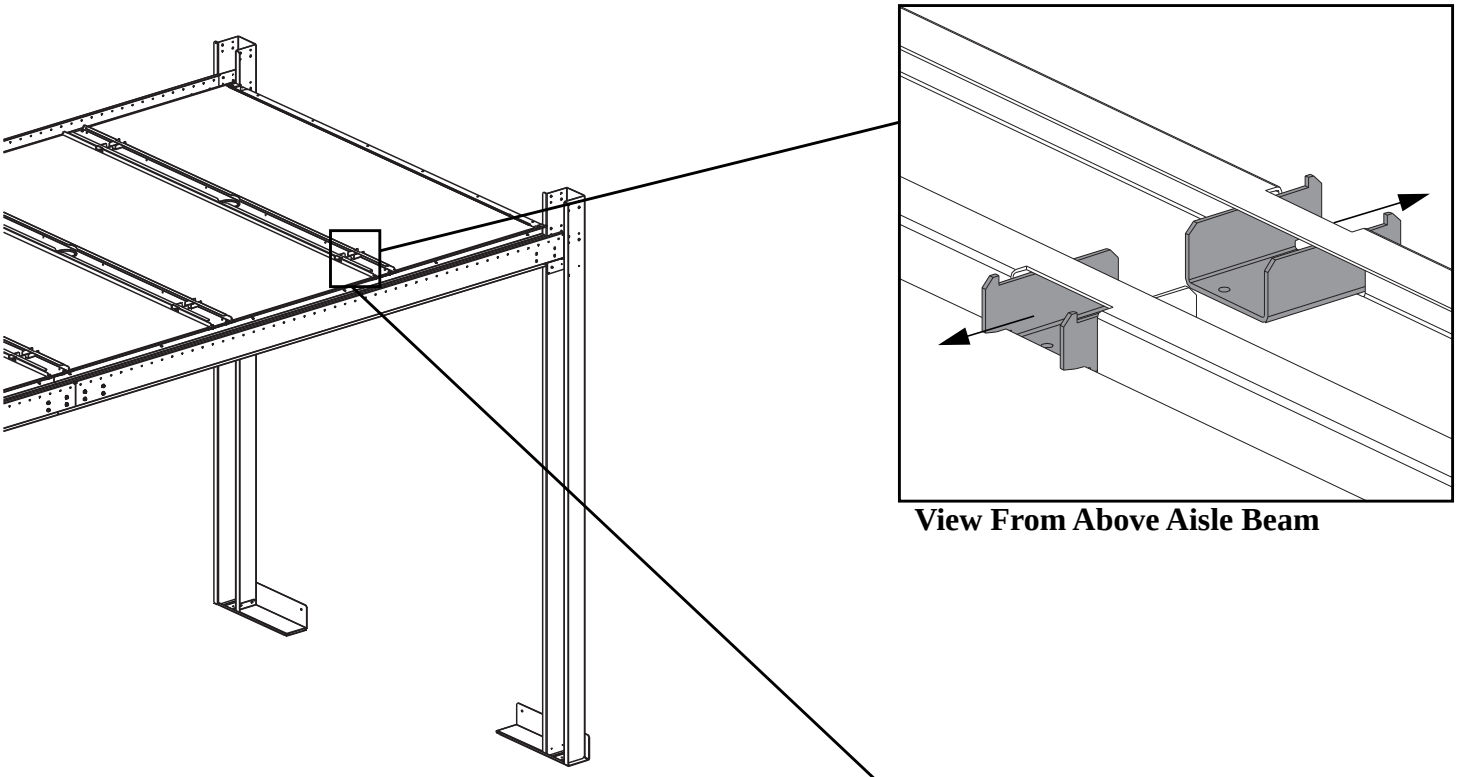

View From Above Aisle Beam

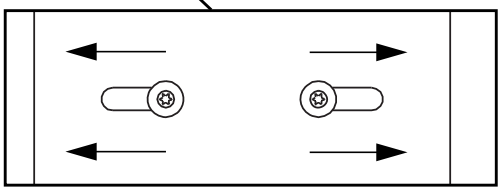

View From Under Aisle Beam

SECTION 4

INSTALLATION OF AISLE CONTAINMENT VERTICAL WALLS, VERTICAL WALL ADAPTERS, AND VERTICAL WALL BRACE

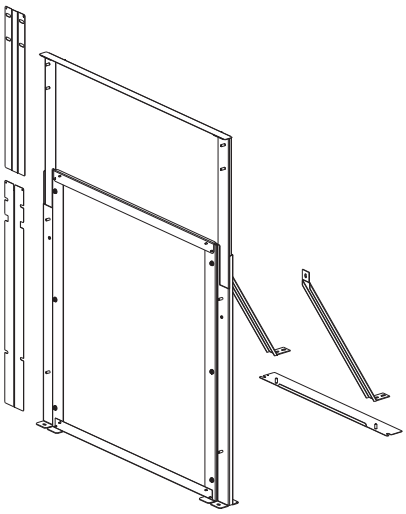

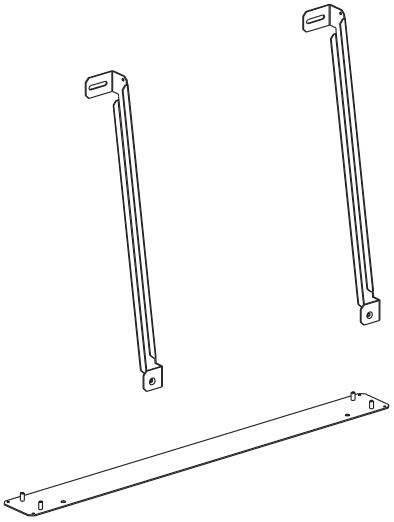

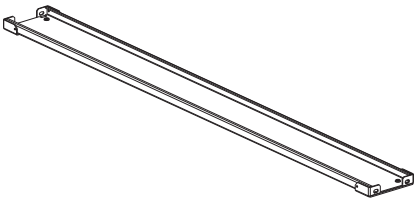

Installing Vertical Wall Brace

- **NOTE:** The max distance without a vertical wall brace is 2,400mm (8’).
- Install bracket for vertical wall brace to each wall beam using (2) M5 X 12mm Button Head Screws each as shown.
- Install vertical wall brace to both vertical wall brace brackets using (2) M5 X 12mm Button Head Screws on each side as shown.

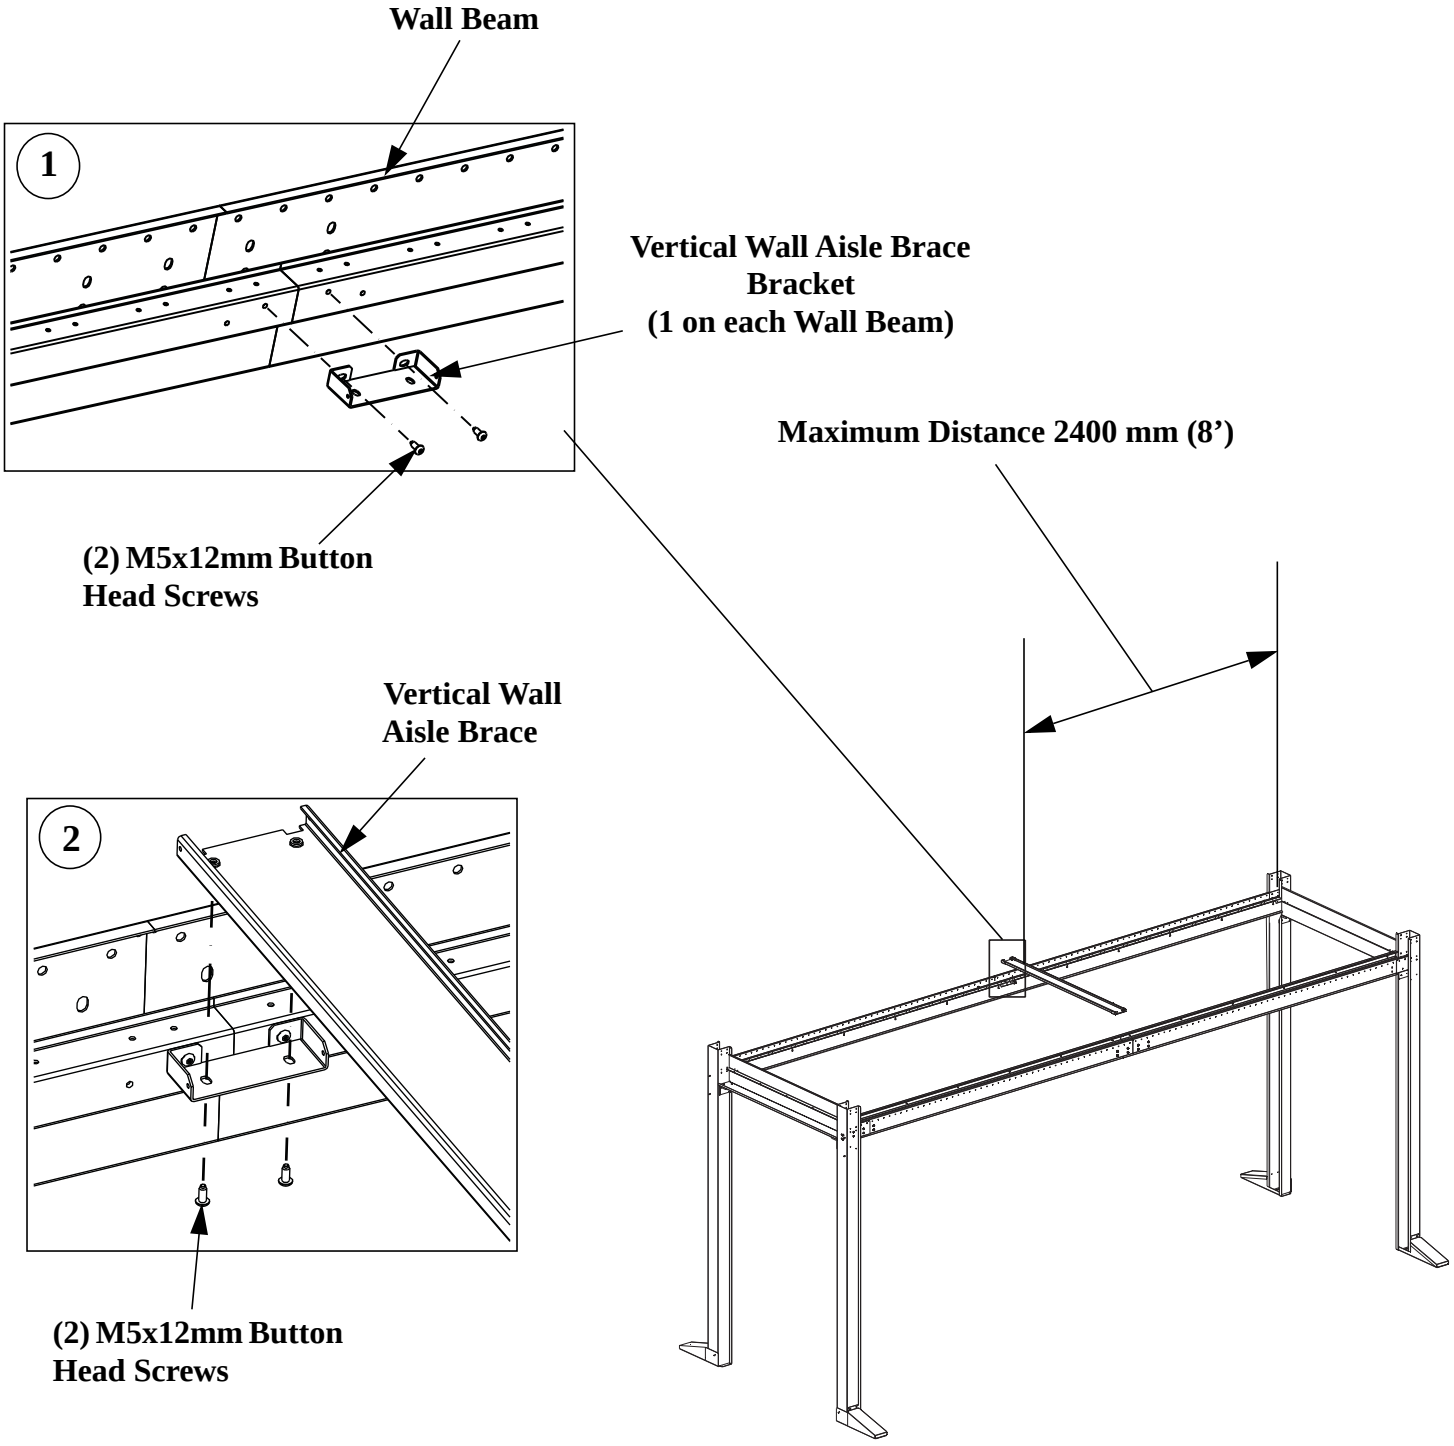

Installing Vertical Wall Adapter

- Using (2) M5x10mm hex head screws, attach the vertical wall adapter to the wall beam.
- Repeat process for all of vertical wall adapters required.

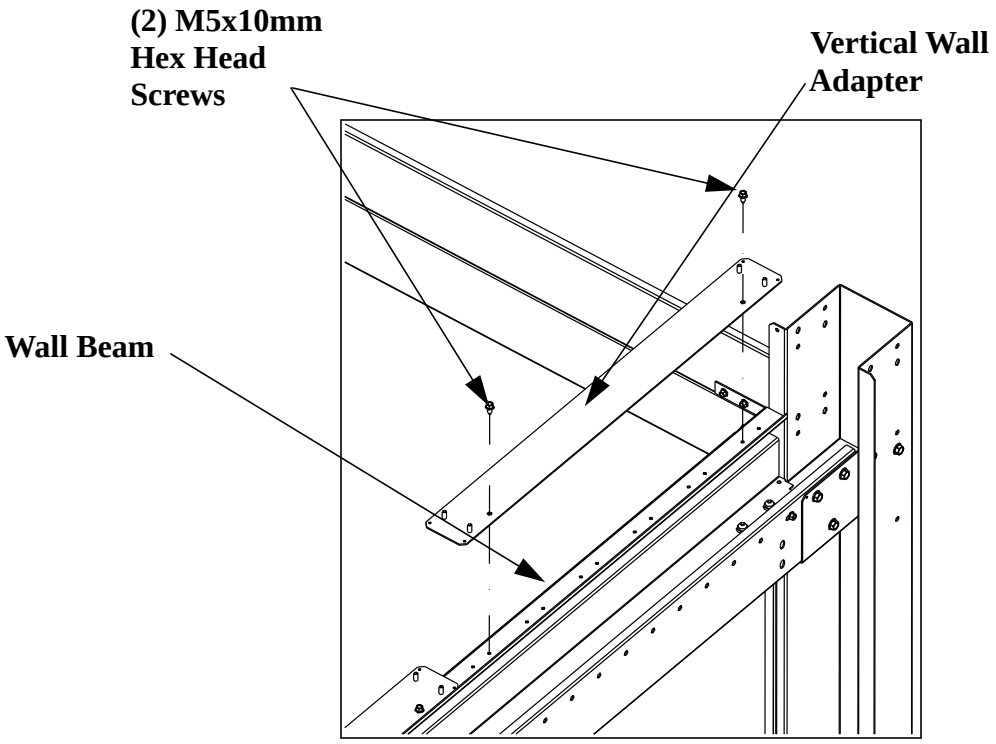

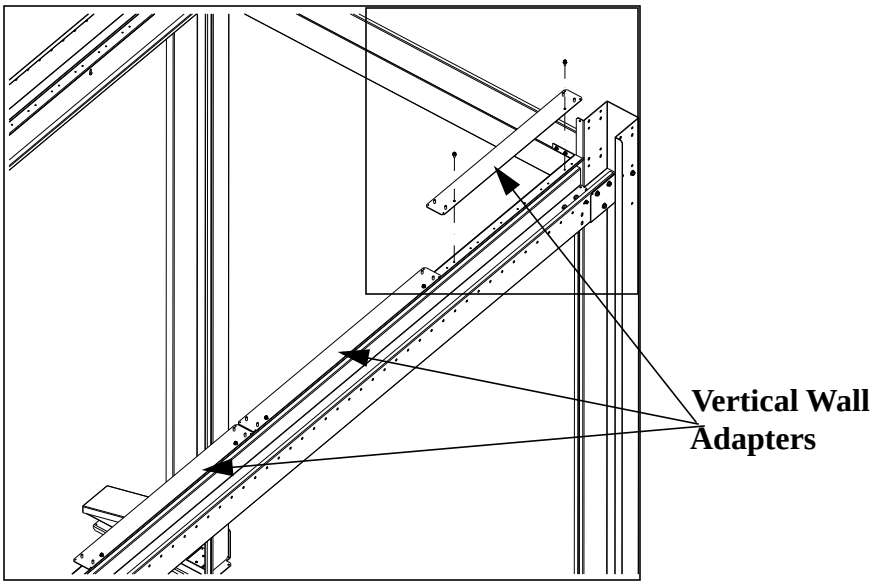

Attaching Wall Brace to Vertical Wall

- Using (2) M5x10mm button head screws, attach (2) wall braces to the vertical wall.
- Discard the diagonal braces that come with the vertical walls.
- Repeat process for all vertical walls required.

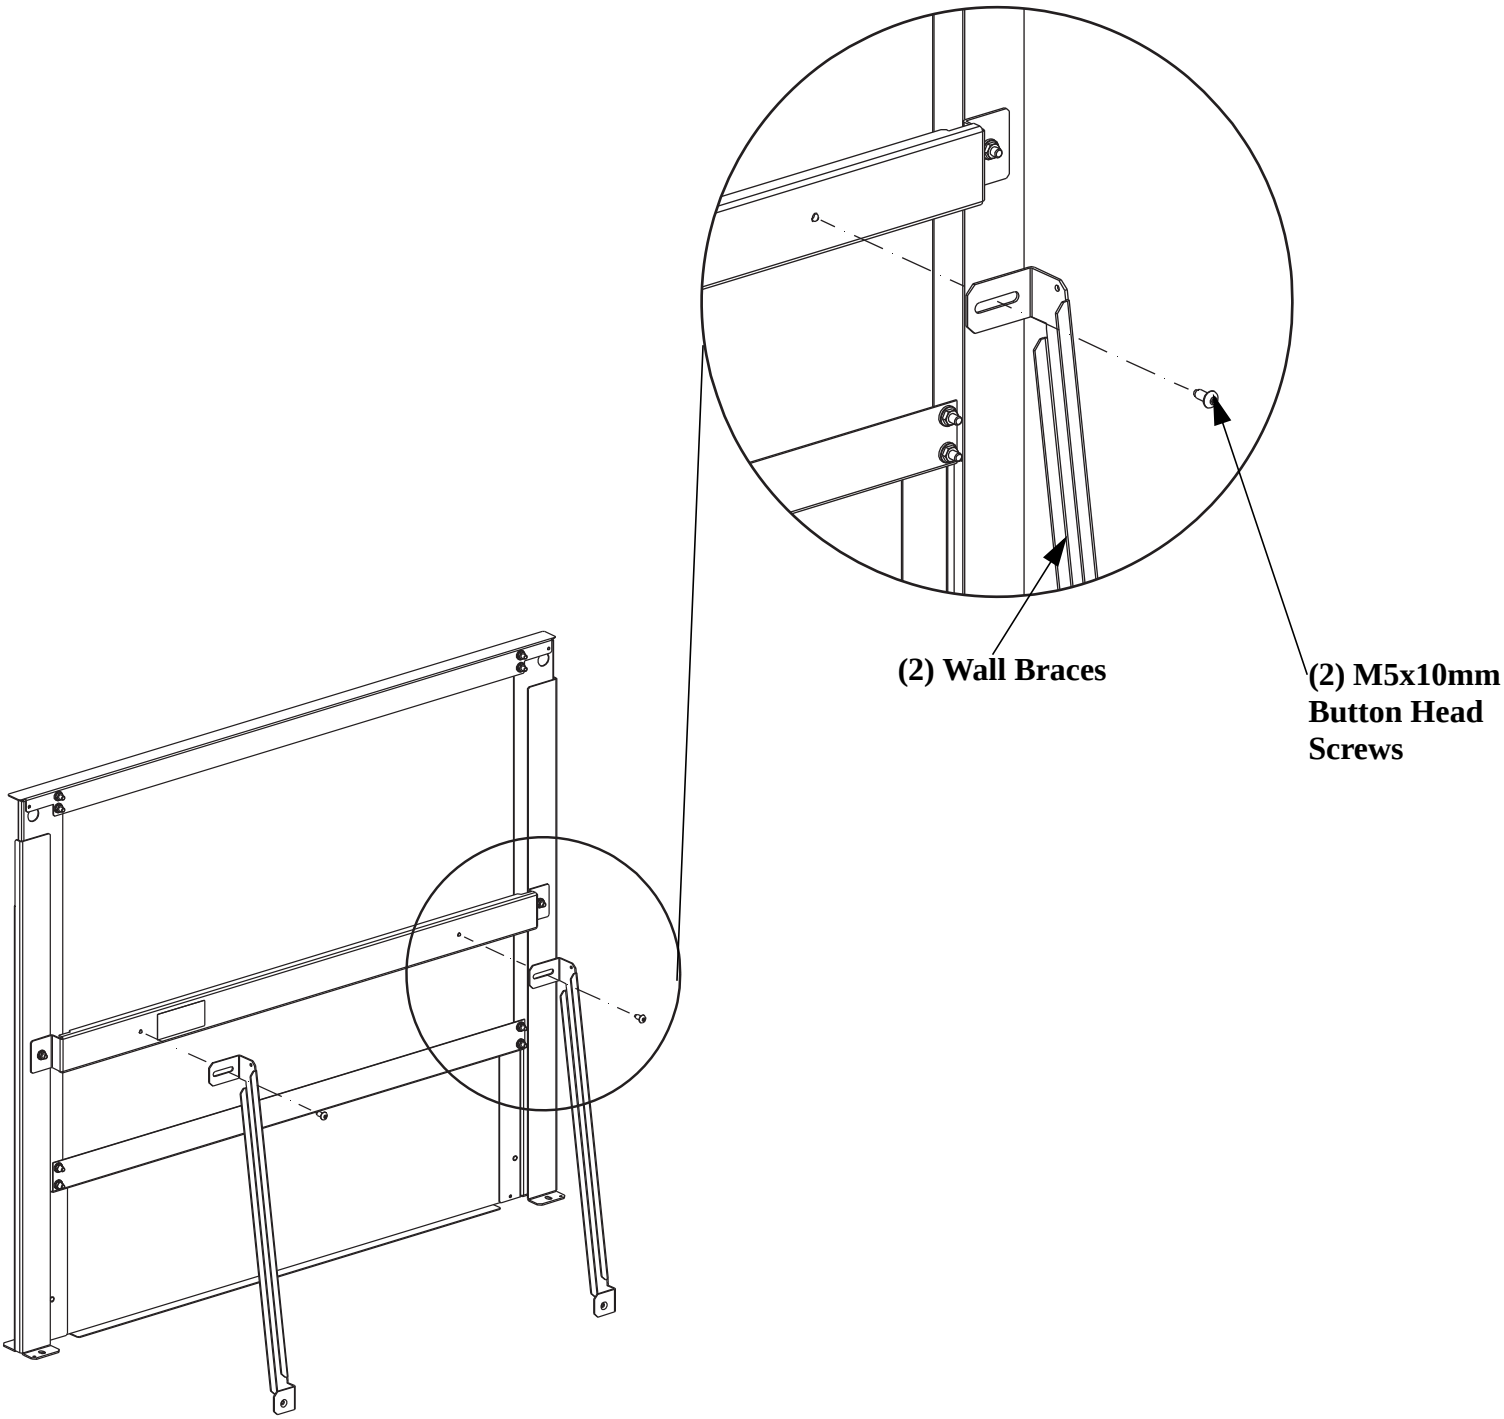

Applying Foam Seal to Vertical Wall

- Apply (1) strip of .5"x.75" foam seal across the top flange of the vertical wall.
- Repeat process for all vertical walls required.

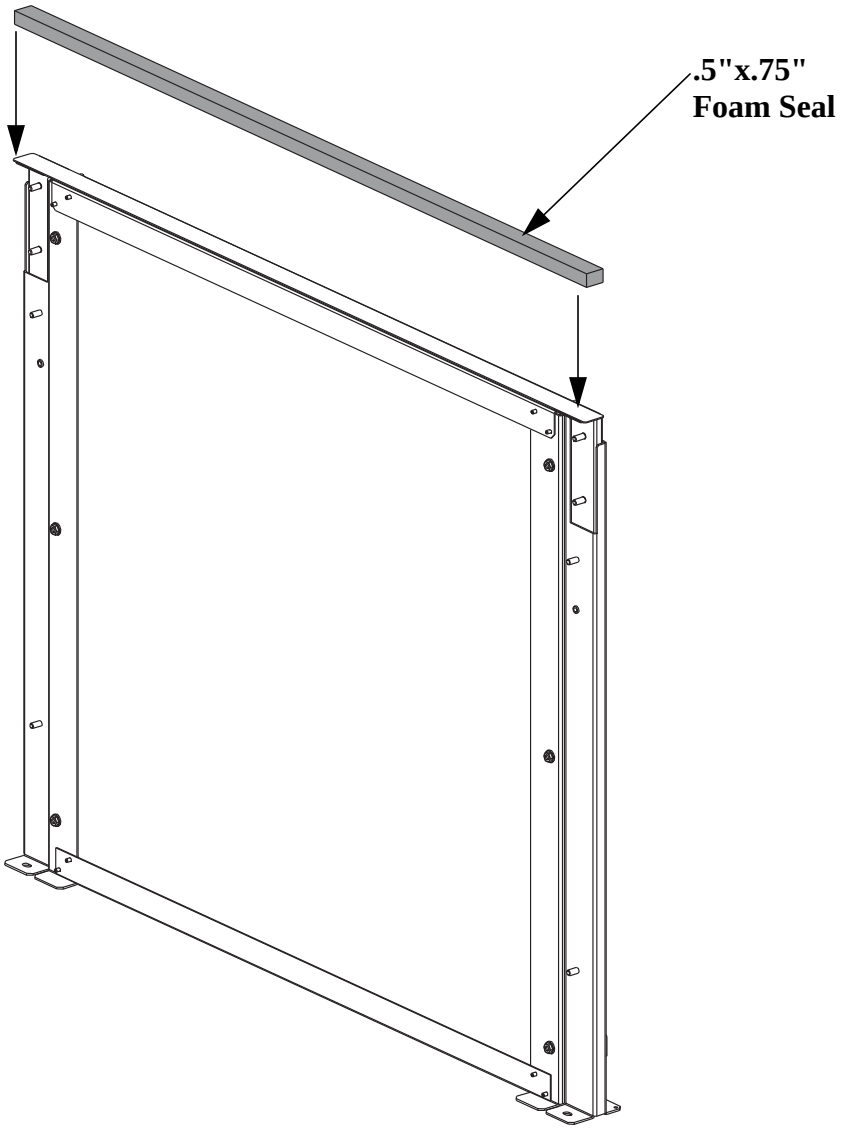

Installing Vertical Wall

- Place the vertical wall on top of the vertical wall adapter passing the studs on the adapter through the slots in the feet of the wall.
- Secure the vertical wall to the vertical wall adapter with (4) M5 hex nuts.
- Fasten the (2) wall braces to the wall beam with (2) M5x10mm hex head screws.
- Repeat process for each vertical wall required.

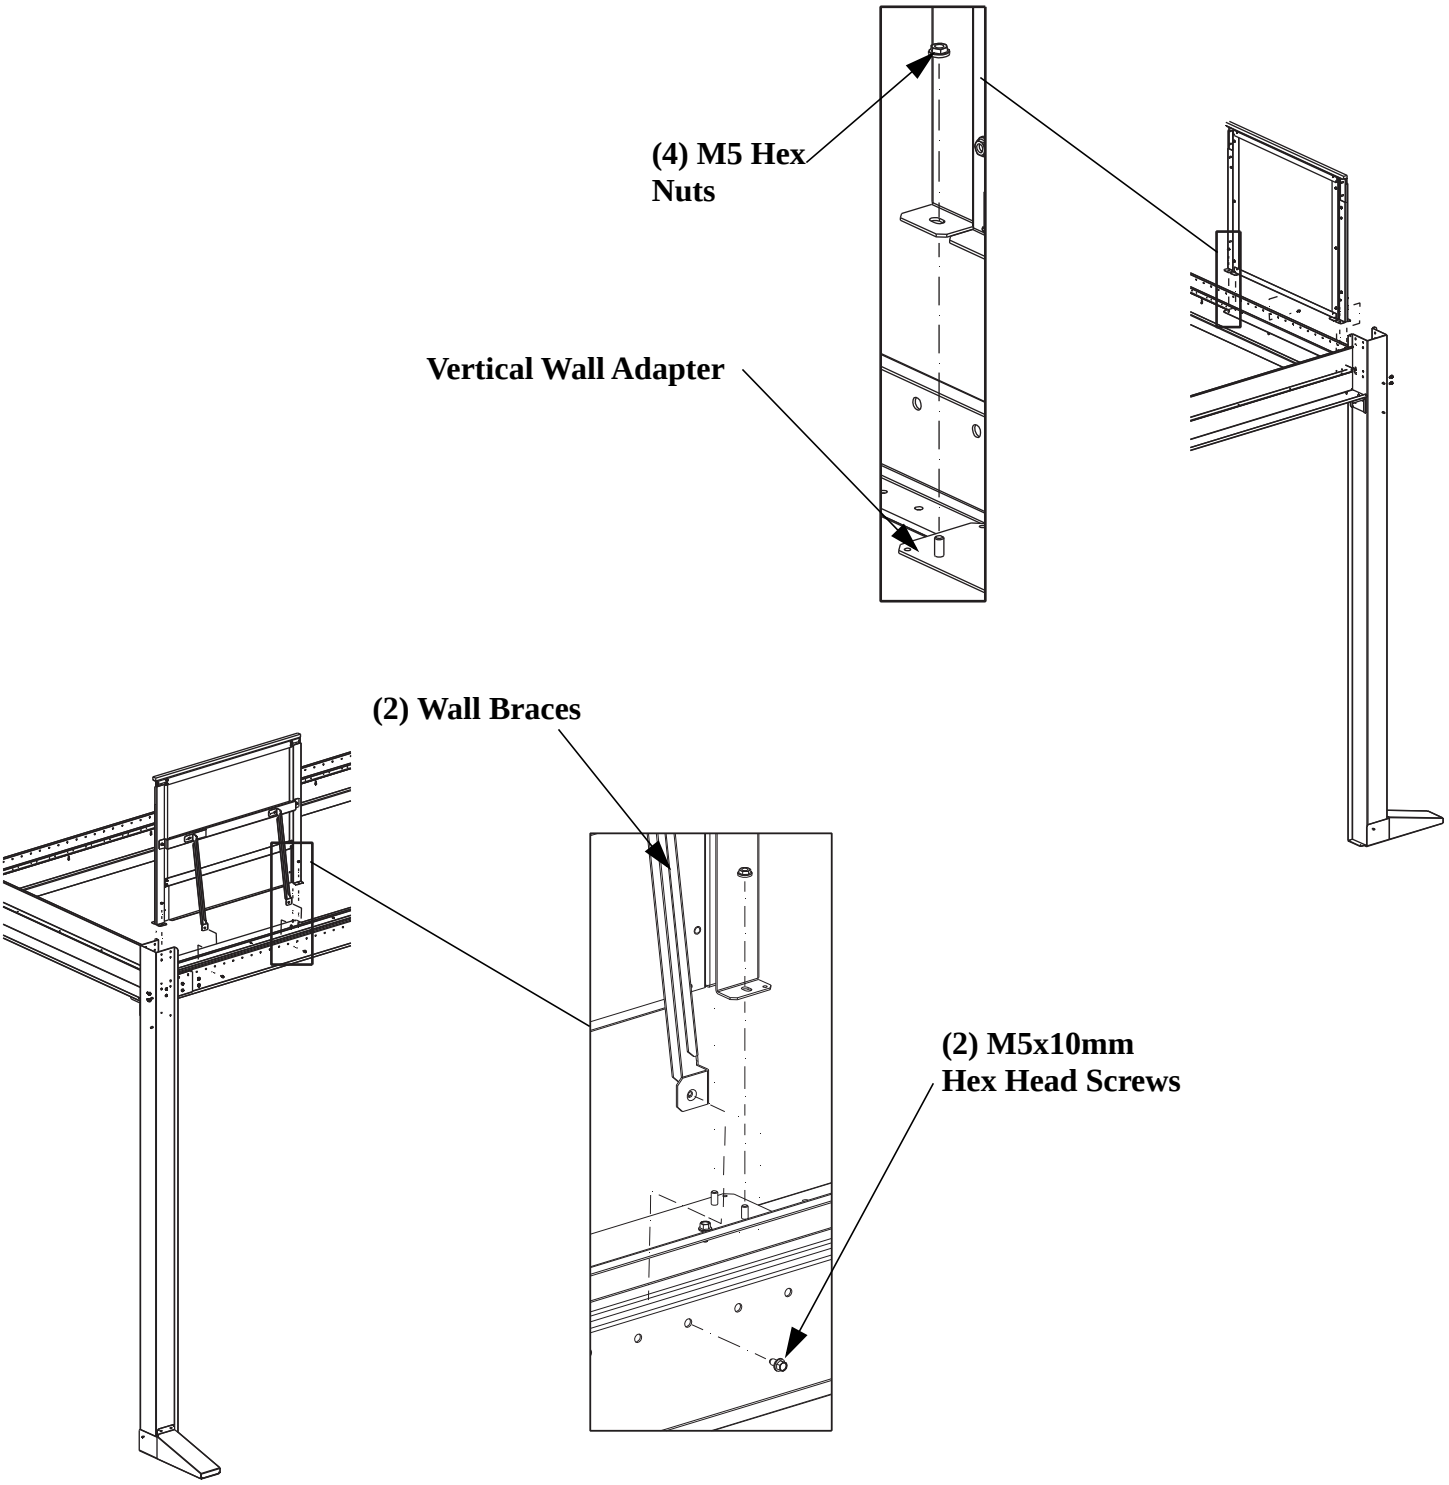

Setting Wall Panel Height

- Once wall panel is secured to cabinet, raise wall panel to desired height.
- Loosely, install the (2) adjustment screws on the front of the wall panel.
- Level relative to lower wall.
- Tighten adjustment screws to secure wall panel to desired height.

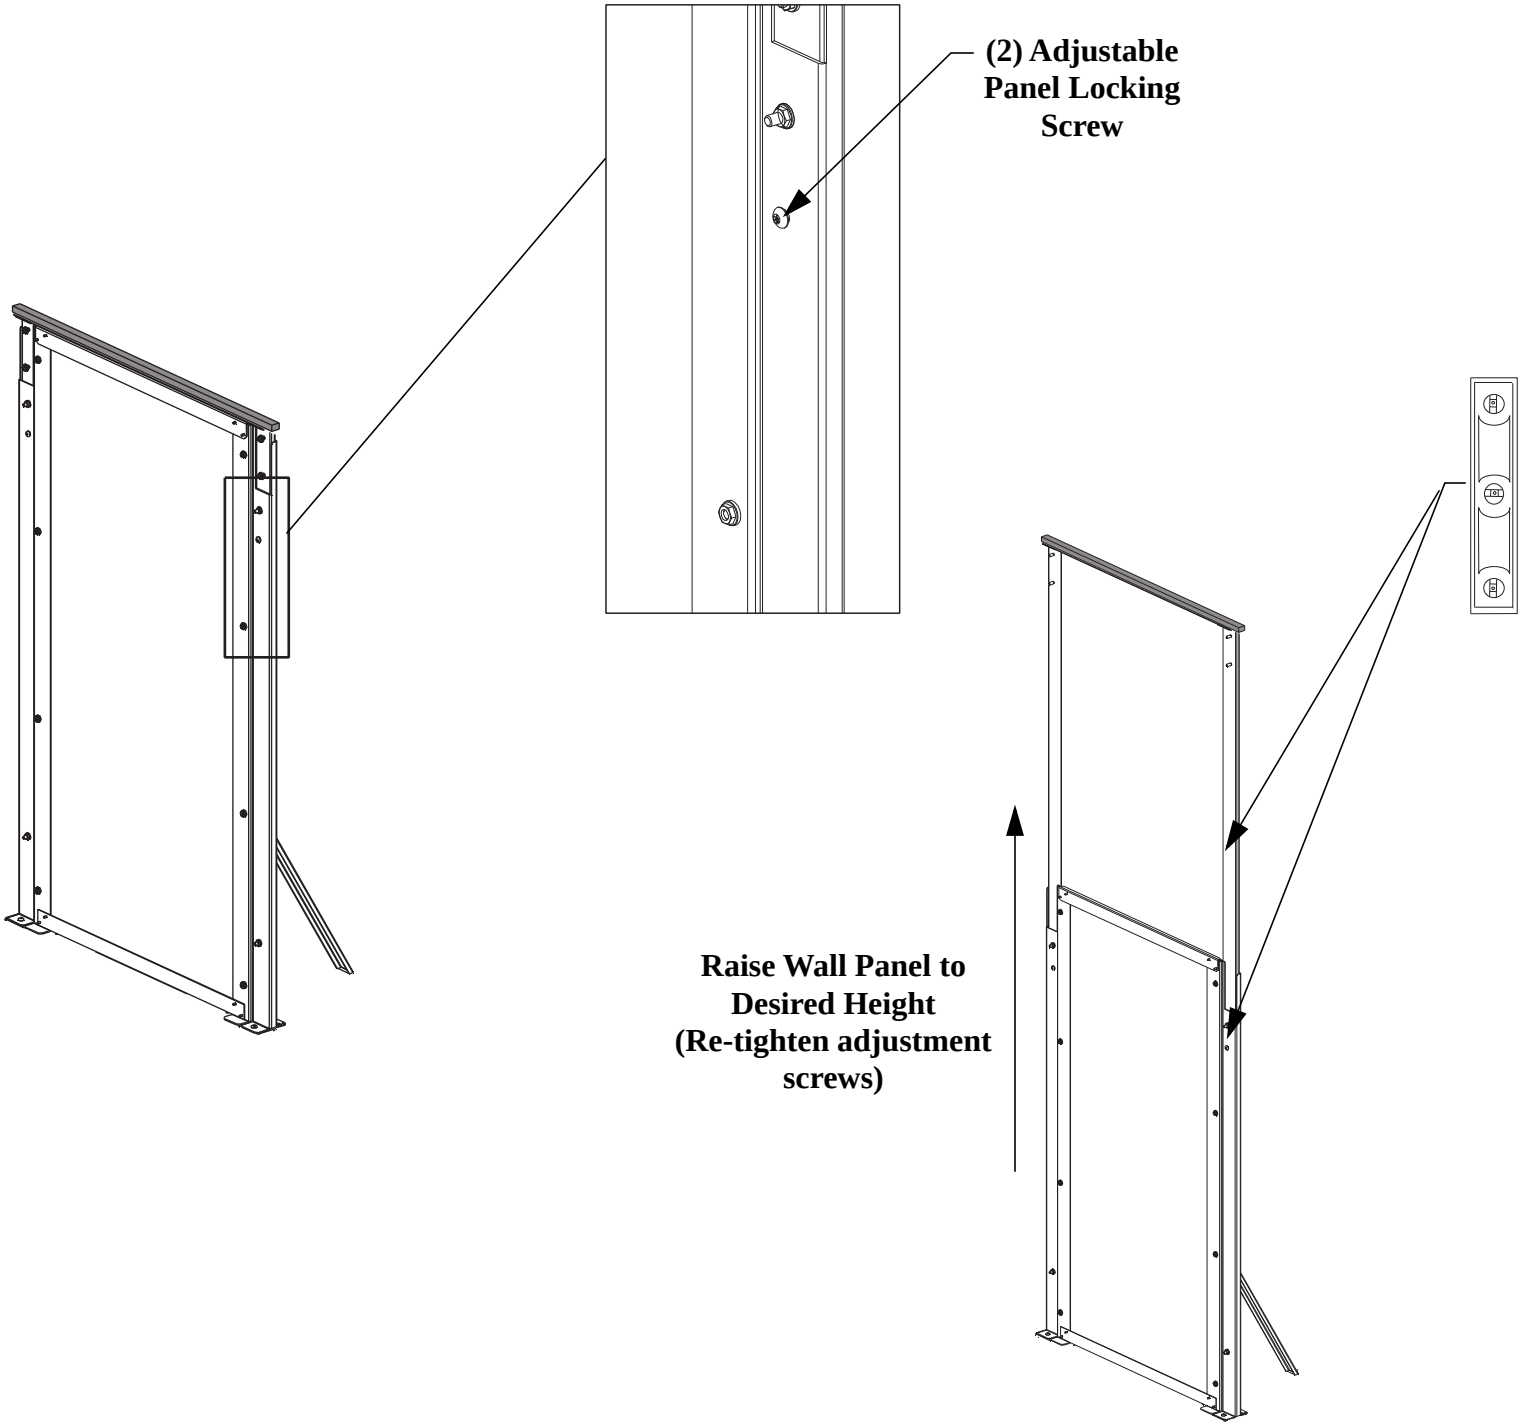

Sizing Upper Seal

- With wall panel in raised position, attach the upper seal to the wall panel with (4) M5 nuts and mark 1/8 inch above the cut out as shown in Step 1.
- Cut top seal along mark as shown in Step 2.

Step 1

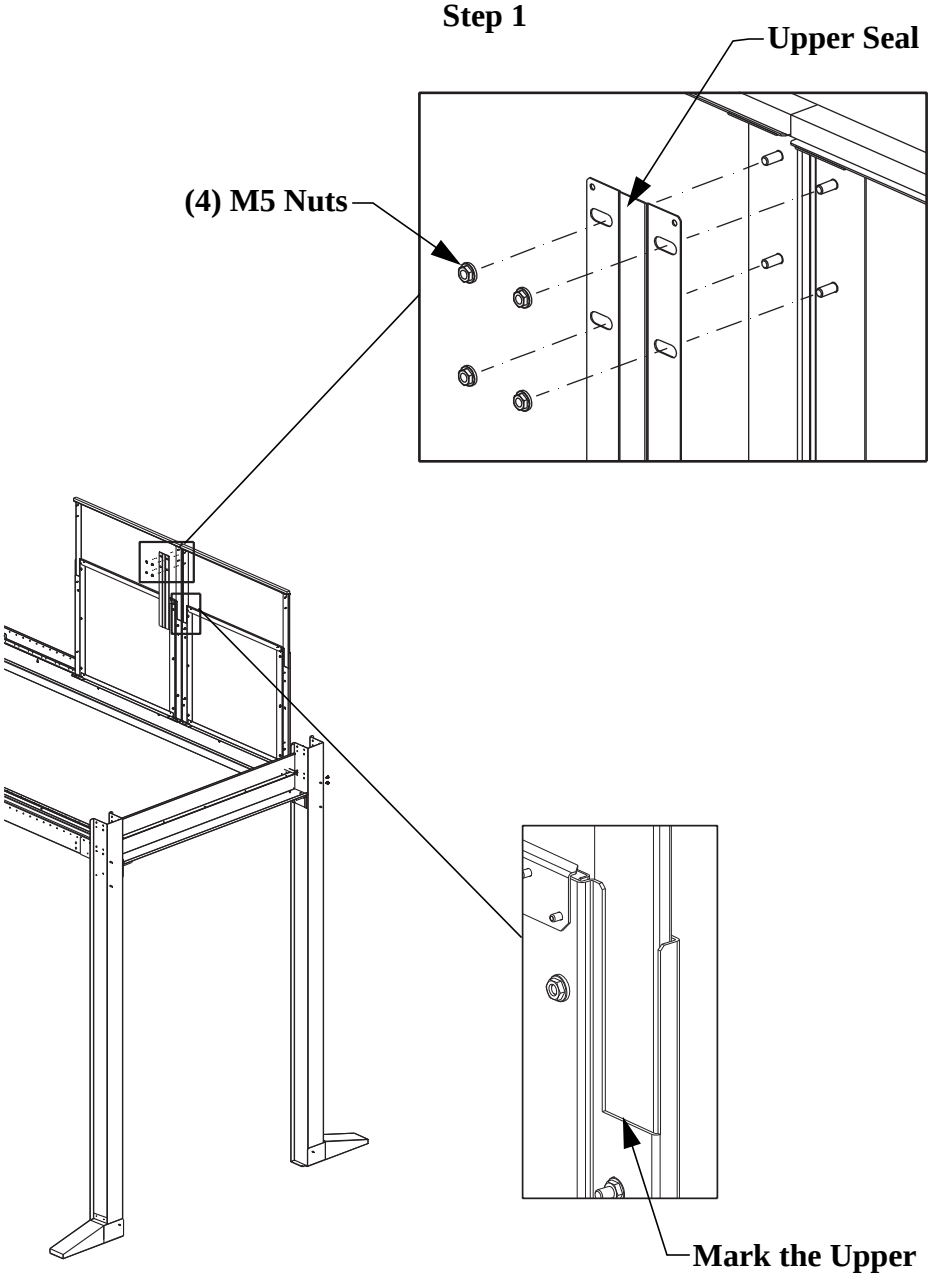

Step 2

Attaching Upper Seal

- Attach the top seal in between (2) wall panels with (4) M5 nuts.

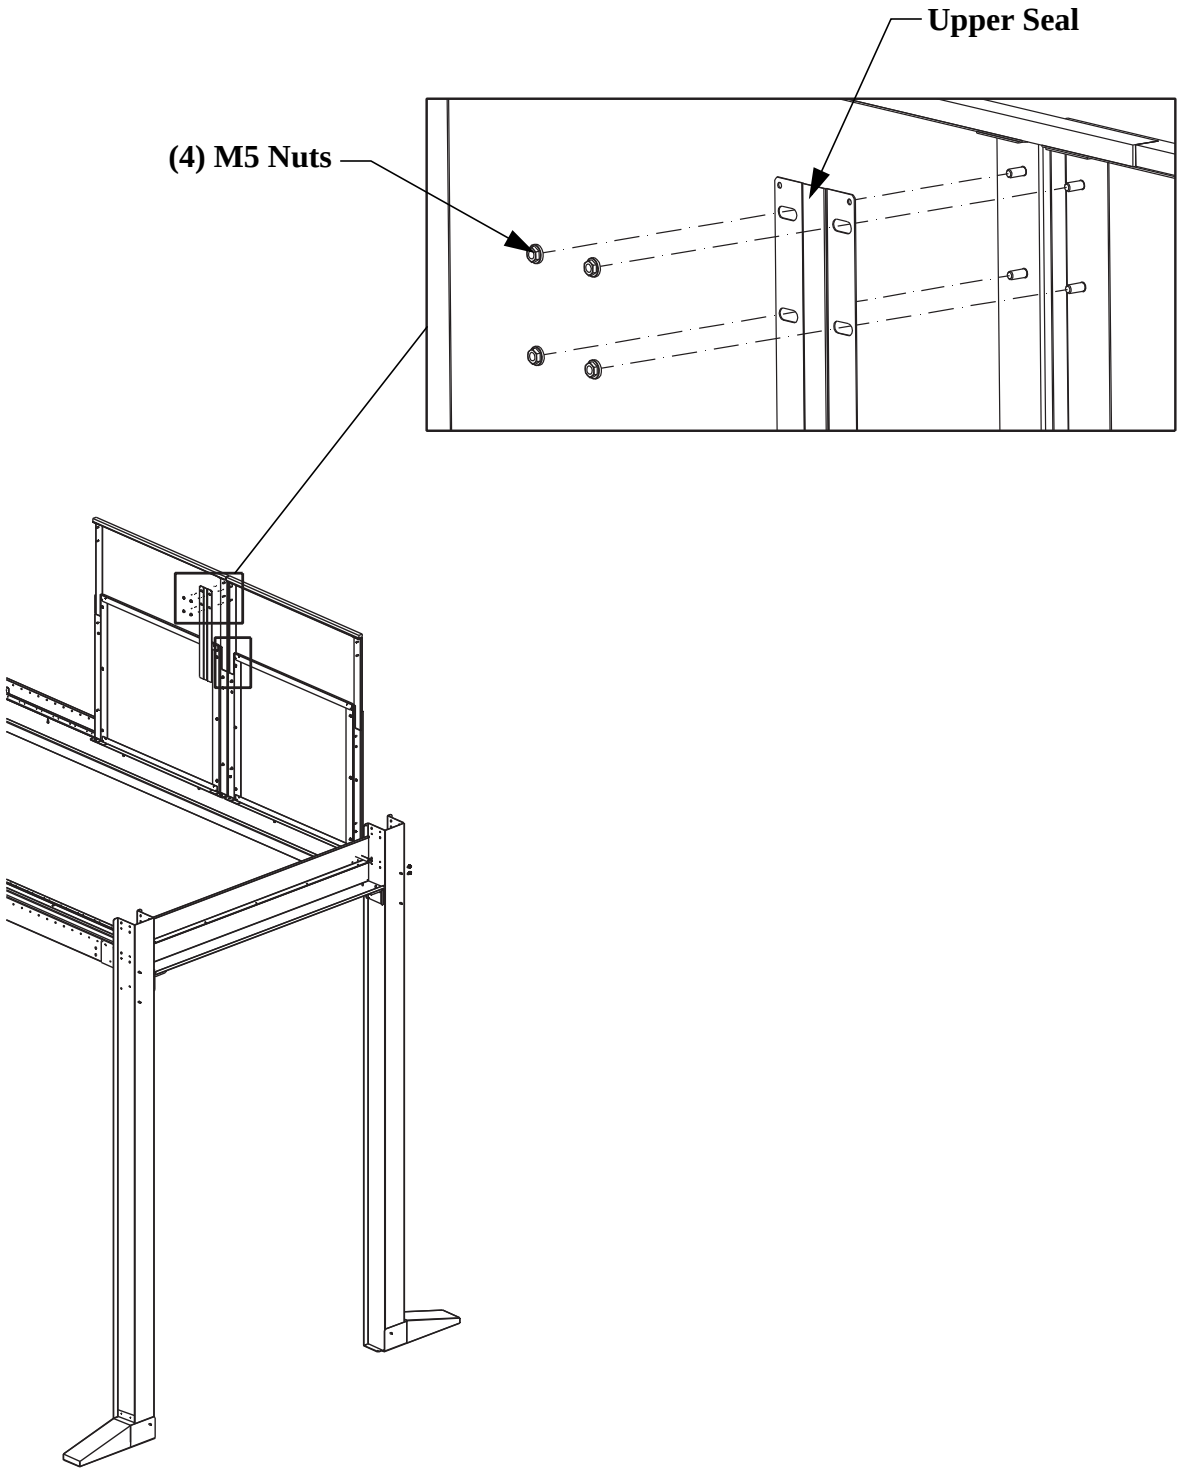

Attaching Foam to Lower Seal

- Attach the provided strip of .75W x .5H foam seal to the width of the bottom seal.

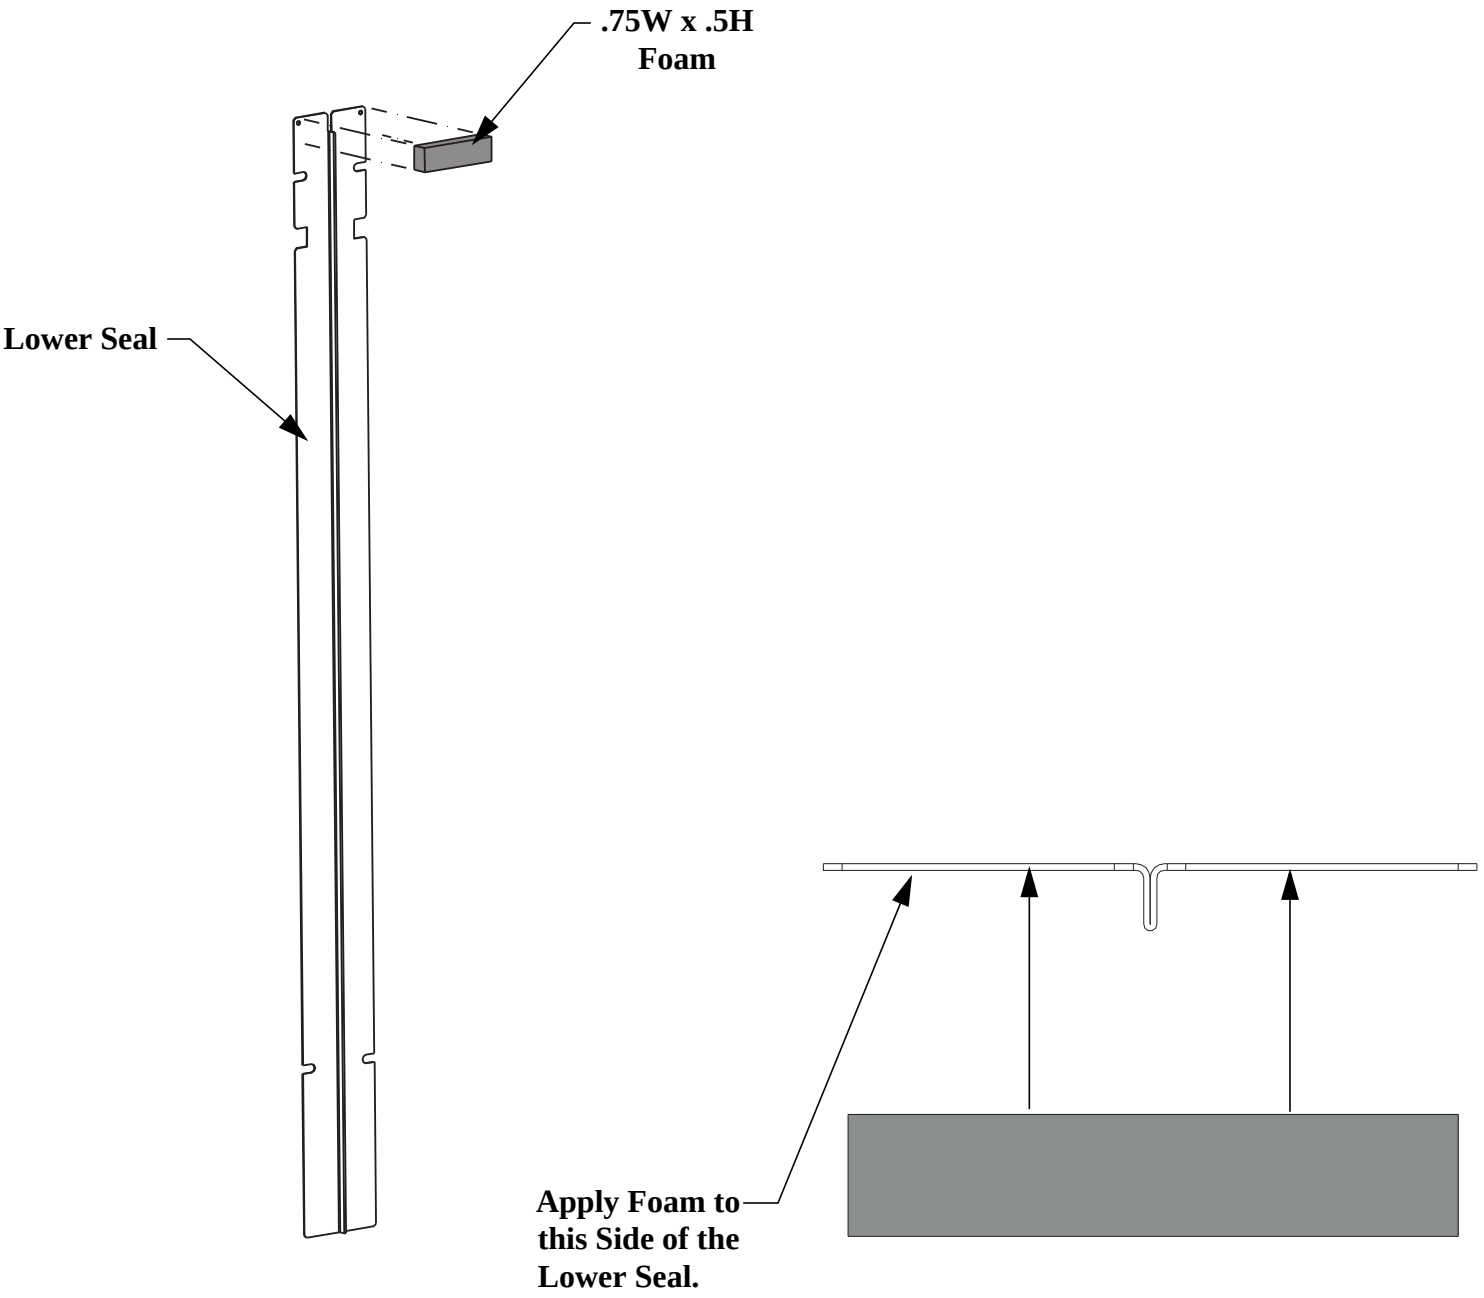

Attaching Lower Seal

- Using (4) M5 nuts, attach bottom seal with foam strip in between (2) wall panels.

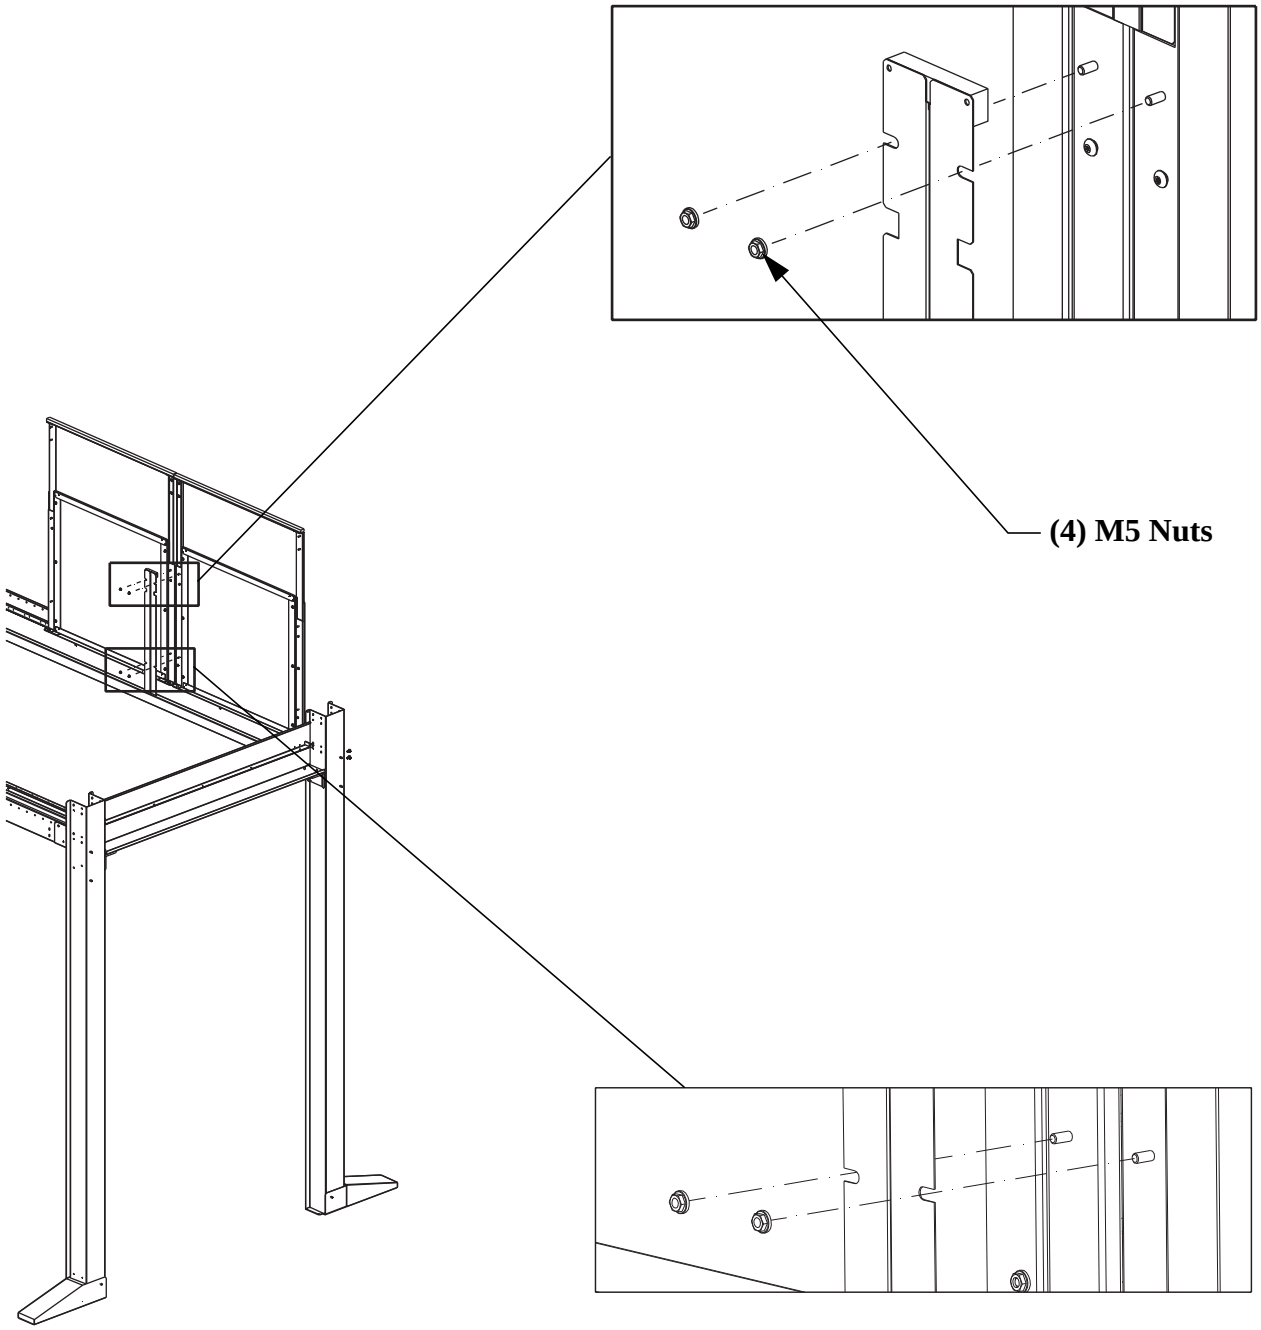

SECTION 5

INSTALLATION OF
END OF ROW VERTICAL WALL
C2HACERI1626**, C2HACERI2638**, C2HACERI3866**

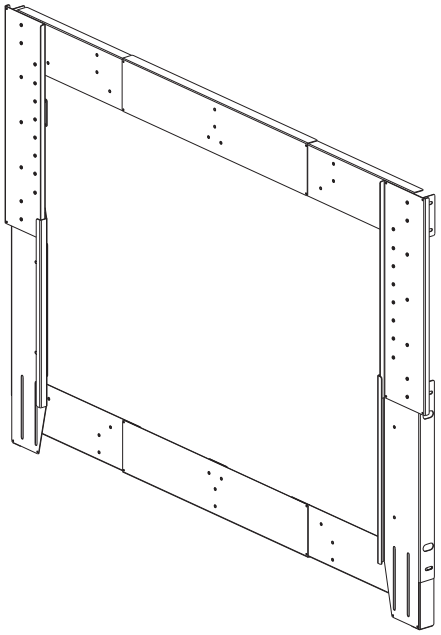

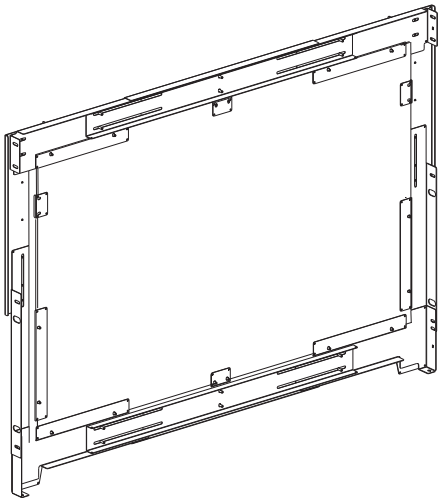

Attaching Lower Side Frame

- Attach lower side frame to the right wall panel with (1) M5 nut.
- Repeat process for left side.

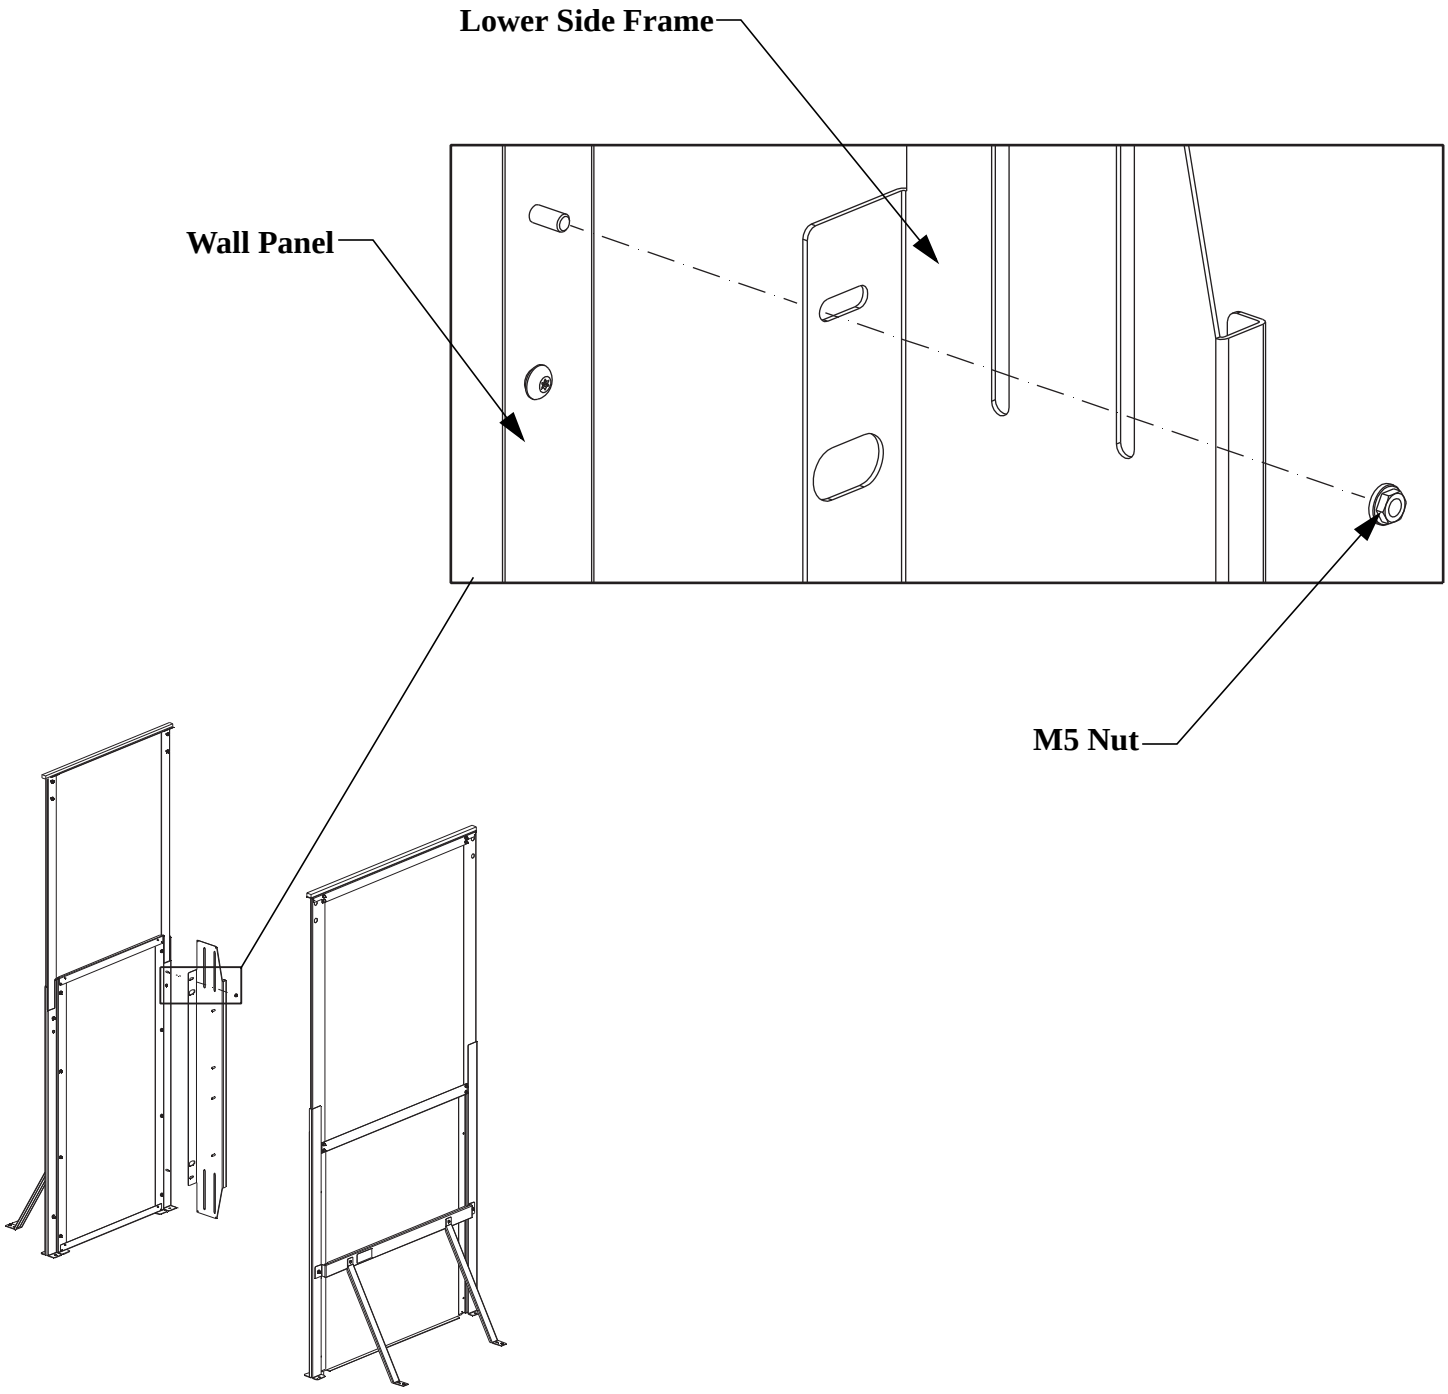

Attaching Lower Cross Beams

- Attach lower right cross beam to the bottom of the right wall panel with (2) M5 nuts.
- Secure lower right cross beam to the top of the vertical wall adapter.
- Repeat process for left side.

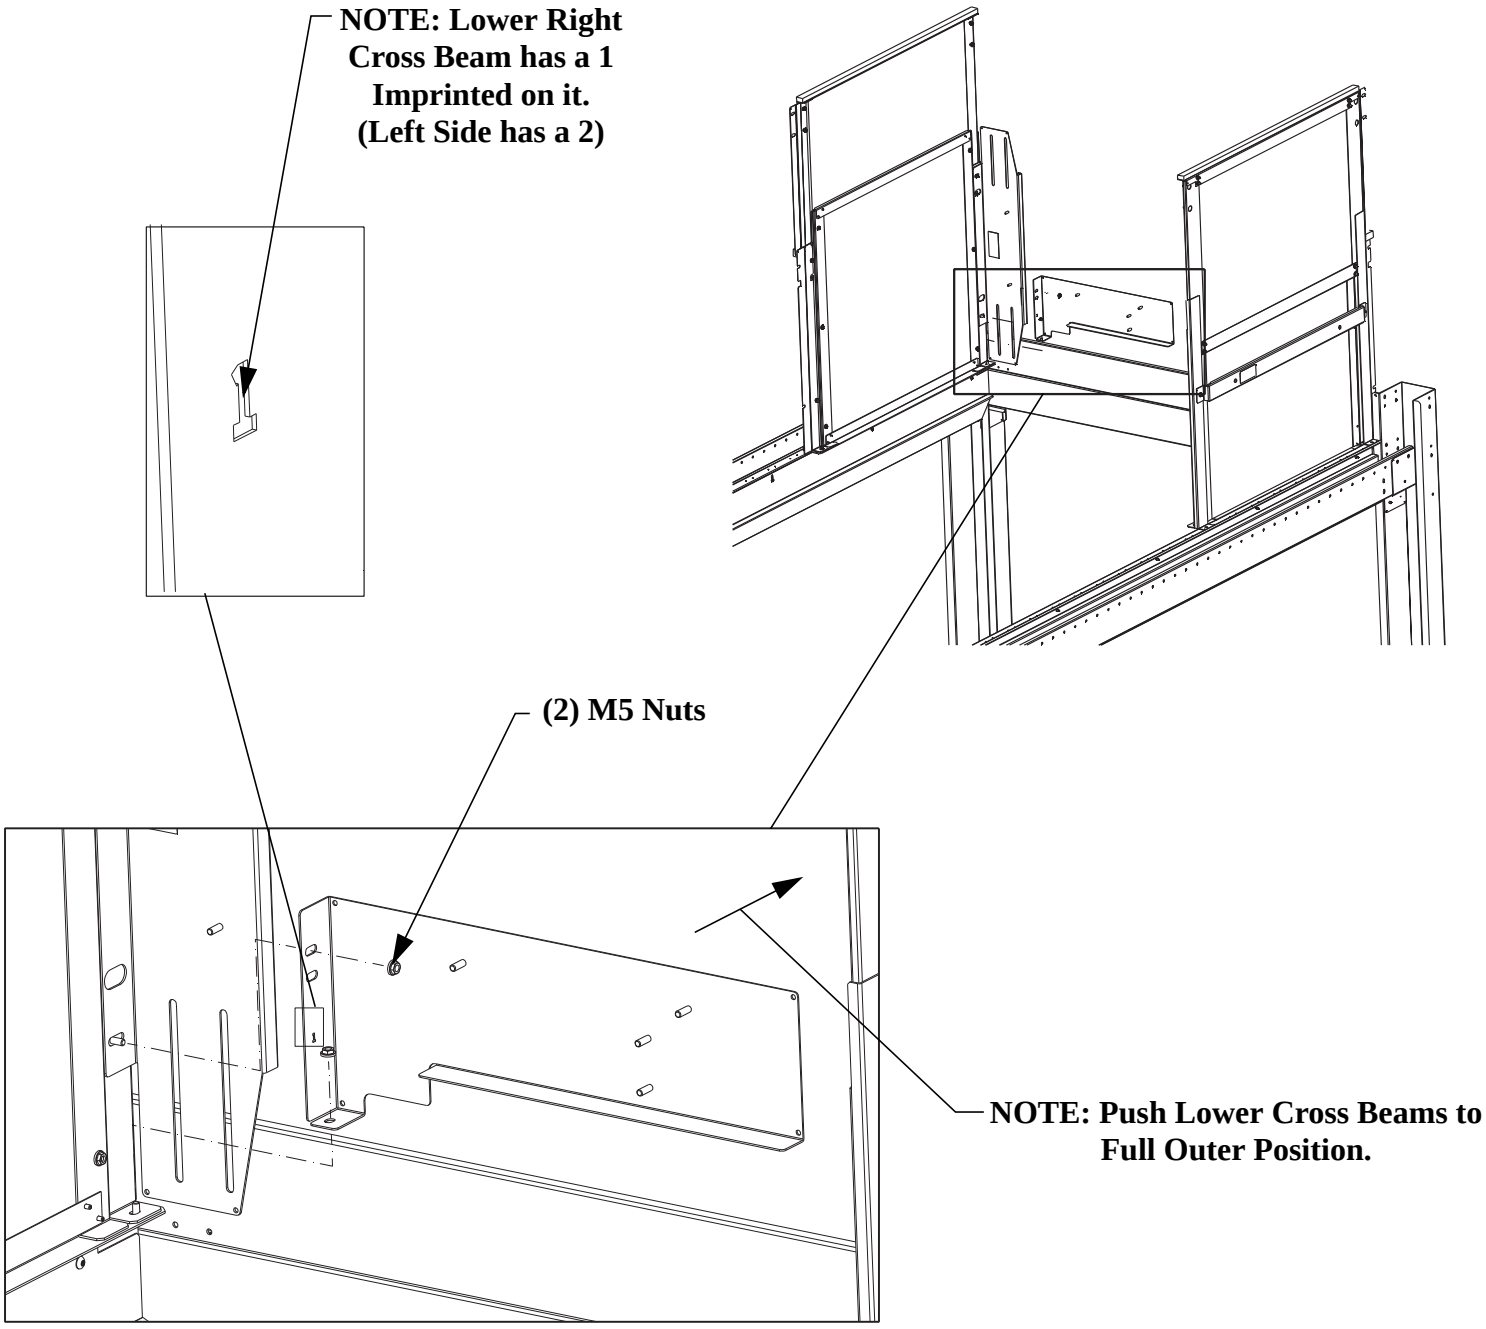
NOTE: Lower Right Cross Beam has a 1 Imprinted on it. (Left Side has a 2)
(2) M5 Nuts
NOTE: Push Lower Cross Beams to Full Outer Position.

Attaching Upper Cross Beams

- Secure the upper right cross beam to the top of the right wall panel with (2) M5 Nuts.
- Repeat process for upper left cross beam.

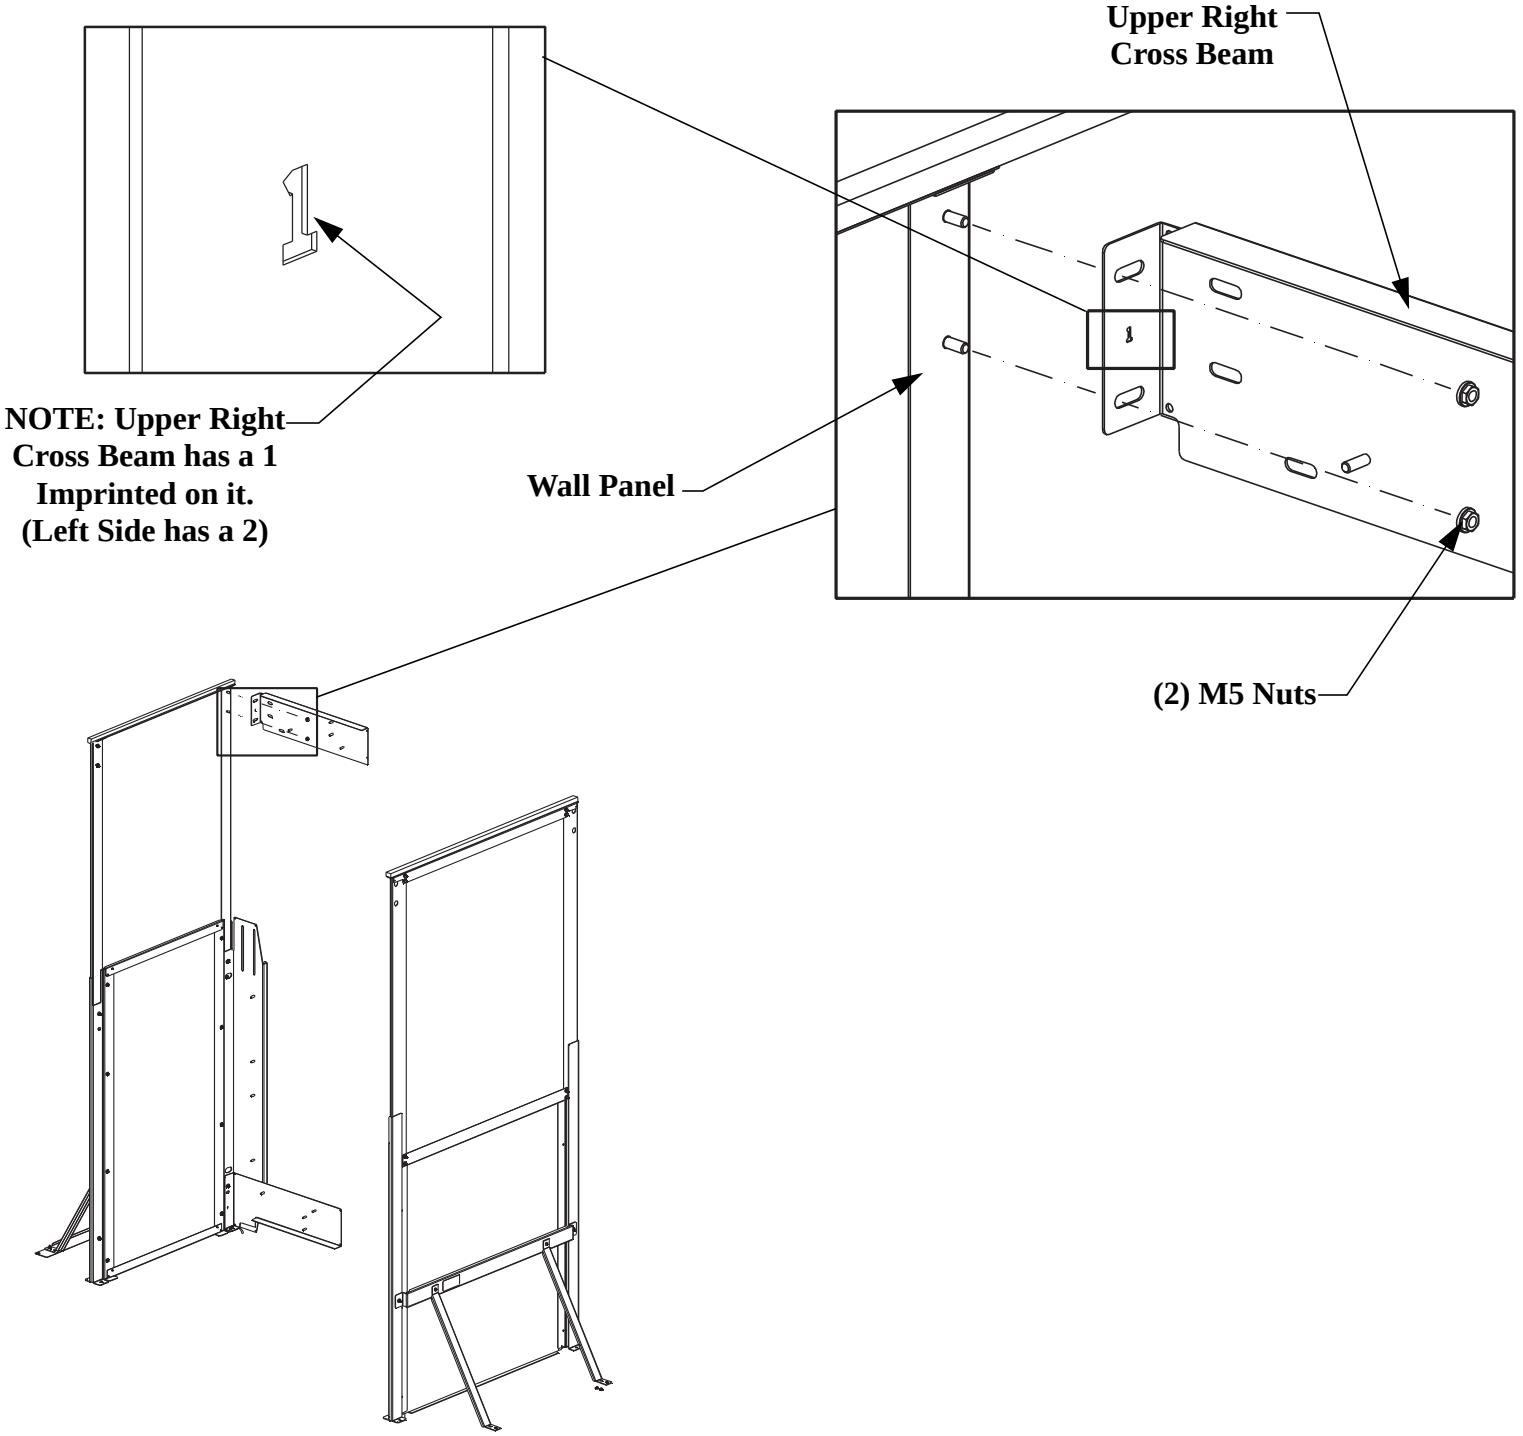

Attach Foam Seal to Upper Side Frame

- Attach (1) strip of .5x.25 inch foam next to the inside flange of each of the upper side brackets.

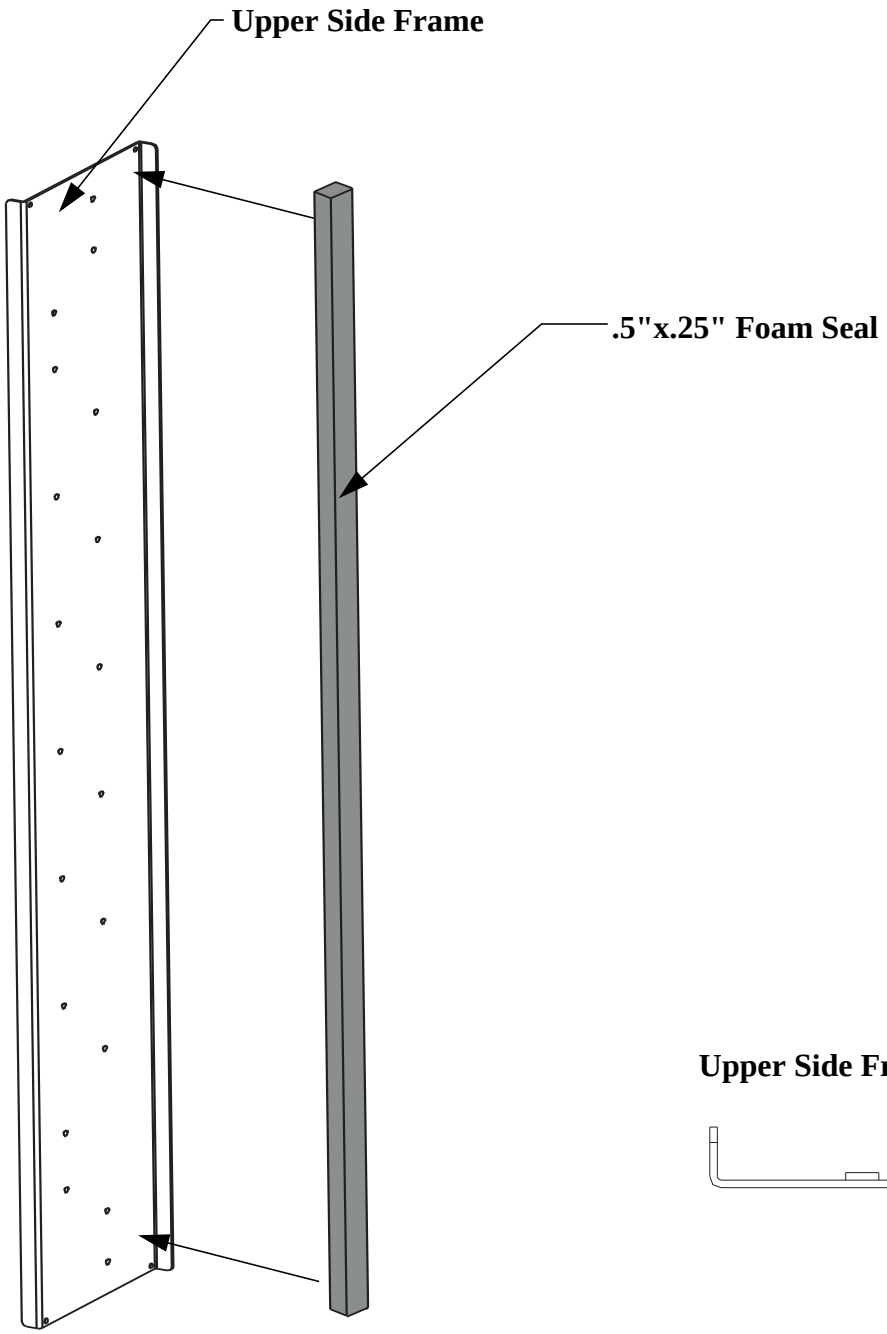

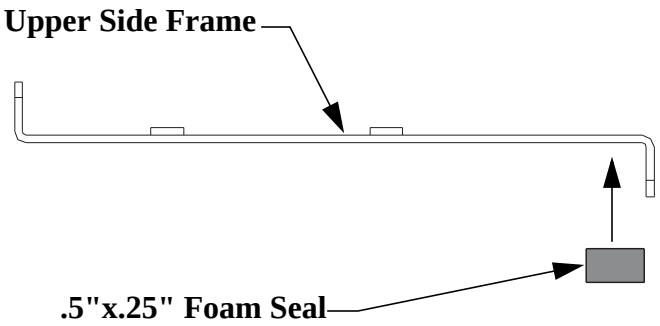

Top View

Attaching Upper Side Frame

- Attach (1) upper side frame to the upper right cross beam with (3) M5 12mm screws
- Secure upper side frame to lower side frame with (3) M5 12mm screws
- Repeat process for left side.

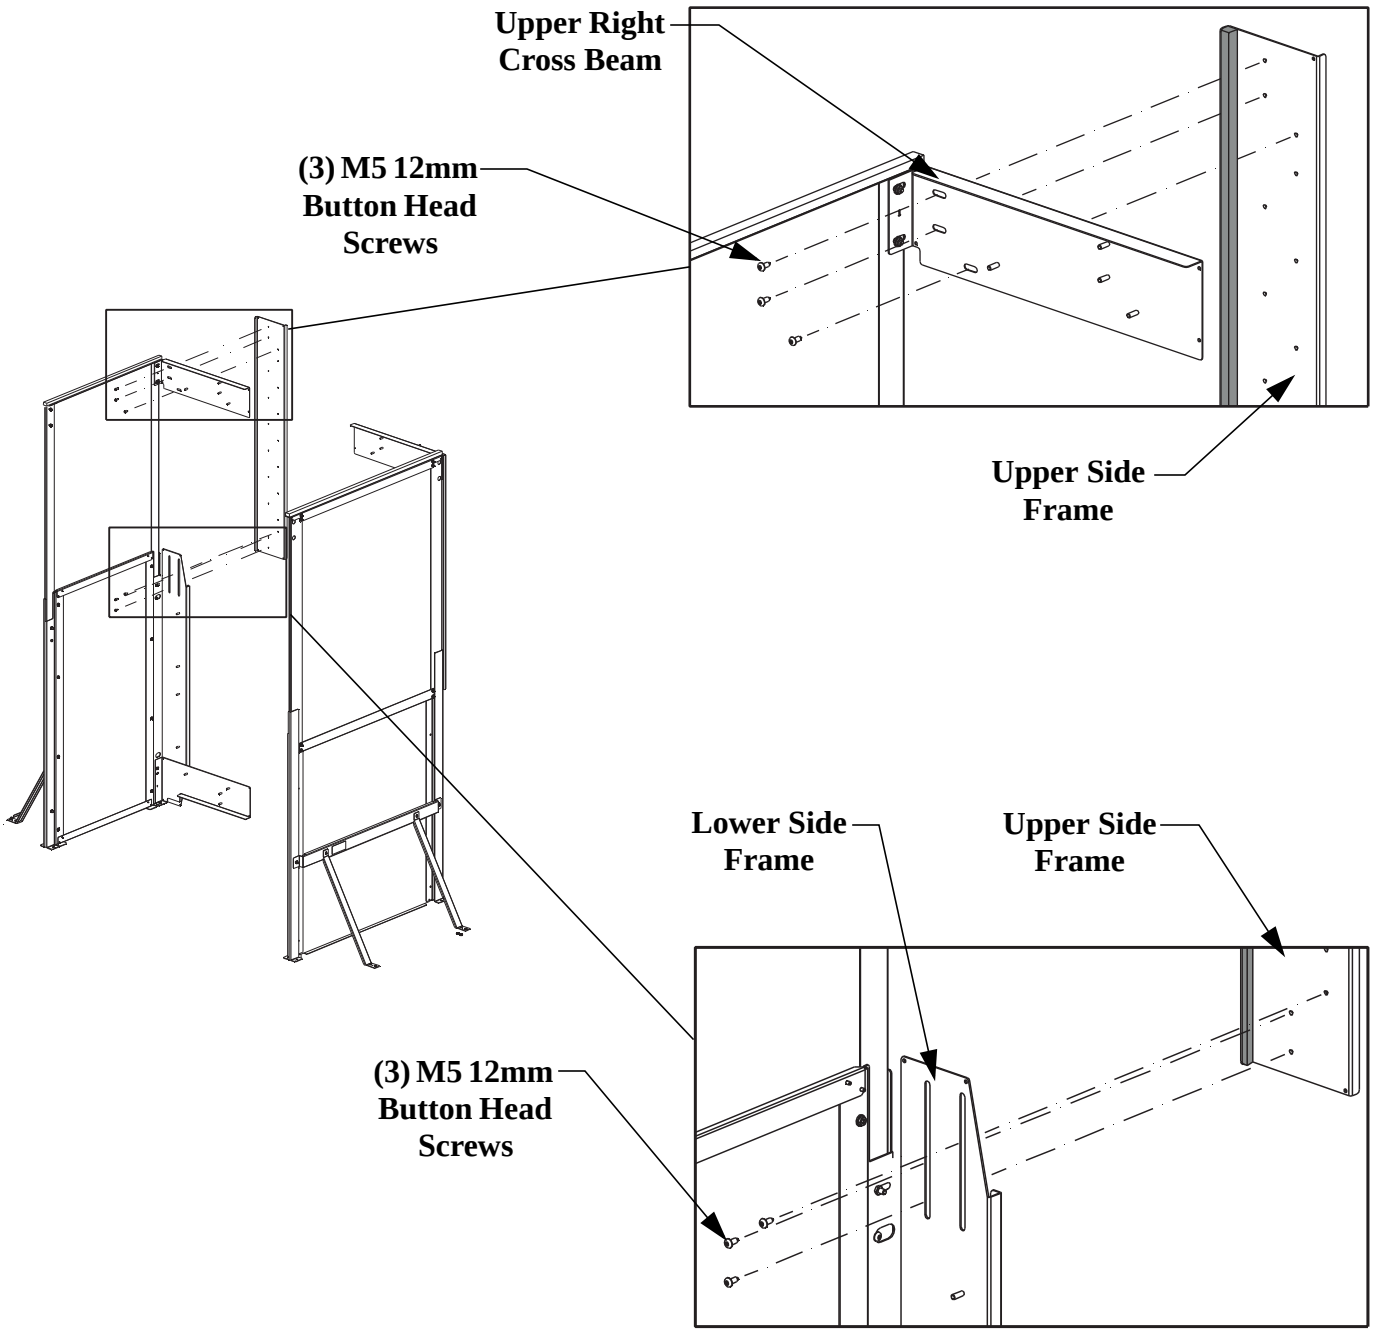
Upper Right Cross Beam
(3) M5 12mm Button Head Screws
Upper Side Frame
Lower Side Frame
Upper Side Frame
(3) M5 12mm Button Head Screws

Attach Center Cross Beams

- Attach (1) center cross beam to upper right cross beam with (2) M5 nuts (do not tighten).
- Attach same center cross beam to upper left cross beam with (2) M5 nuts (do not tighten).
- Make sure the center cross beam is centered between the upper left cross beam and the upper right cross beam.
- Tighten nuts.
- Repeat process for lower right and lower left cross beams.

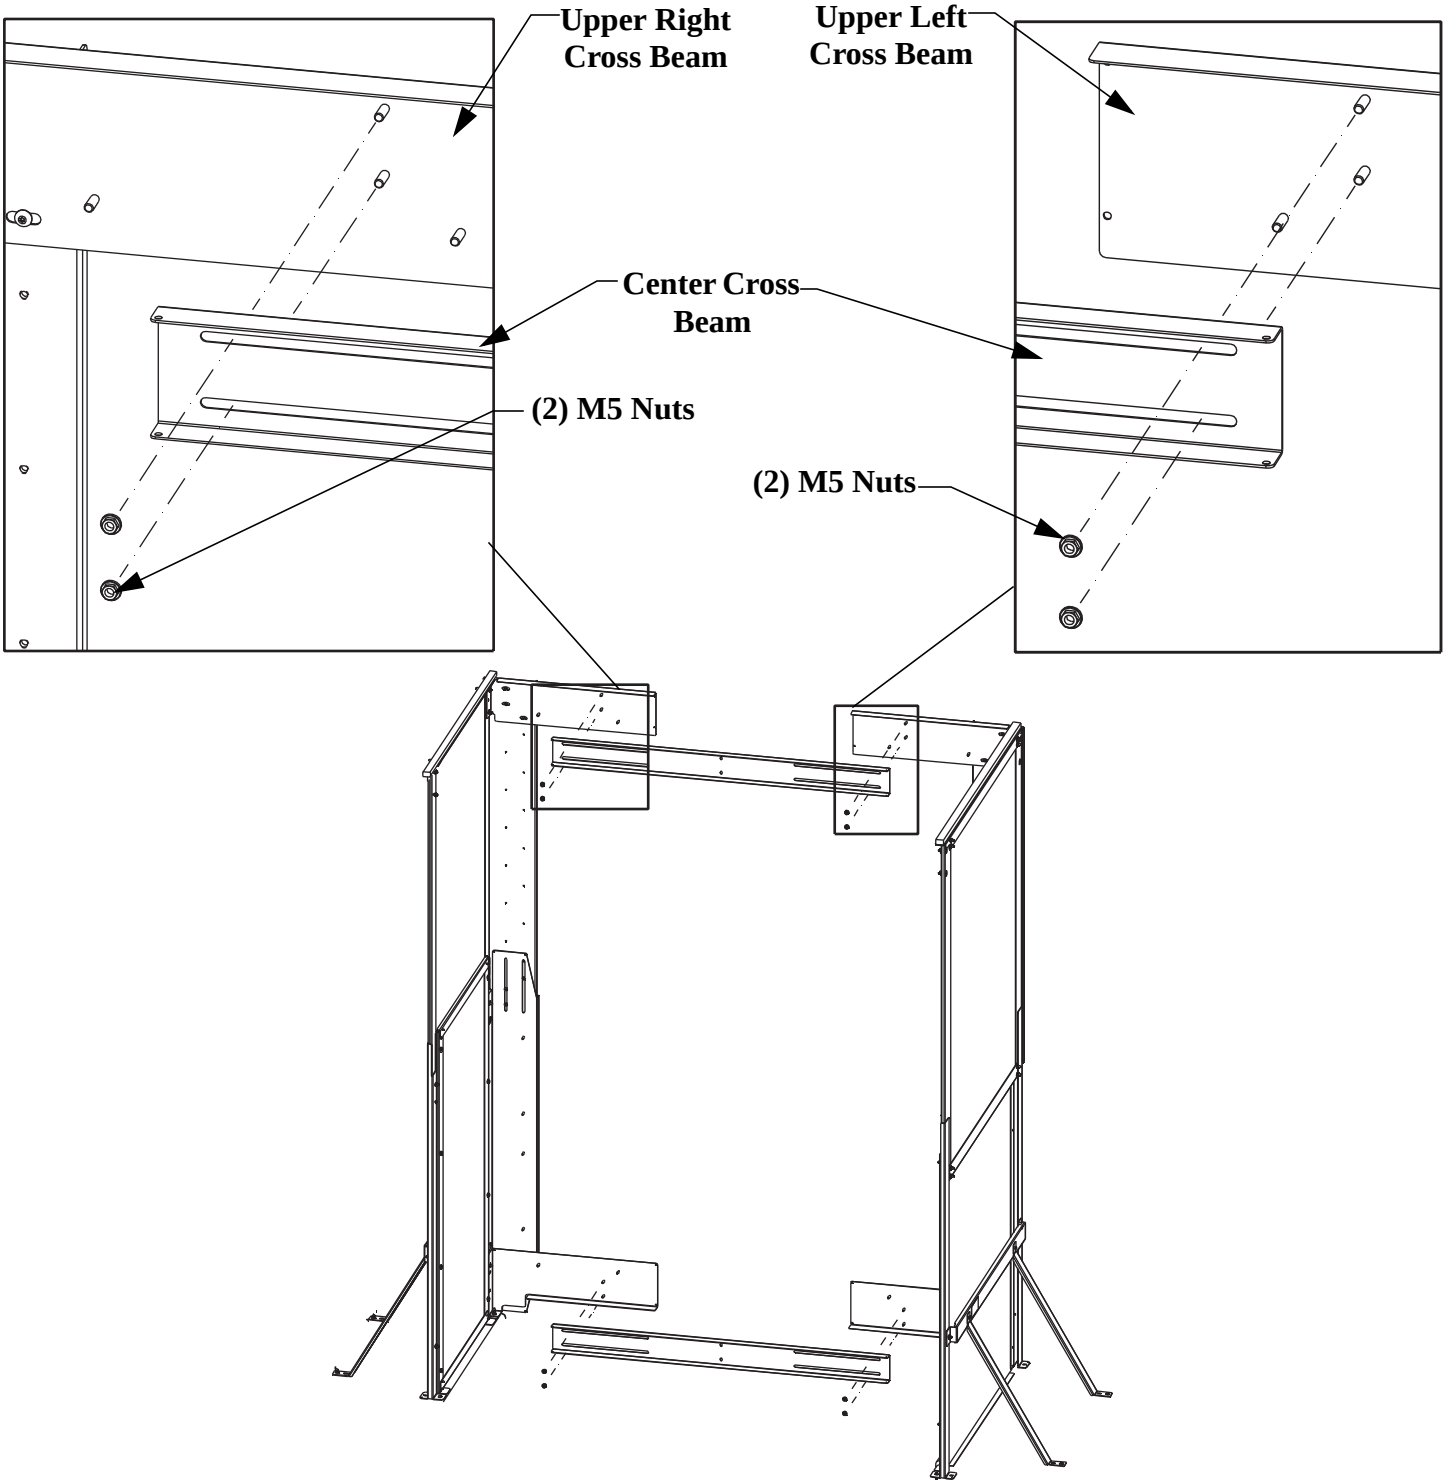

Attach Center Frames

- Attach (1) center frame to the upper center cross beam with (2) M5 nuts.
- Repeat process for lower center cross beam.

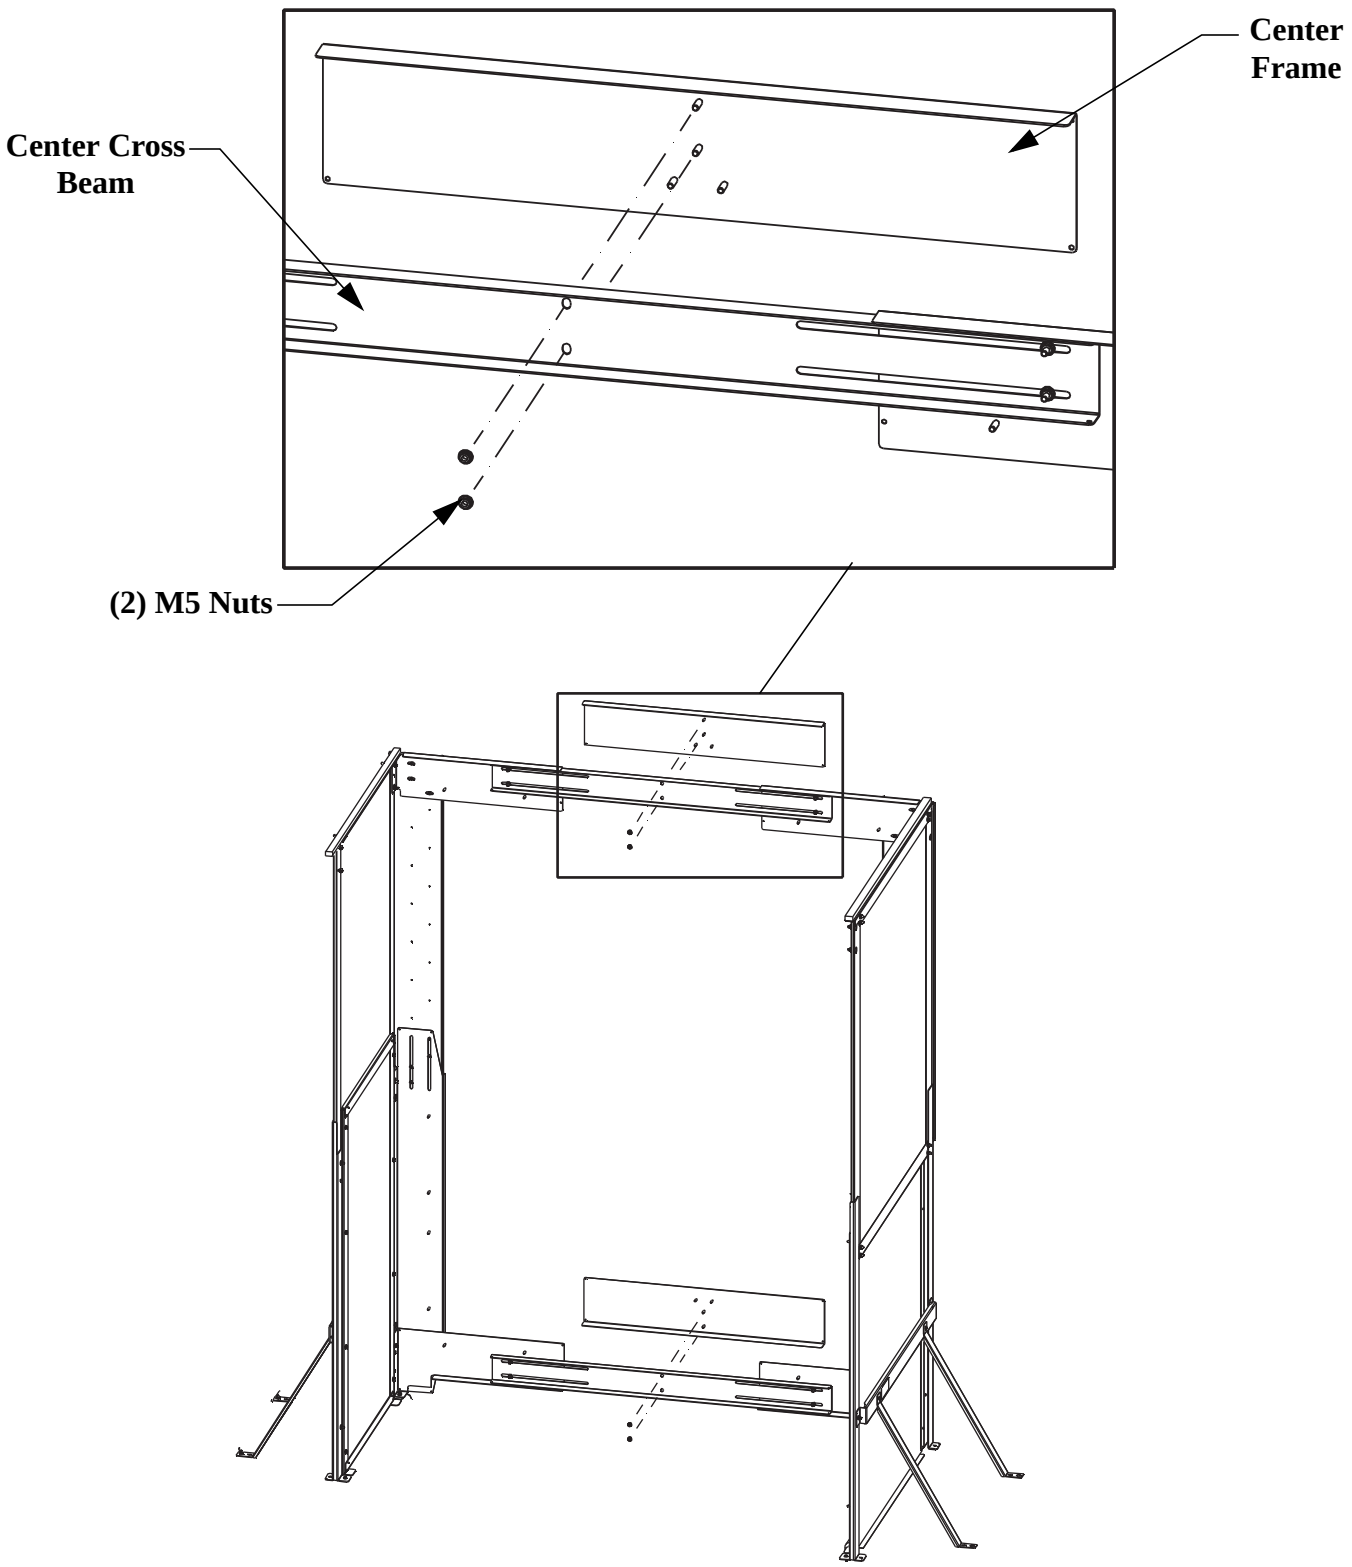

Assemble H Channel [For End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866) Only]

Using (1) M5x12mm button head torx screws, attach the inside H Channel to the outside H channel.

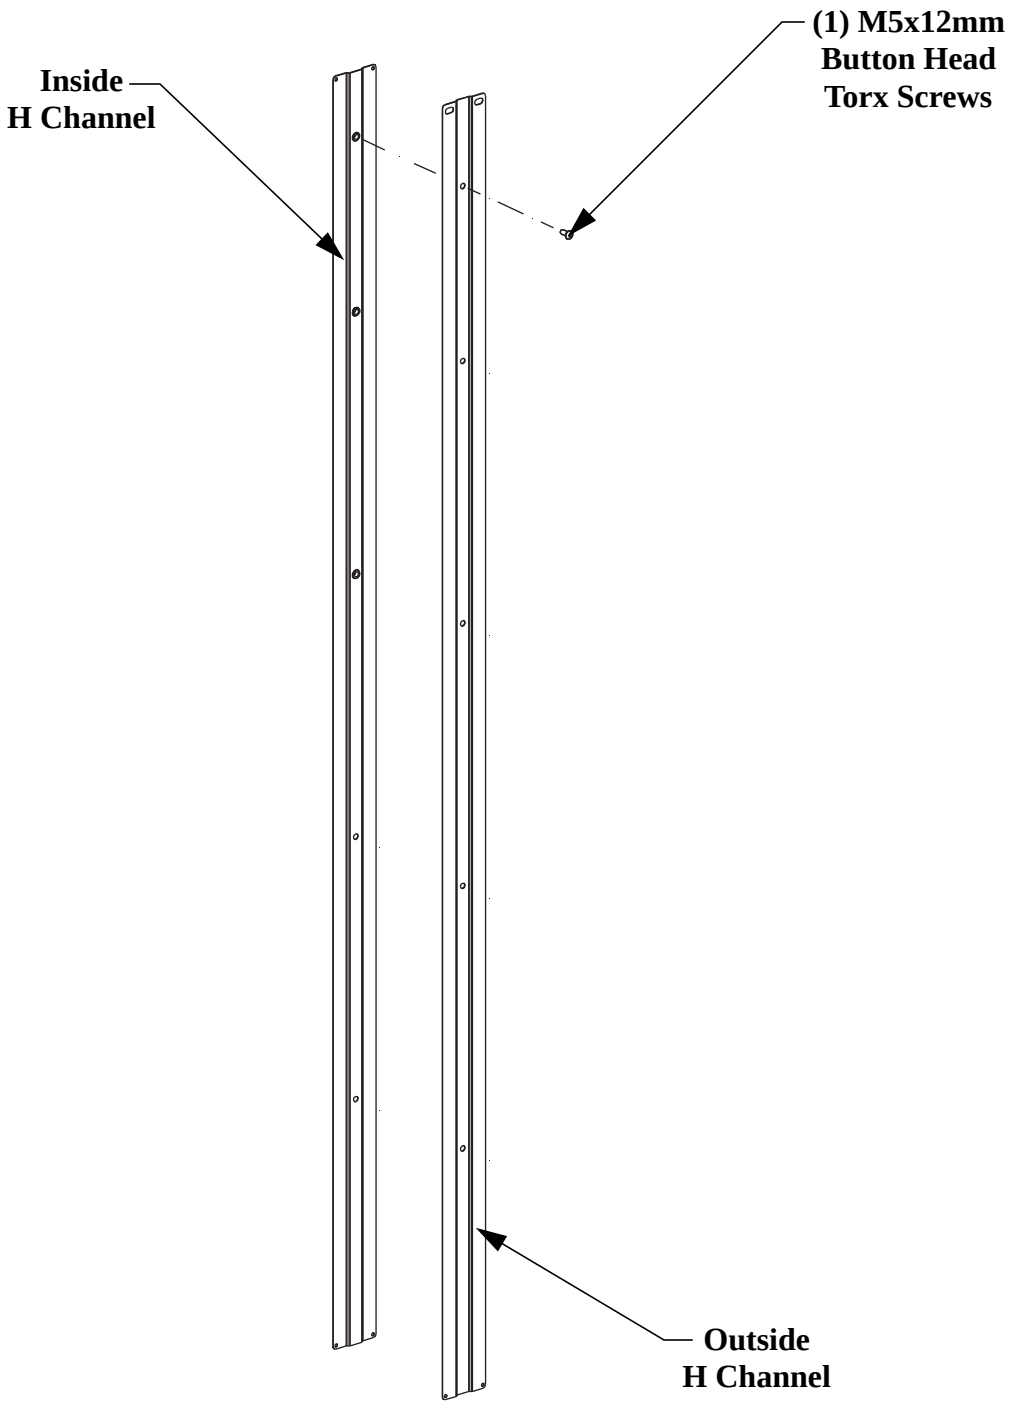

Attach H Channel to Center Frame [For End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866) Only]

- Attach H channel to the center frame with (2) M5 hex nuts.

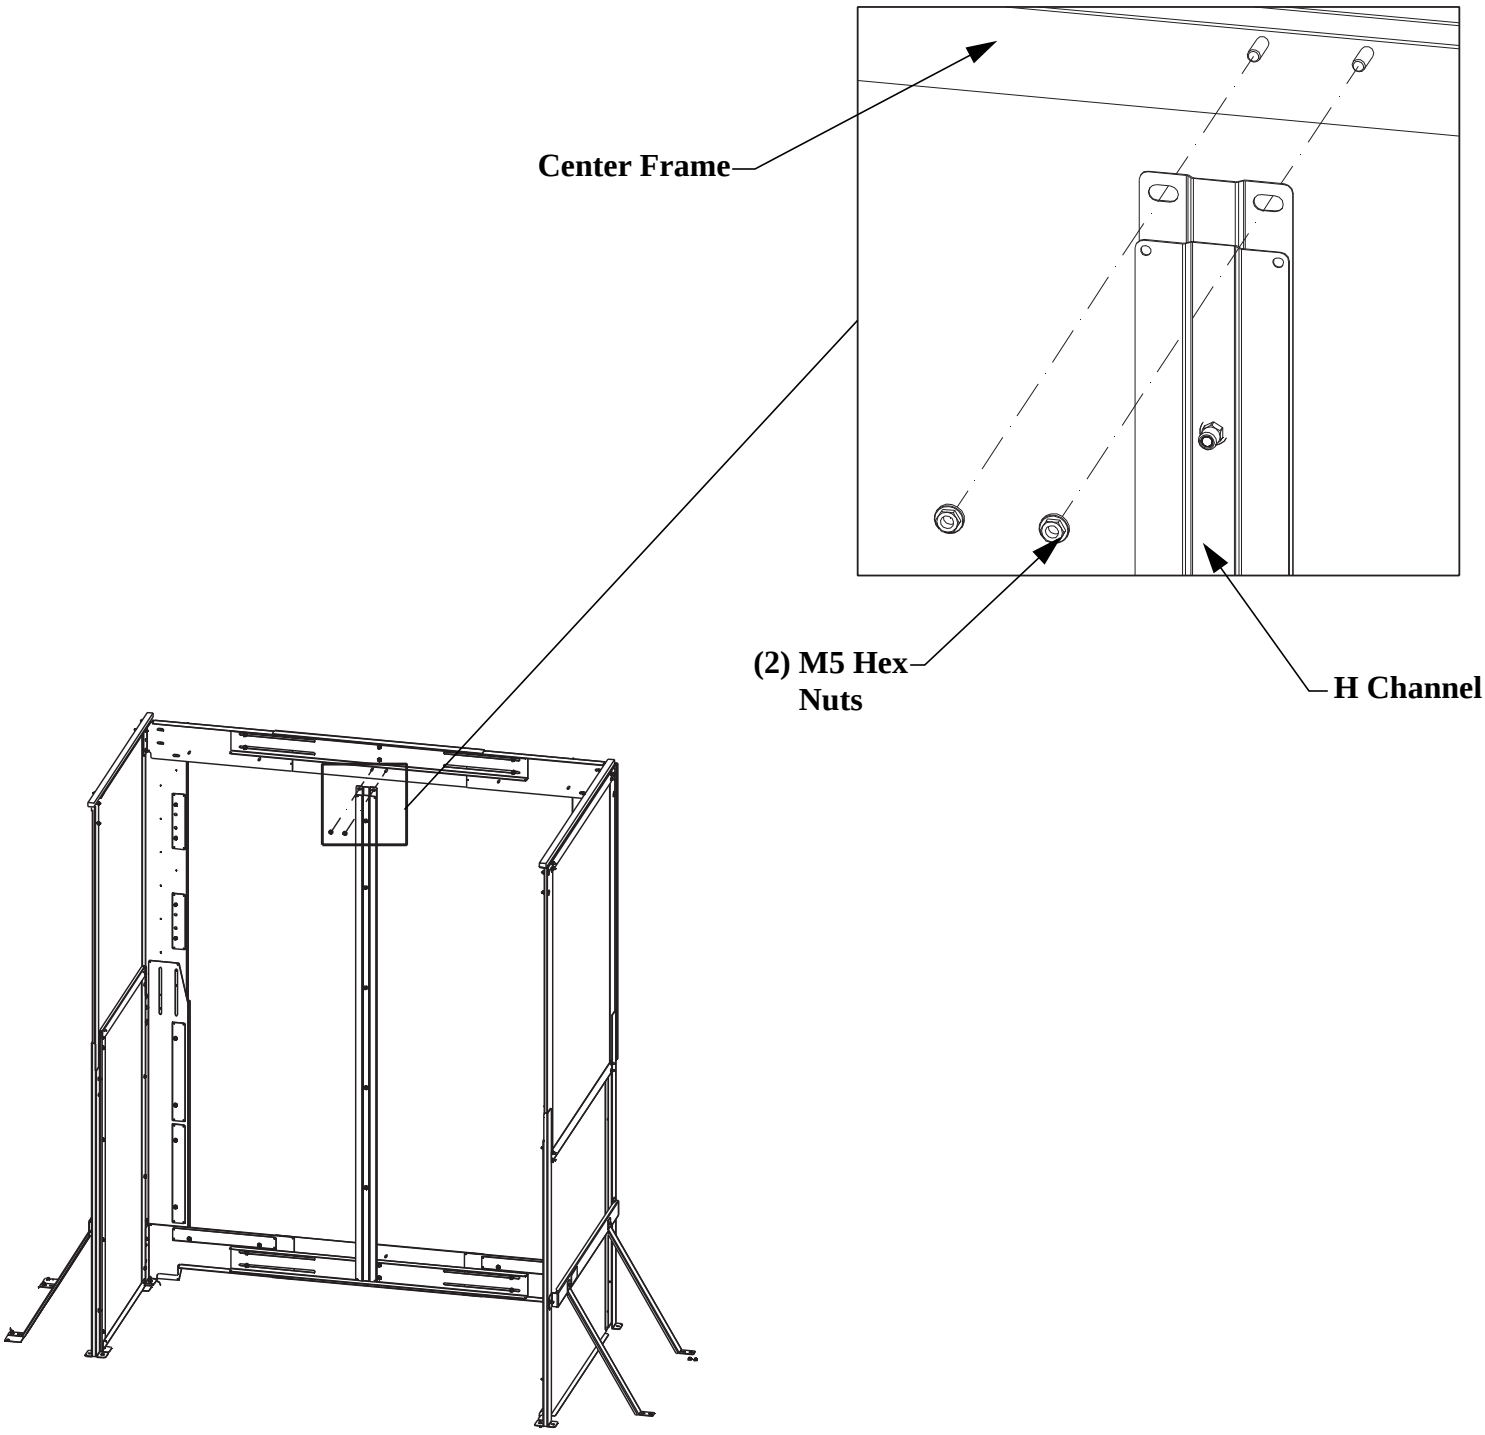

Mark and Cut H Channel [For End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866) Only]

- Make a mark on the inside and outside H Channels above the threaded studs on the lower center frame and below the edge of the lower center frame.
- Detach H Channel assembly from top center frame.
- Separate the inside H Channel from the outside H Channel.

Step 1

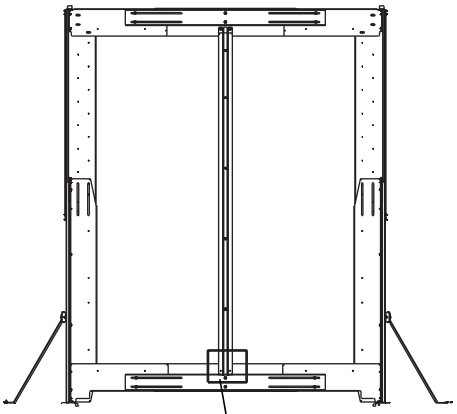

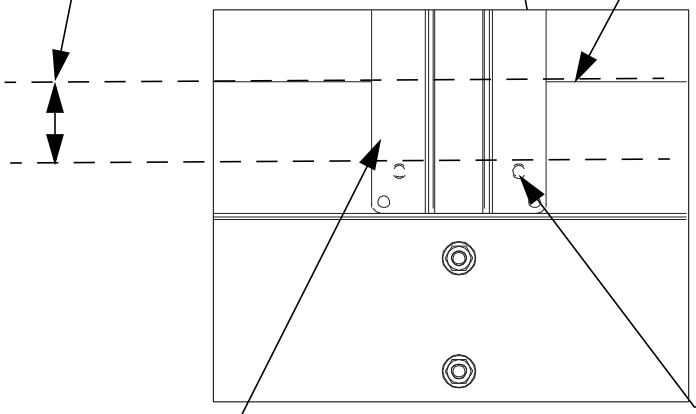
Mark the H Channel Above Studs on Lower Center Frame and Below the Edge of the Lower Center Frame.
Edge of Lower Center Frame
H Channel
Threaded Studs on Lower Center Frame

Step 2

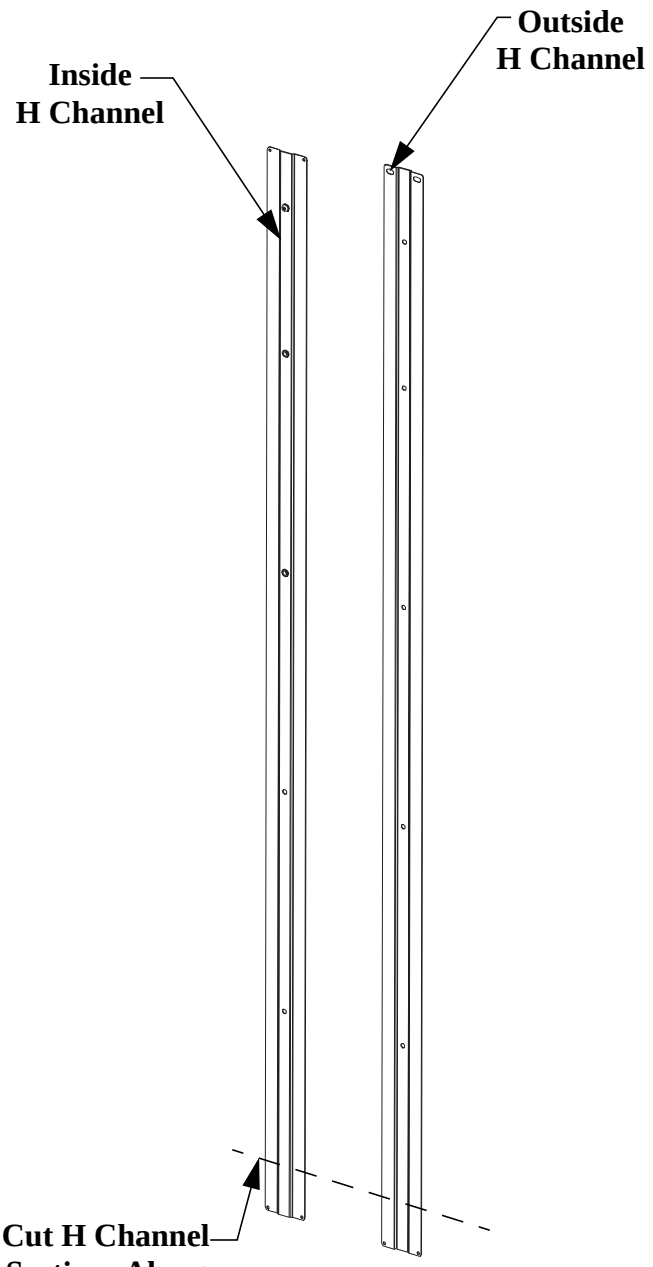

Measure and Cut Wall Panel

- Measure distance between top and bottom studs in frame. (Shown as distance "Y")
- Measure distance between left and right studs in frame. (Shown as distance "X")
- Cut wall panel to match lengths "X" and "Y" using a sharp knife and a straight edge.
- Note: For End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866) the combined width of wall panels and H Channel should total length "X". When trimming length "X", trim the sides equally to keep the H Channel centered.

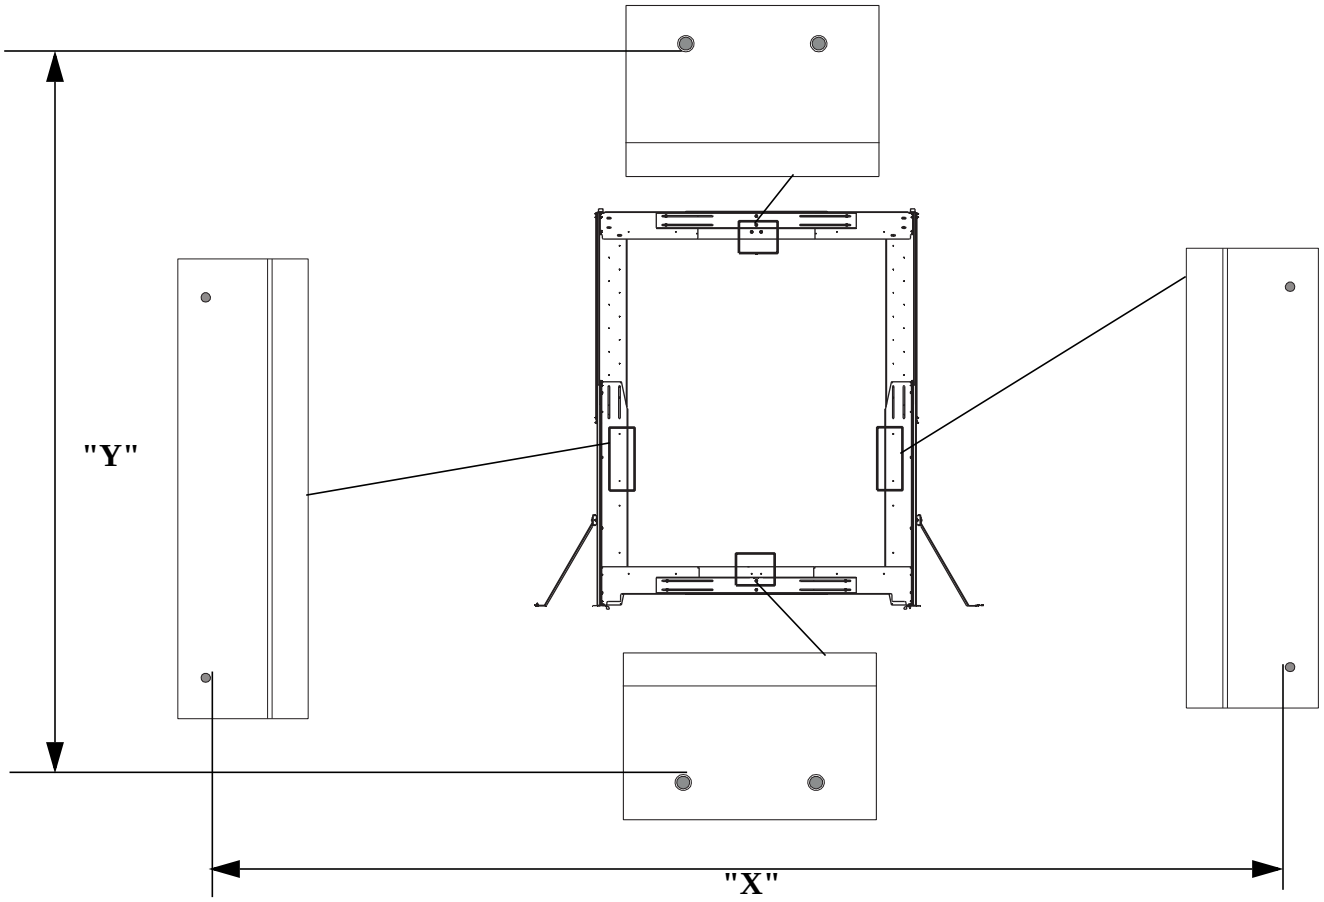

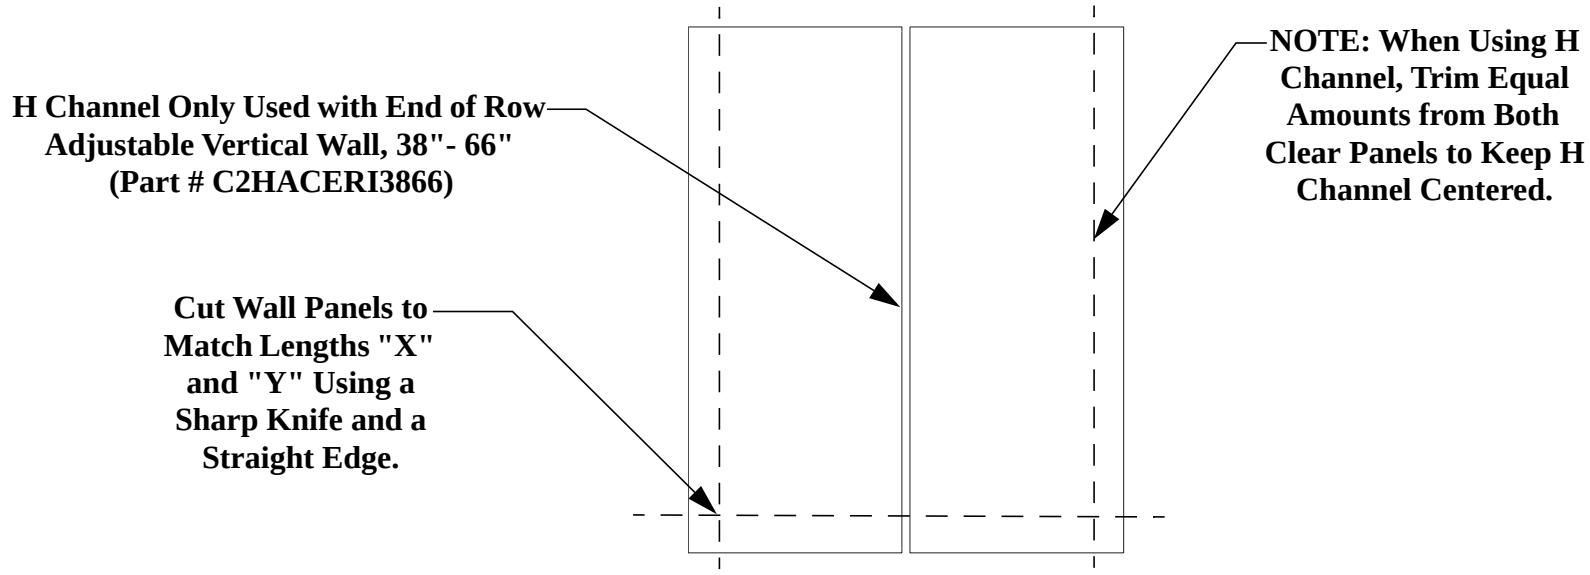
H Channel Only Used with End of Row Adjustable Vertical Wall, 38"- 66" (Part # C2HACERI3866)
NOTE: When Using H Channel, Trim Equal Amounts from Both Clear Panels to Keep H Channel Centered.
Cut Wall Panels to Match Lengths "X" and "Y" Using a Sharp Knife and a Straight Edge.

Attaching H Channel to Clear Panels [For End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866) Only]

- Attach the inside H Channel to the outside H Channel with M5x12mm button head torx screws and M5 hex nuts securing (2) clear panel in between the inside and outside H Channels. The number of screws and nuts depends on the height of the wall.
- NOTE: When placing the clear panels, make sure that they are under the slots in the top of the H Channel.

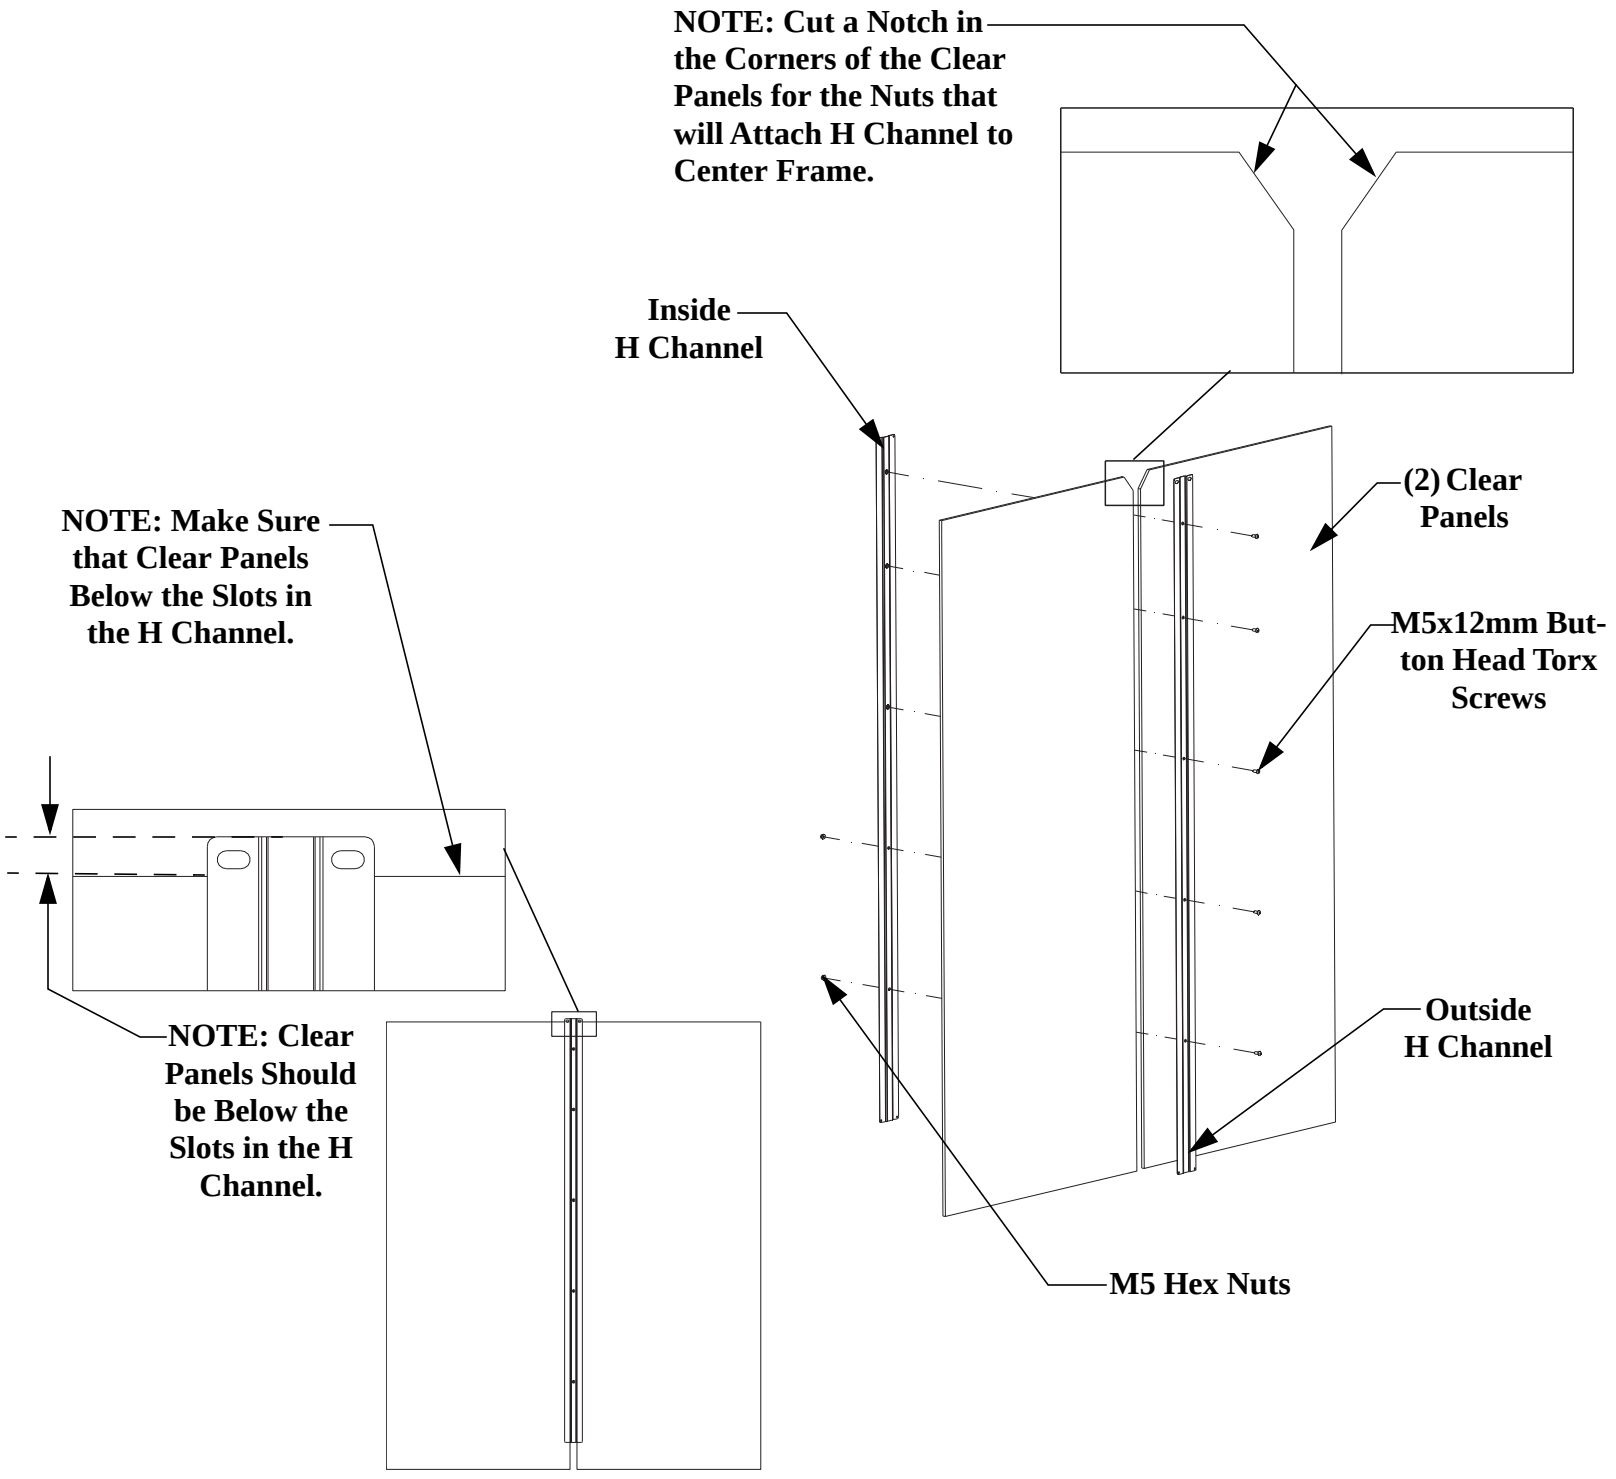
NOTE: Cut a Notch in the Corners of the Clear Panels for the Nuts that will Attach H Channel to Center Frame.
Inside H Channel
(2) Clear Panels
M5x12mm Button Head Torx Screws
NOTE: Make Sure that Clear Panels Below the Slots in the H Channel.
NOTE: Clear Panels Should be Below the Slots in the H Channel.
Outside H Channel
M5 Hex Nuts

Attach Bottom and Side Wall Panel Clamps

- Attach required number of panel clamps across the bottom of the wall and along one side with M5 nuts and M5 16mm hex head screws. (Do not tighten fasteners.)

Note: Required number of panel clamps and fasteners will vary depending on wall size and height.

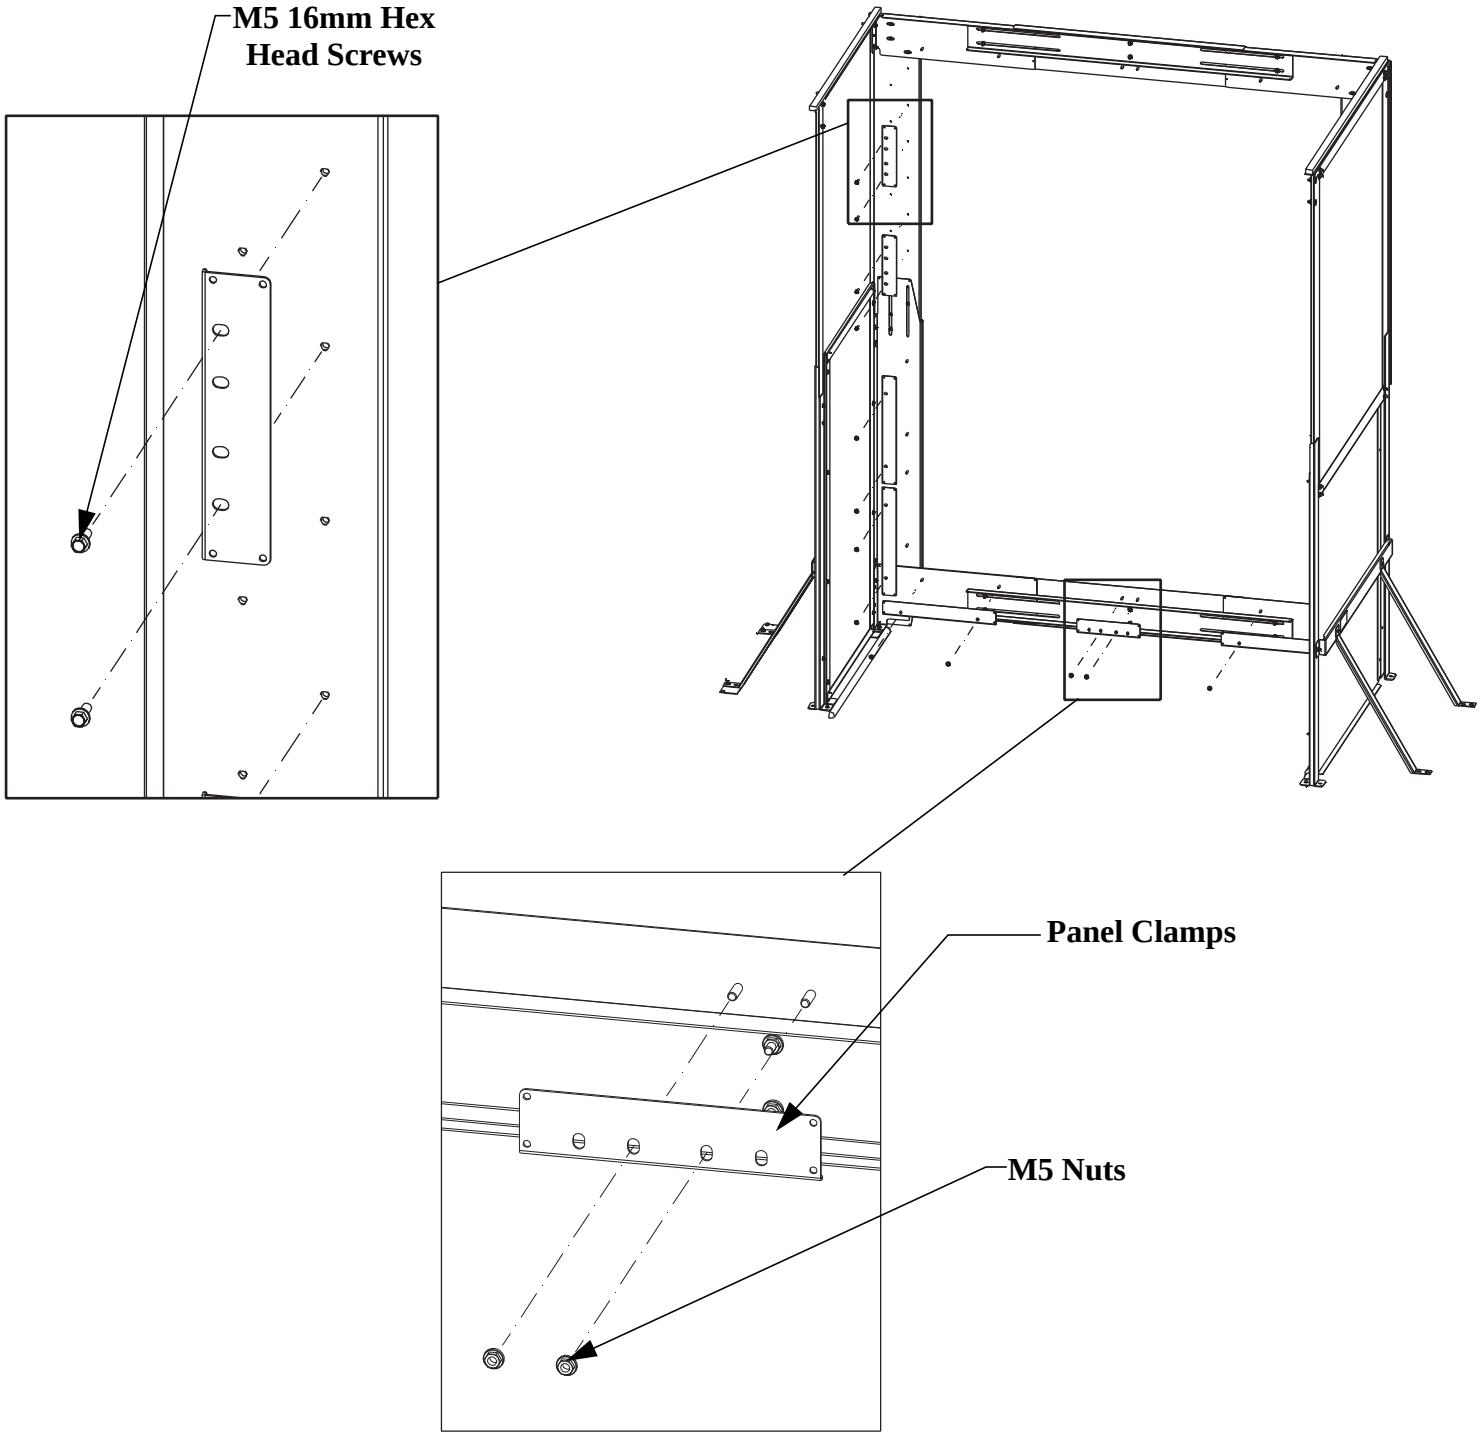

Insert Wall Panel

- Slide previously cut panel(s) into installed panel clamps to hold them in place.
- Note: For End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866) the H Channel will have to be secured to the center frame with (2) M5 hex nuts.

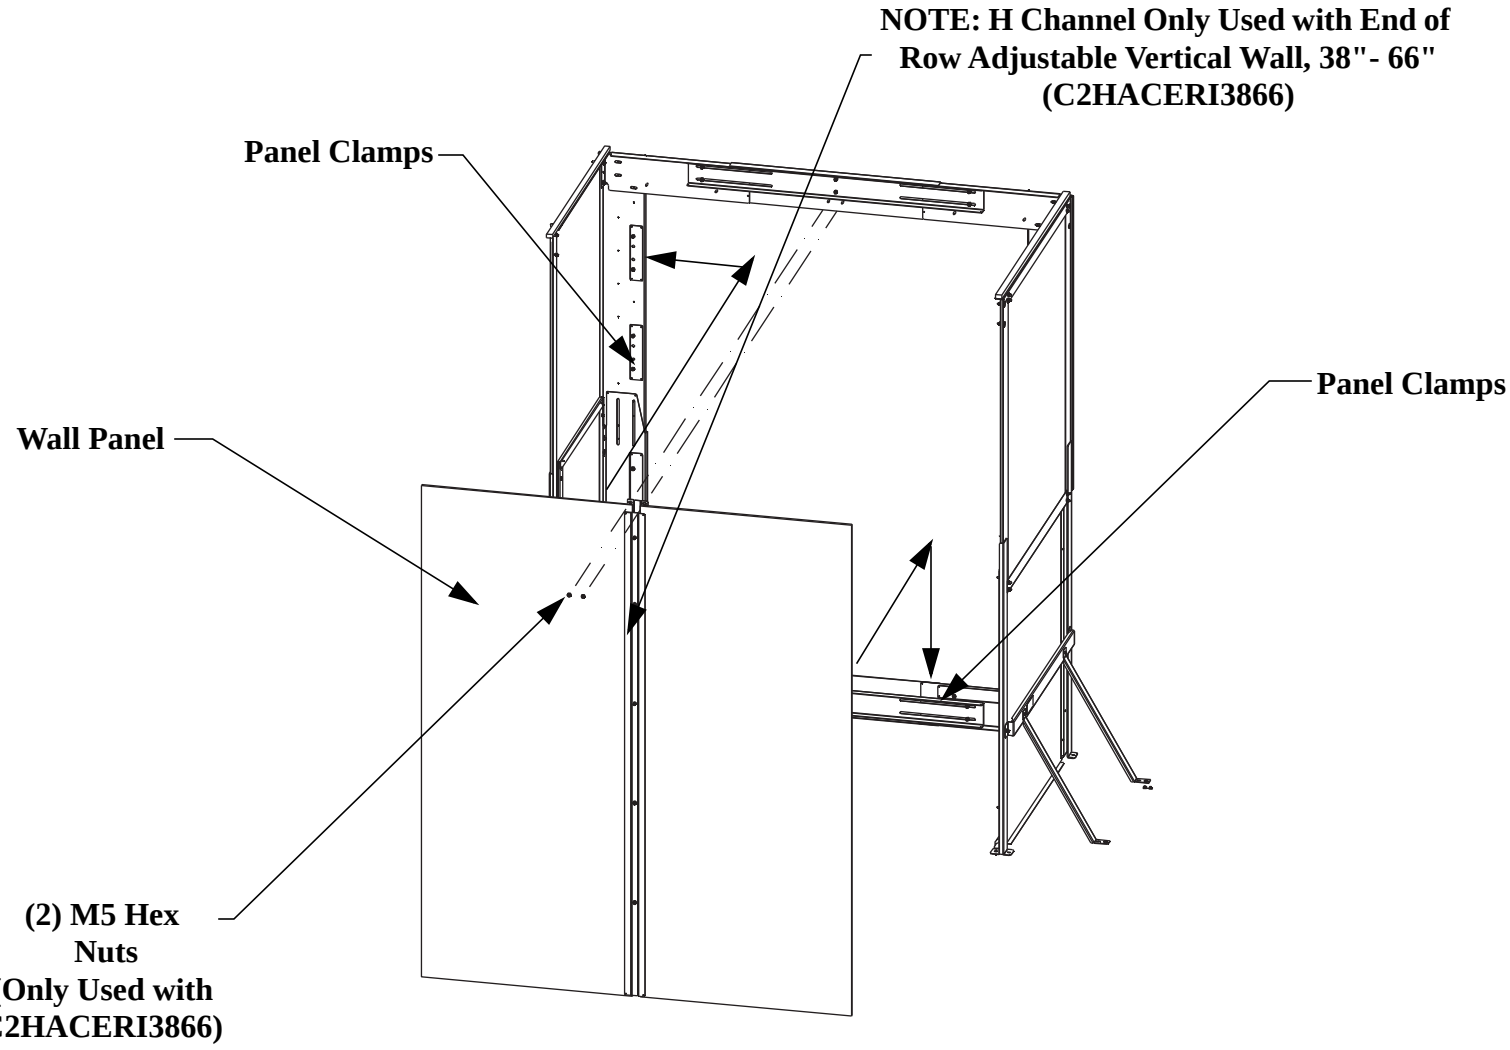
NOTE: H Channel Only Used with End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866)
Panel Clamps
Panel Clamps
Wall Panel
(2) M5 Hex Nuts (Only Used with C2HACERI3866)

Attach Top and Remaining Side Wall Panel Clamps

- Attach remaining panel clamps across the top of the wall and along the side of wall with M5 nuts and M5 16mm hex head screws to secure wall panel(s) in place.
- Tighten all fasteners.
- NOTE: Center panel clamps are not used when using the H-Channel [End of Row Adjustable Vertical Wall, 38"- 66" (C2HACERI3866) only].

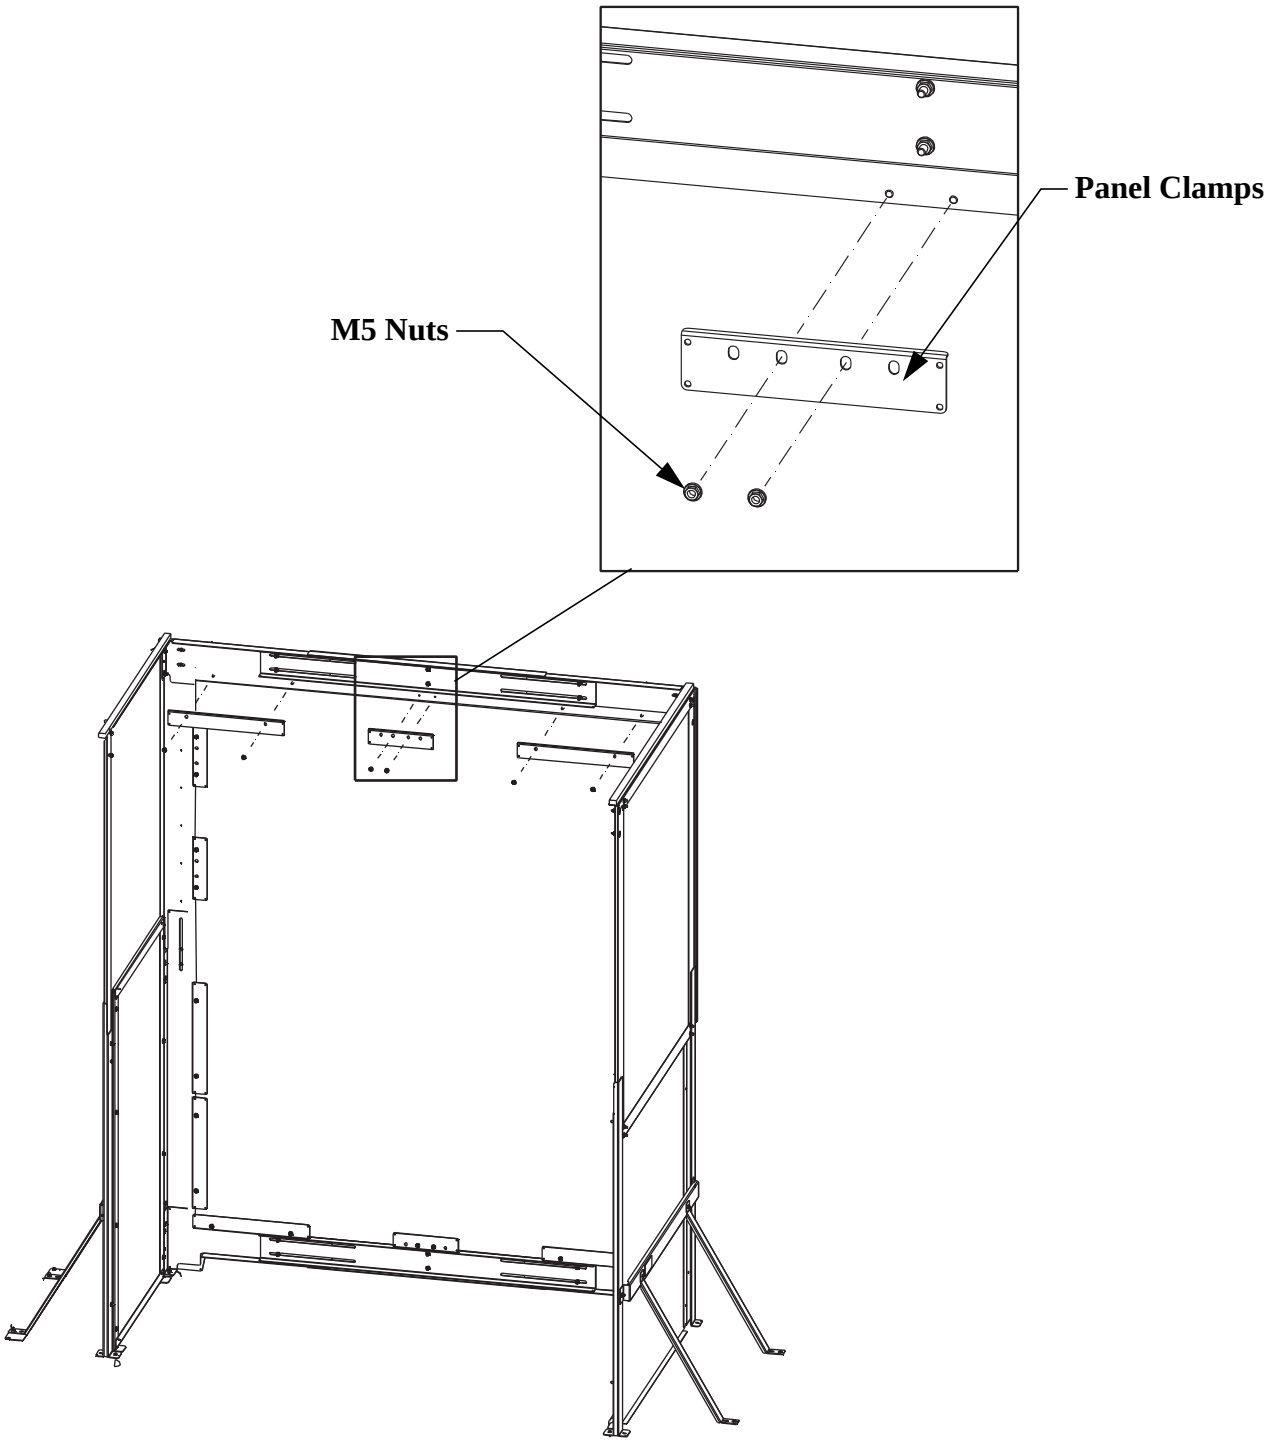

Foam Seal Installation

- Compress and insert (1) strip of foam seal in between the top of the end of row vertical wall and the ceiling closing any gaps.

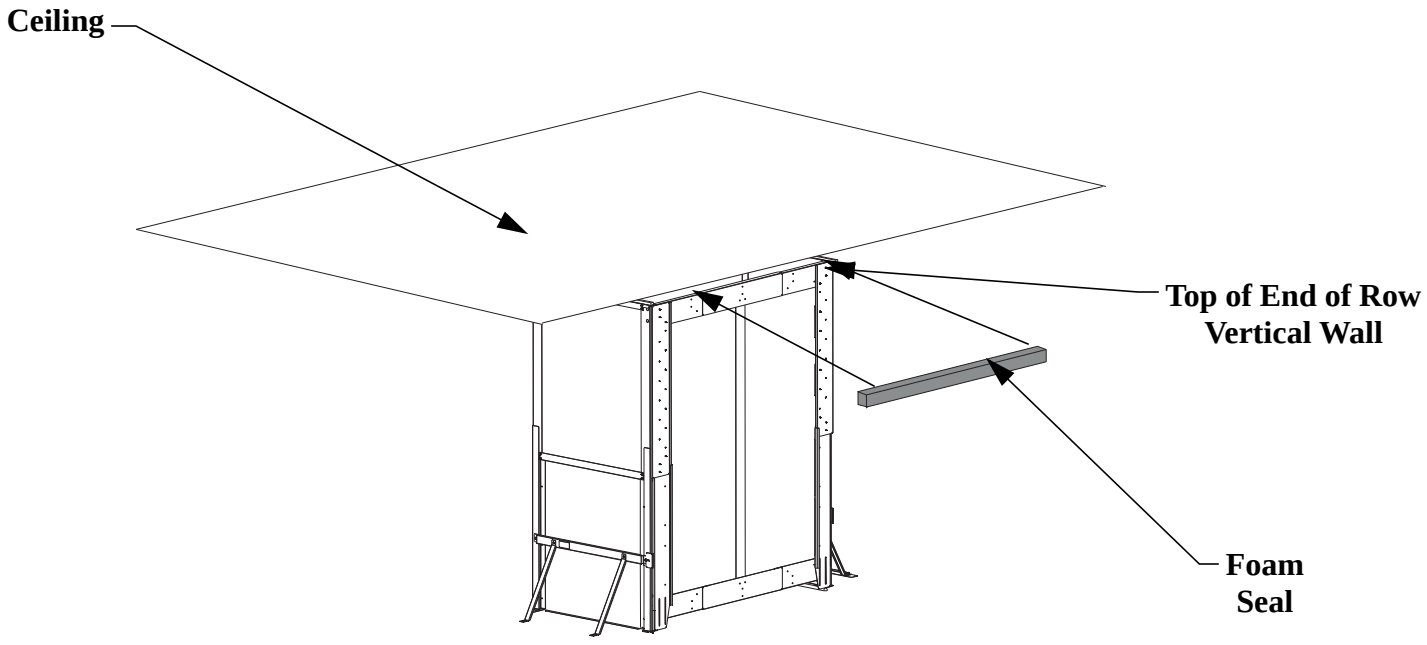

SECTION 6

INSTALLATION OF SLIDING DOORS C2CACT5F04SD** and C2CACT5F06SD**

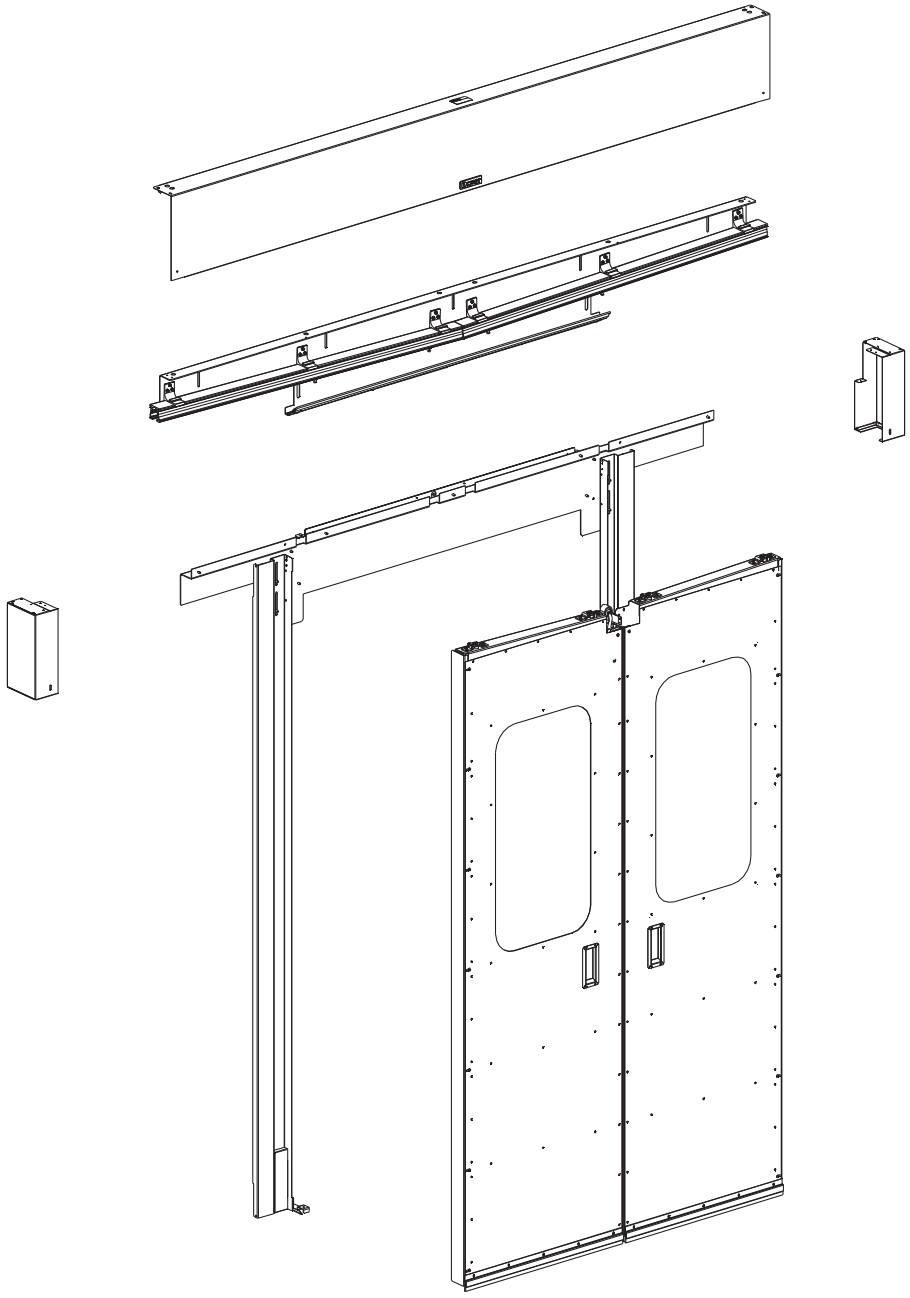

NOT ALL PARTS PROVIDED WITH SLIDING DOORS WILL BE USED

Attaching Transom

- Slide the transom onto the studs on the front of the left and right posts.
- Secure in place with (4) M6 Nuts.

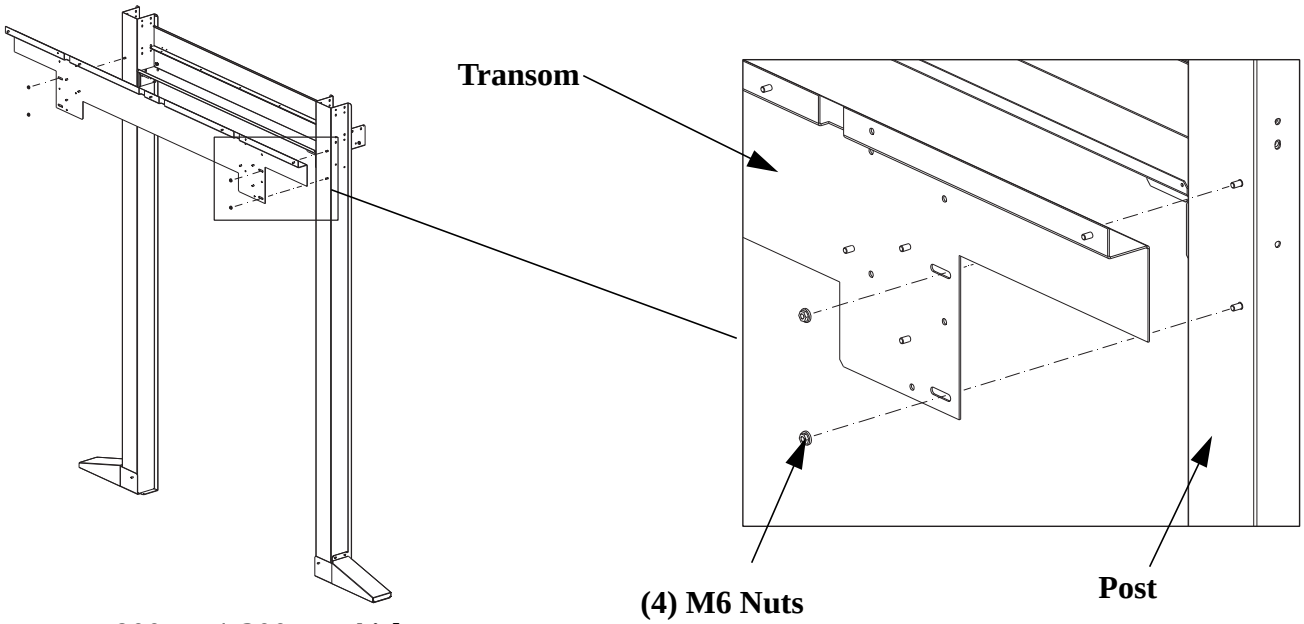

Transom-900mm/1200mm Aisles

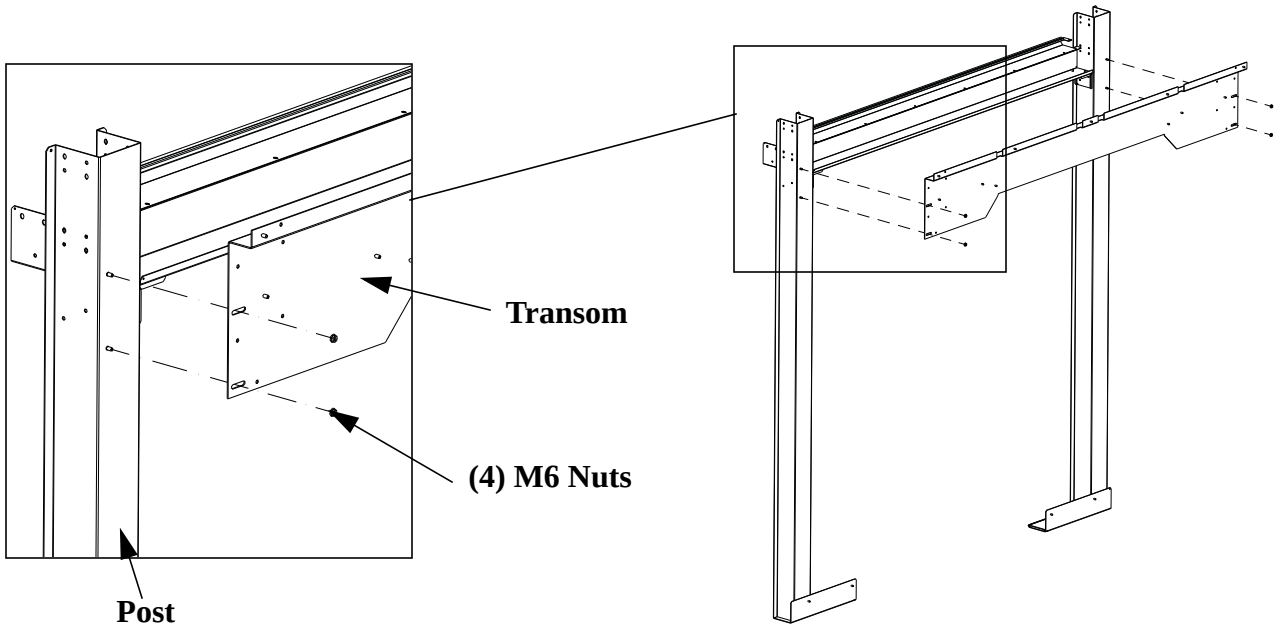

Transom-1800mm Aisle

Flap Seal Installation

- Attach a strip of Flap Seal to inner flange of each Vertical Panel so that the bottom is just above the notch on the panel.
- **Note:** For the 900mm aisle, the flap seal needs to be installed after the vertical panels are put up.

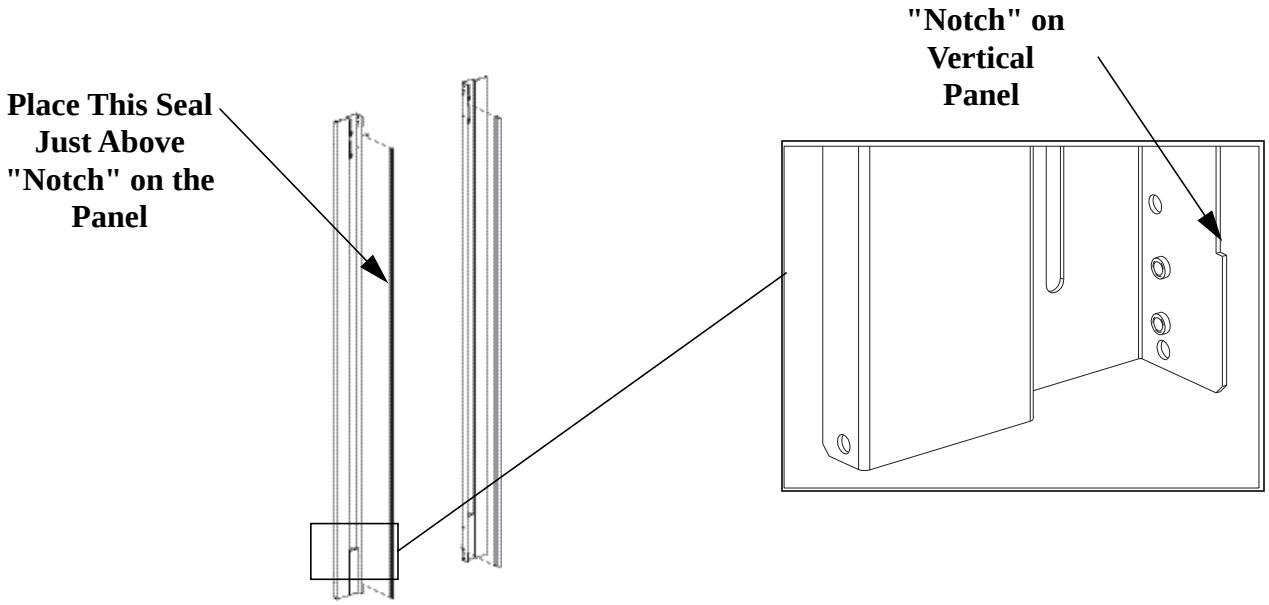

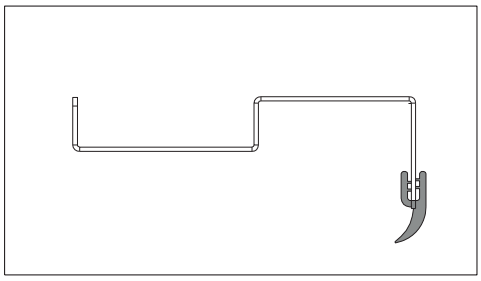

Top View of Left Hand Vertical Panel 900mm/1200mm Aisle

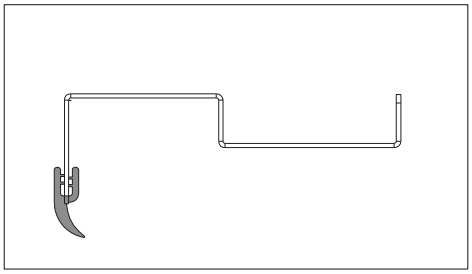

Top View of Right Hand Vertical Panel 900mm/1200mm Aisle

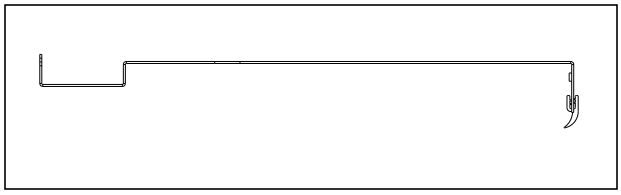

Top View of Left Hand Vertical Panel 1800mm Aisle

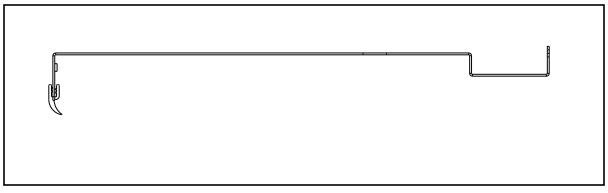

Top View of Right Hand Vertical Panel 1800mm Aisle

Attaching Vertical Panel (for 900mm/1200mm Aisles)

- Slide the vertical panel over the (2) studs on the transom and the (1) stud on the bottom of the vertical post.
- Fasten in place with (3) M6 nuts.
- Repeat process for right side.

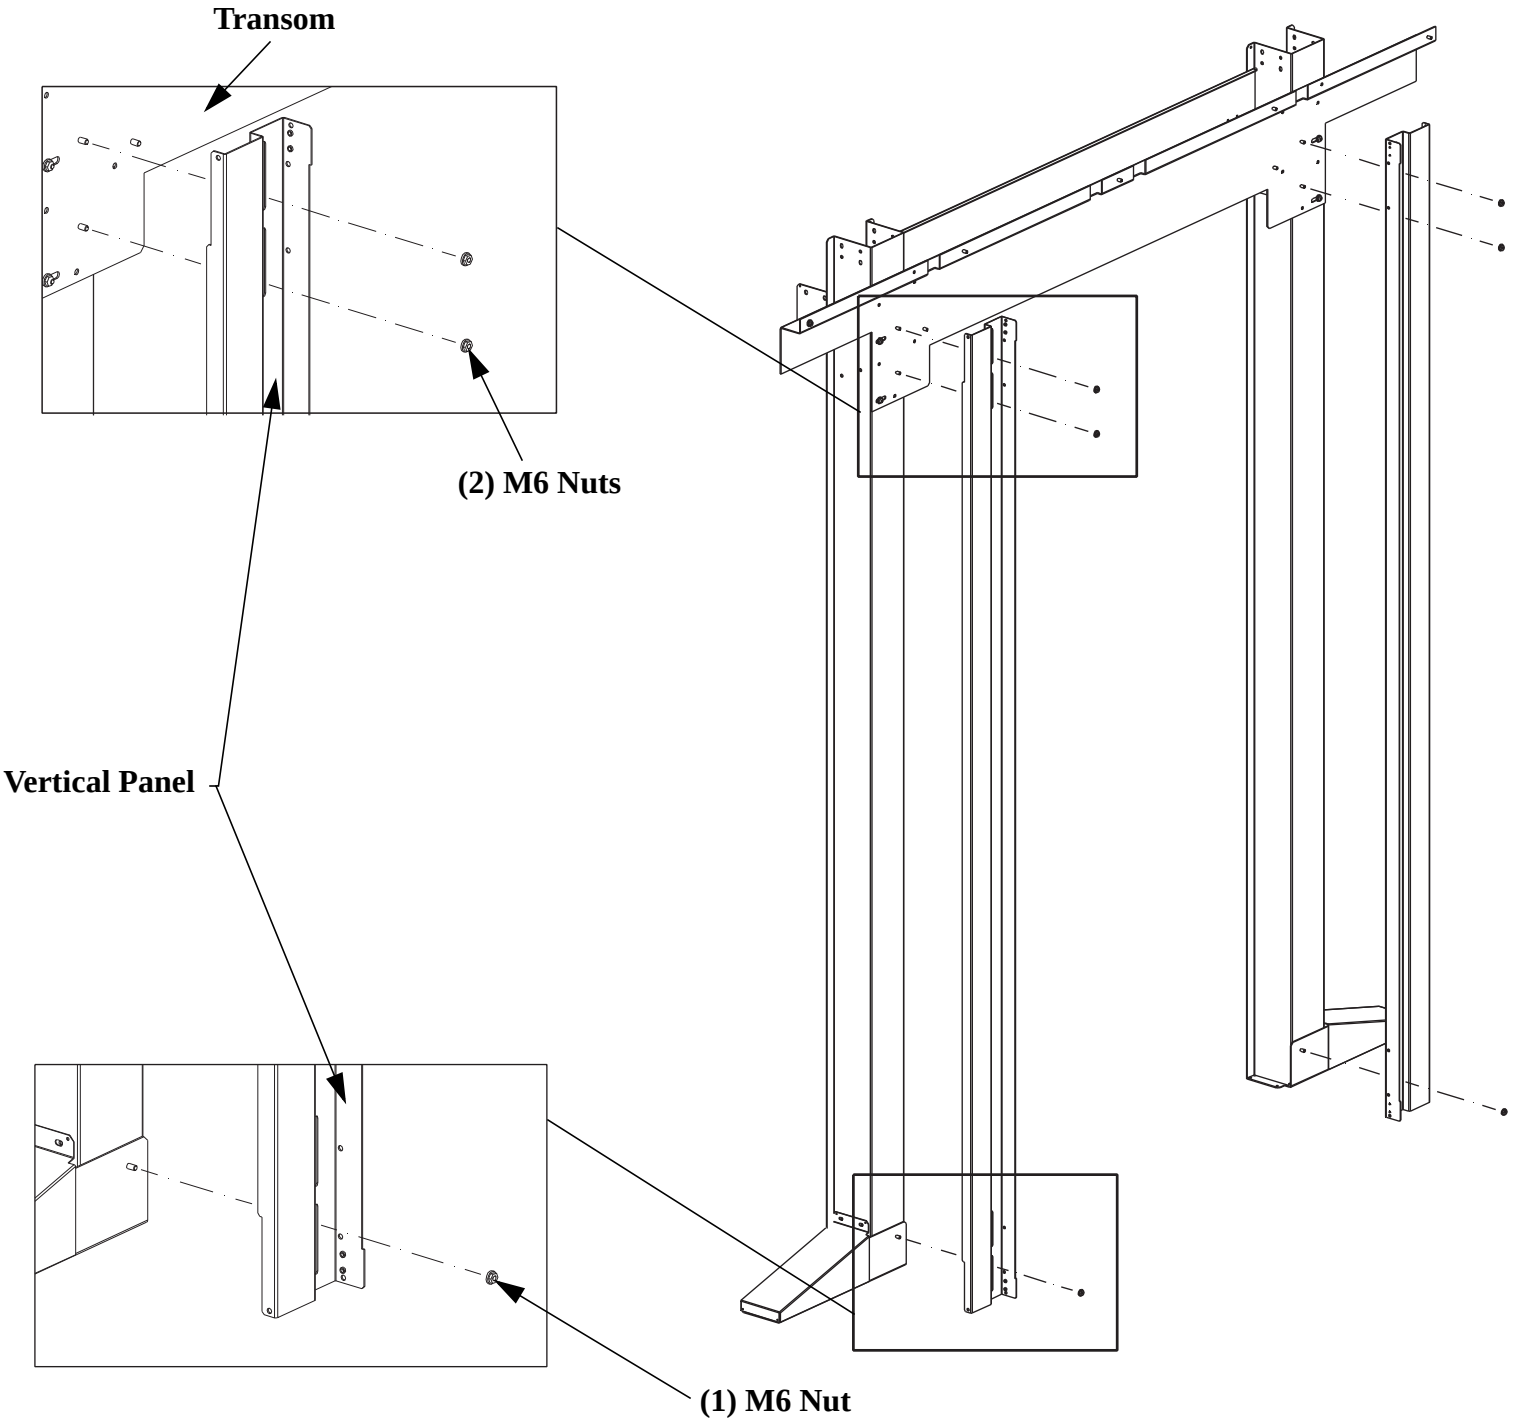

Attaching Vertical Panel (for 1800mm Aisles Only)

- Slide the vertical panel over the (2) studs on the transom and the (2) studs on the bottom of the vertical post.
- Fasten in place with (4) M6 nuts.
- Repeat process for right side.

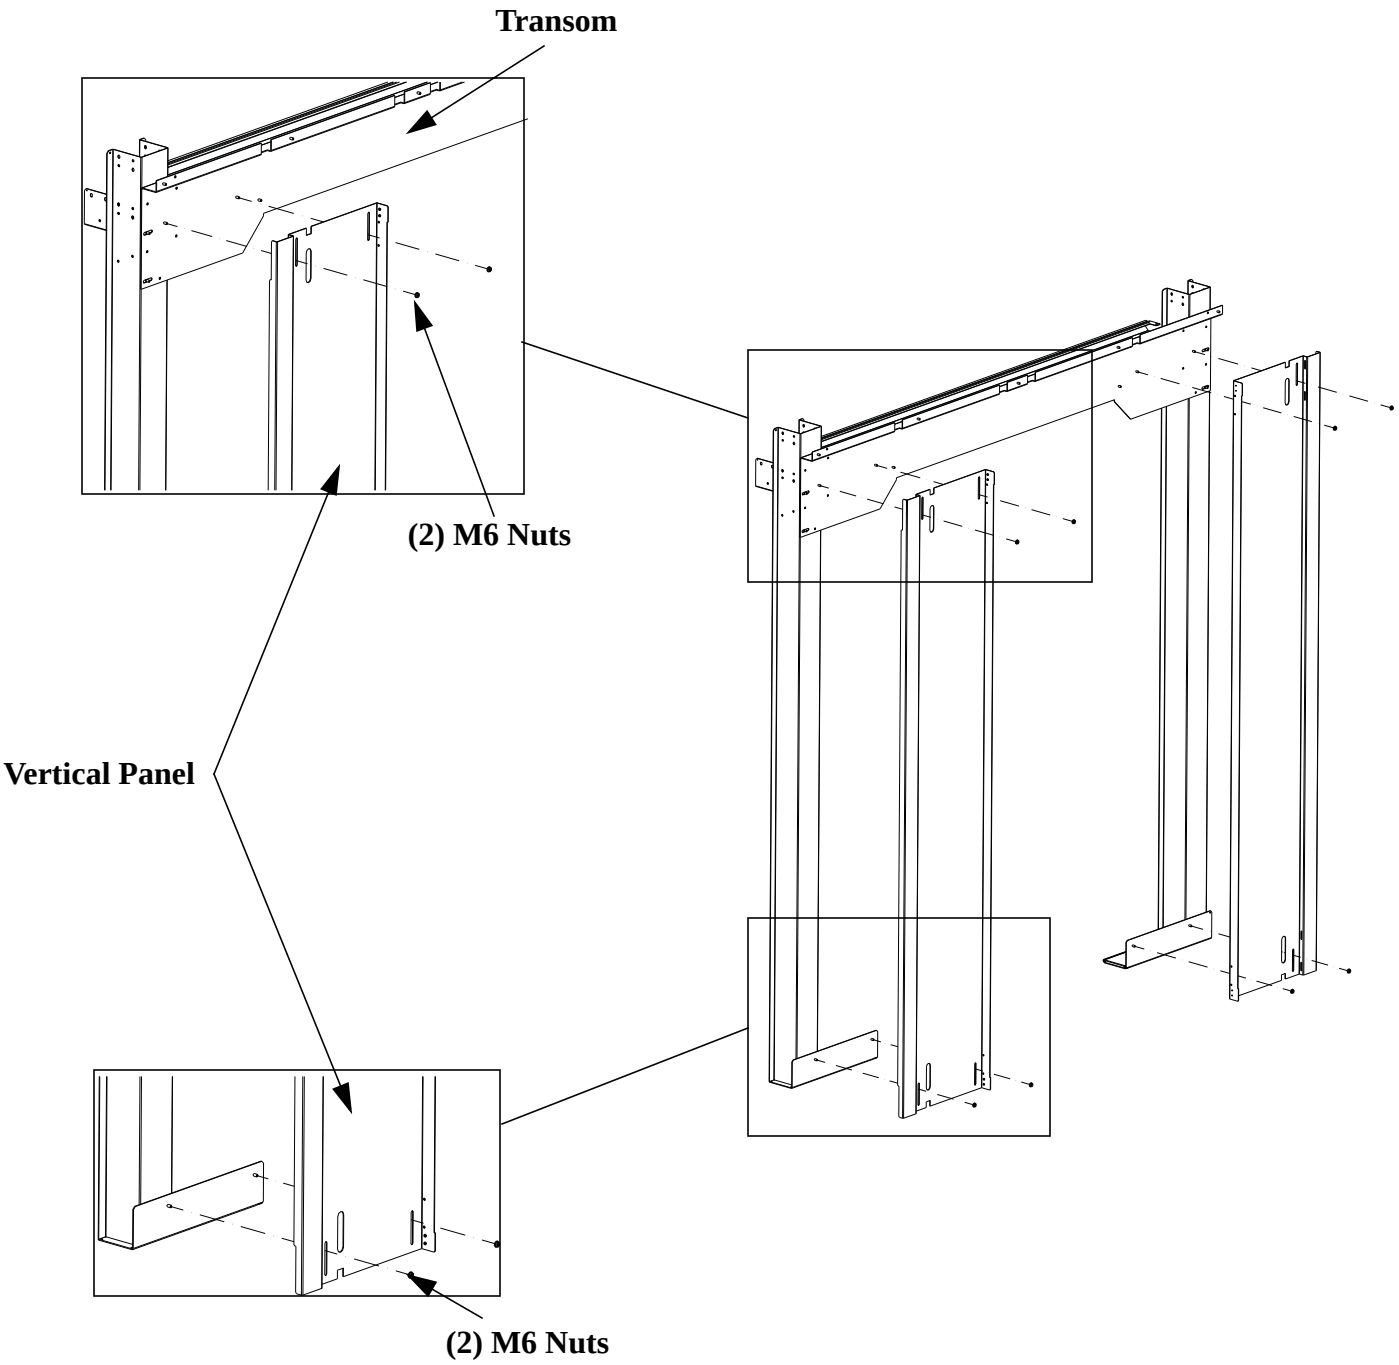

Panel Cover Installation (for 900mm/1200mm Aisles)

- Attach (1) Panel Cover to each Vertical Panel with (2) M5 button head screws each.
- **Note:** For the 900mm aisle, these screws also go through the clearance holes in the side panels that were installed with the end-of-row frame.

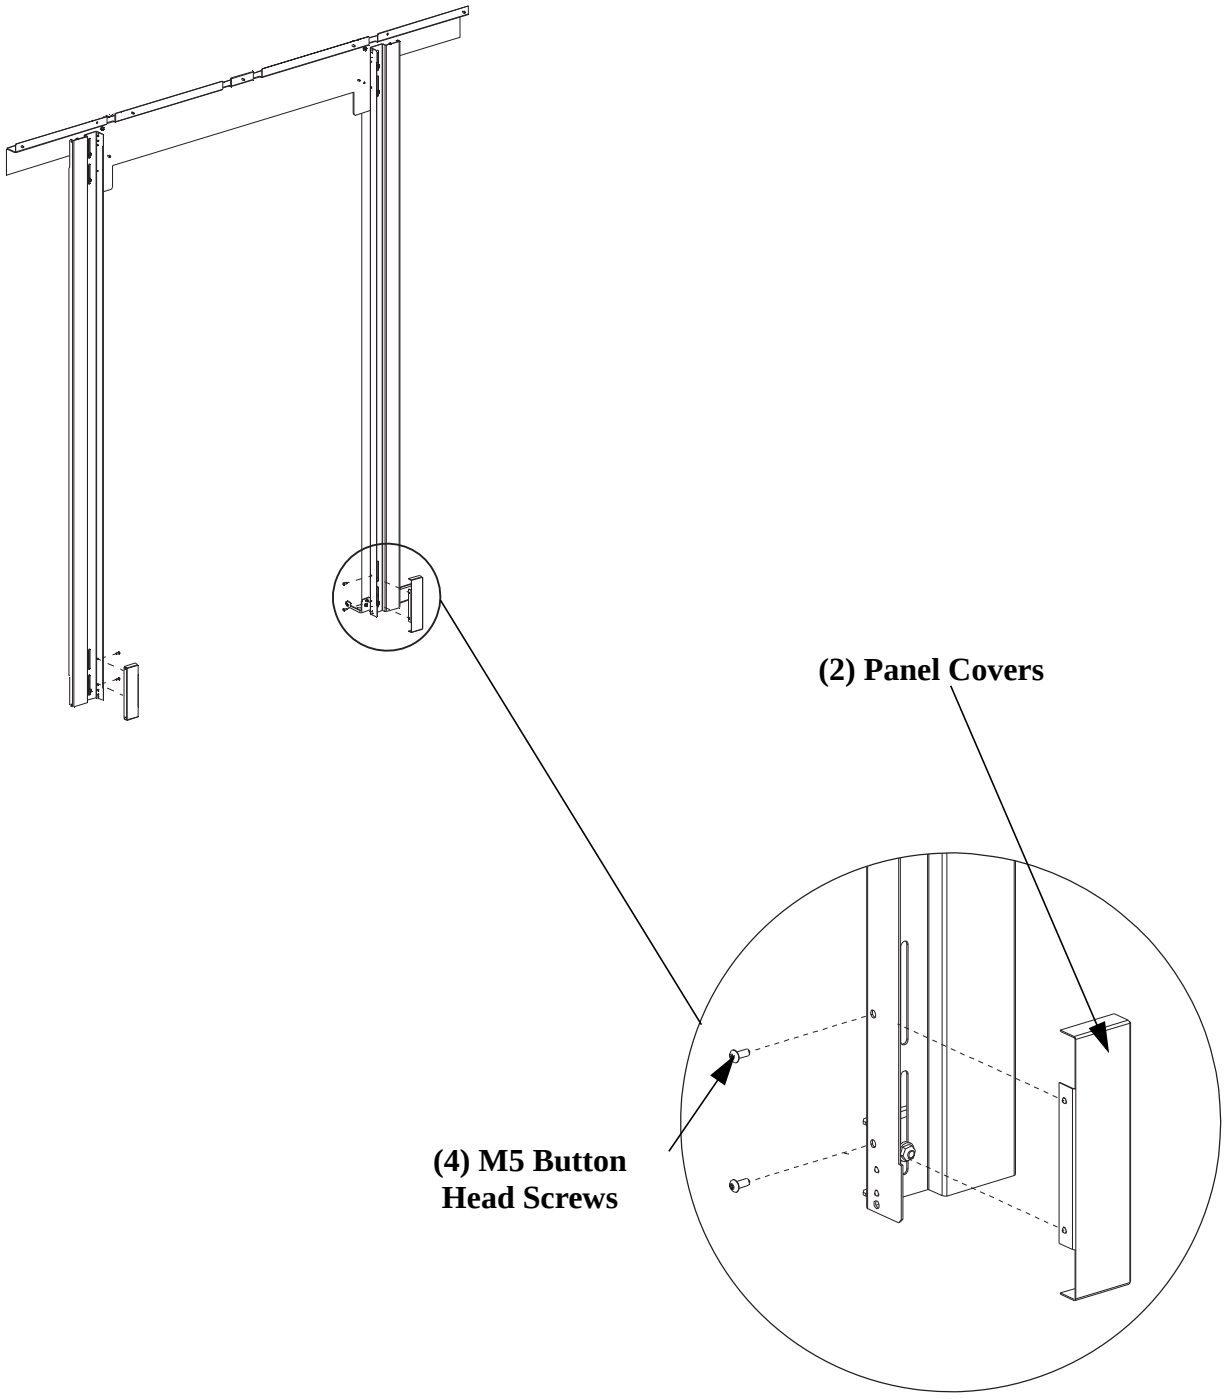

Panel Cover Installation (for 1800mm Aisles)

- First, place (2) tabs on each panel cover through (2) slots in each vertical panel as shown in Step 1.
- Attach (1) Panel Cover to each Vertical Panel with (2) M5 button head screws each as shown in Step 2.

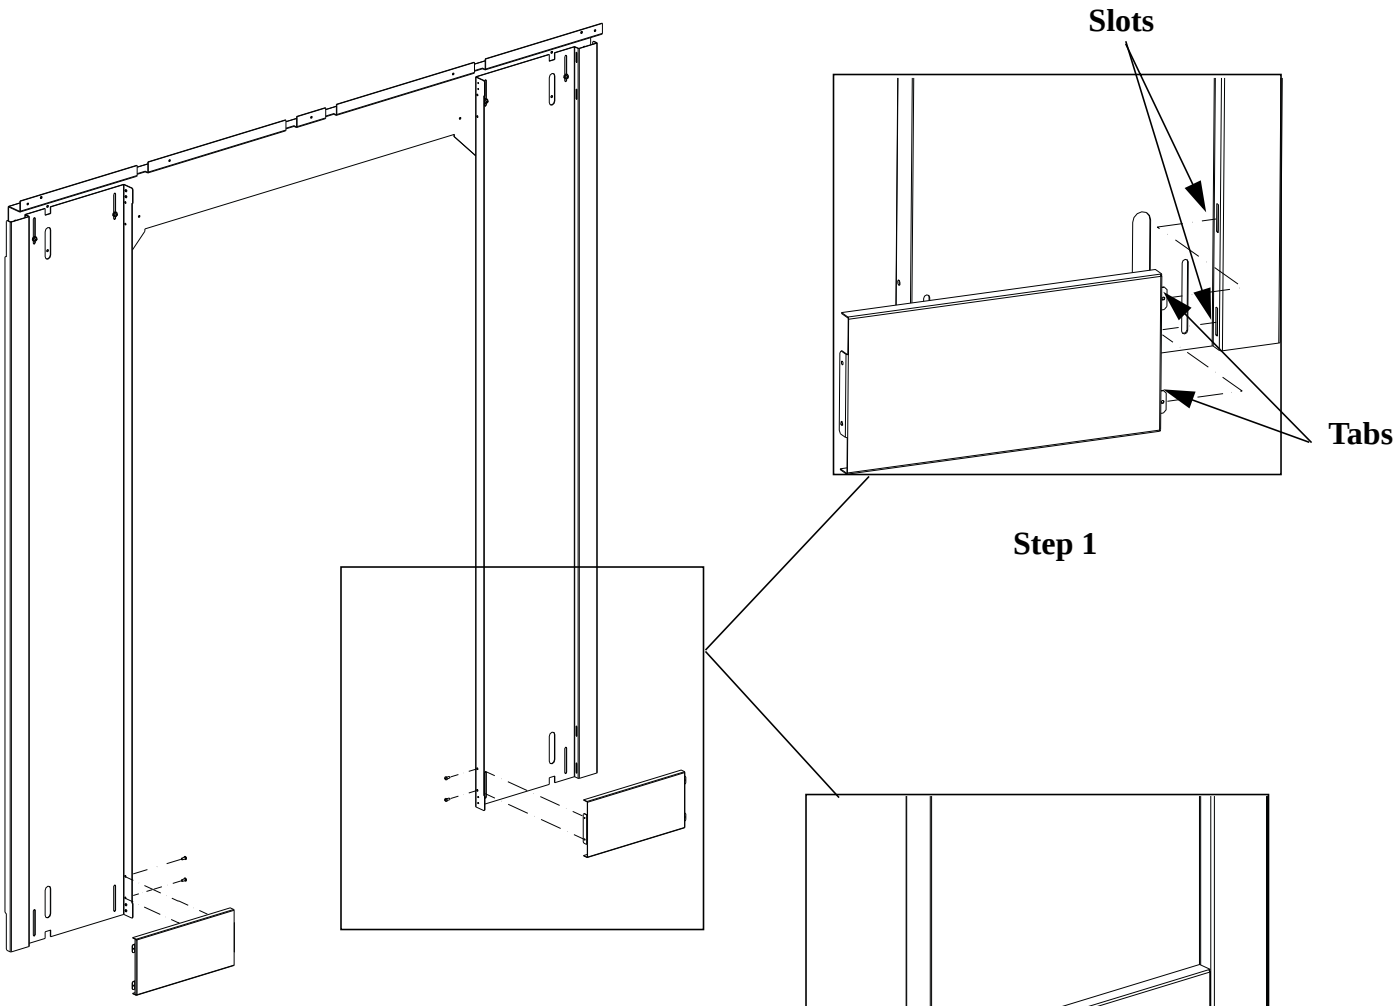

Attaching Door Guides

- Attach right hand Door Guide to right hand Vertical Panels with (2) M5 button head screws. (Leave Screws Loose)
- Repeat process for left hand side.

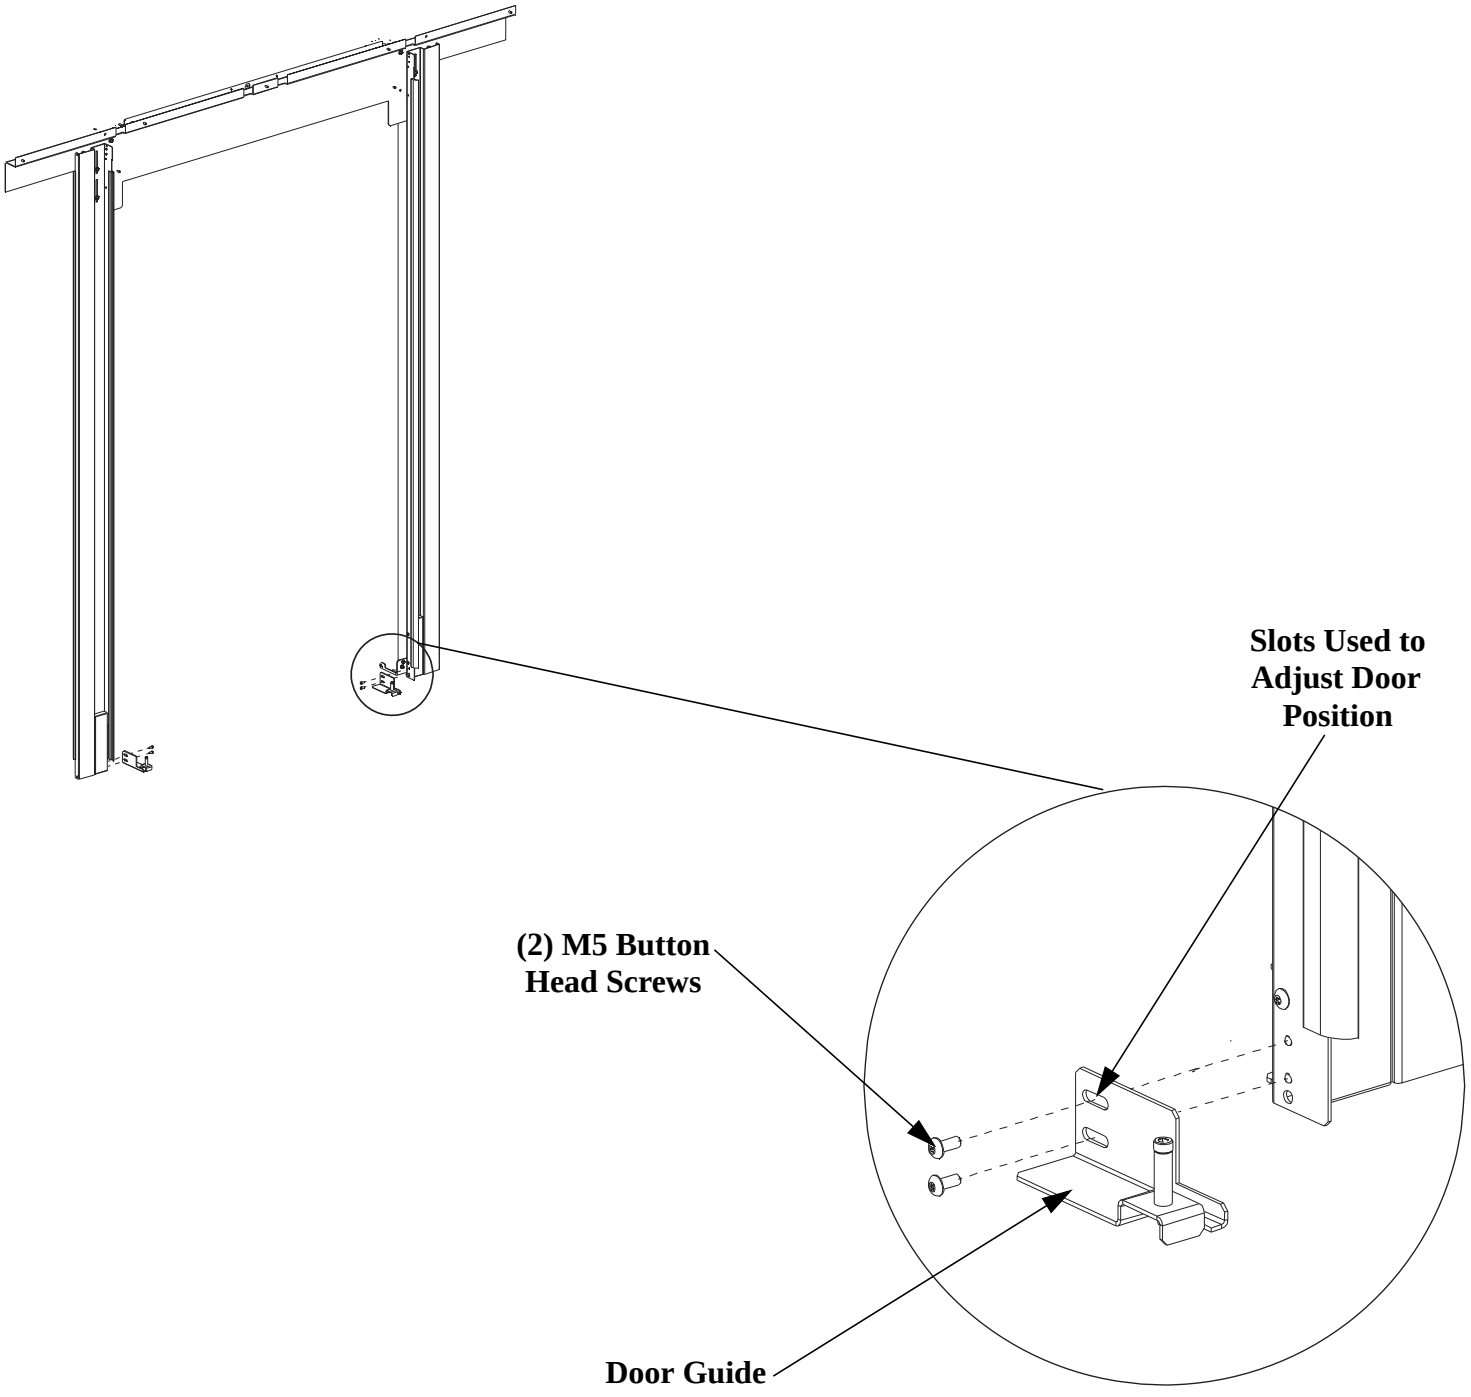

Header Installation

- Slide Header onto (7) studs on Transom Assembly.
- Slide Header down until it rests on top of the Vertical Panels. (Ex.1)
- Secure Header to Transom Assembly with (7) M6 flange hex nuts.

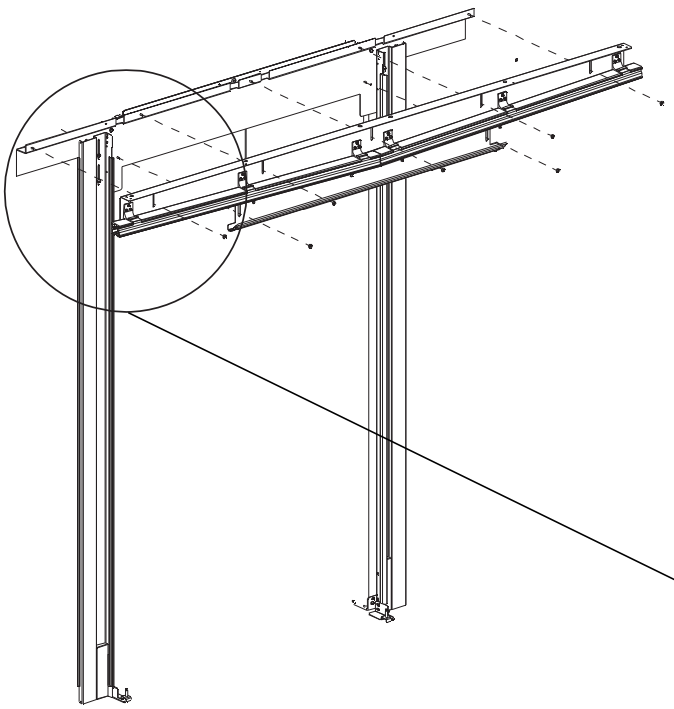

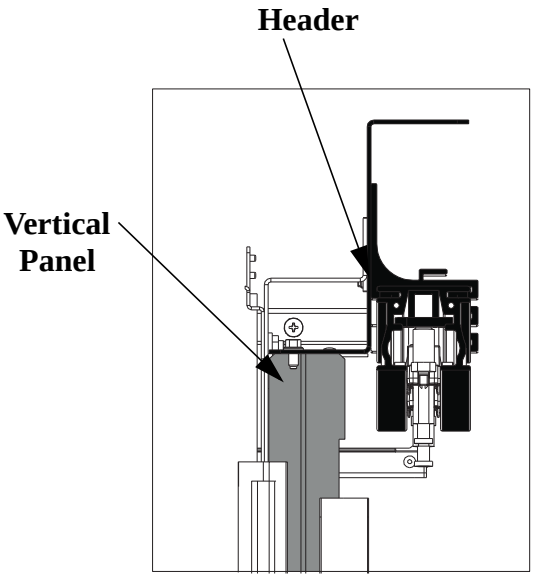

Ex.1

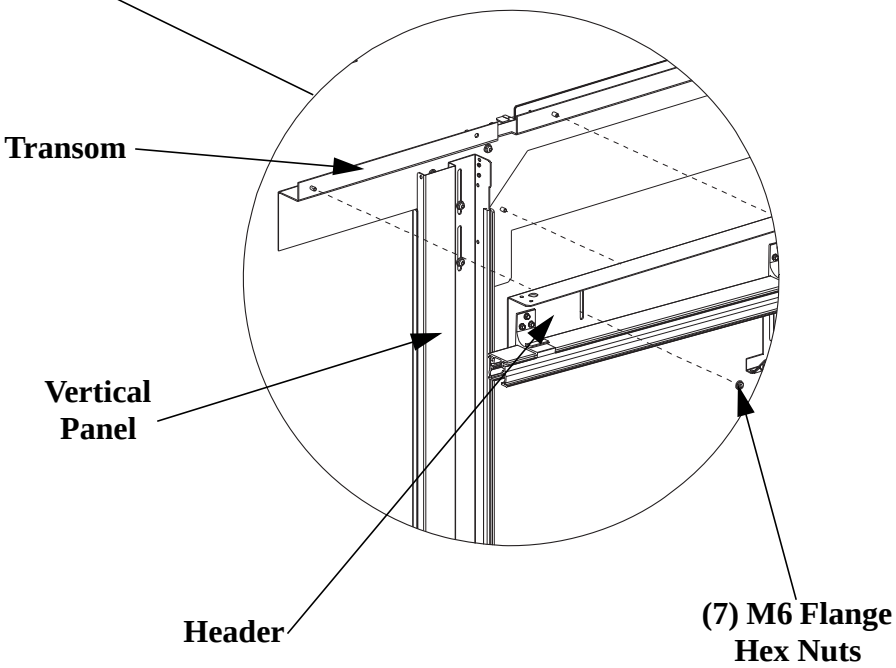

Right Hand Sliding Door Set-Up

- Attach Hook and Bracket to right hand door using (2) M5 hex head screws.
- Attach Floor Brush and Floor Brush Clamp to right hand door with (5) M5 button head screws.

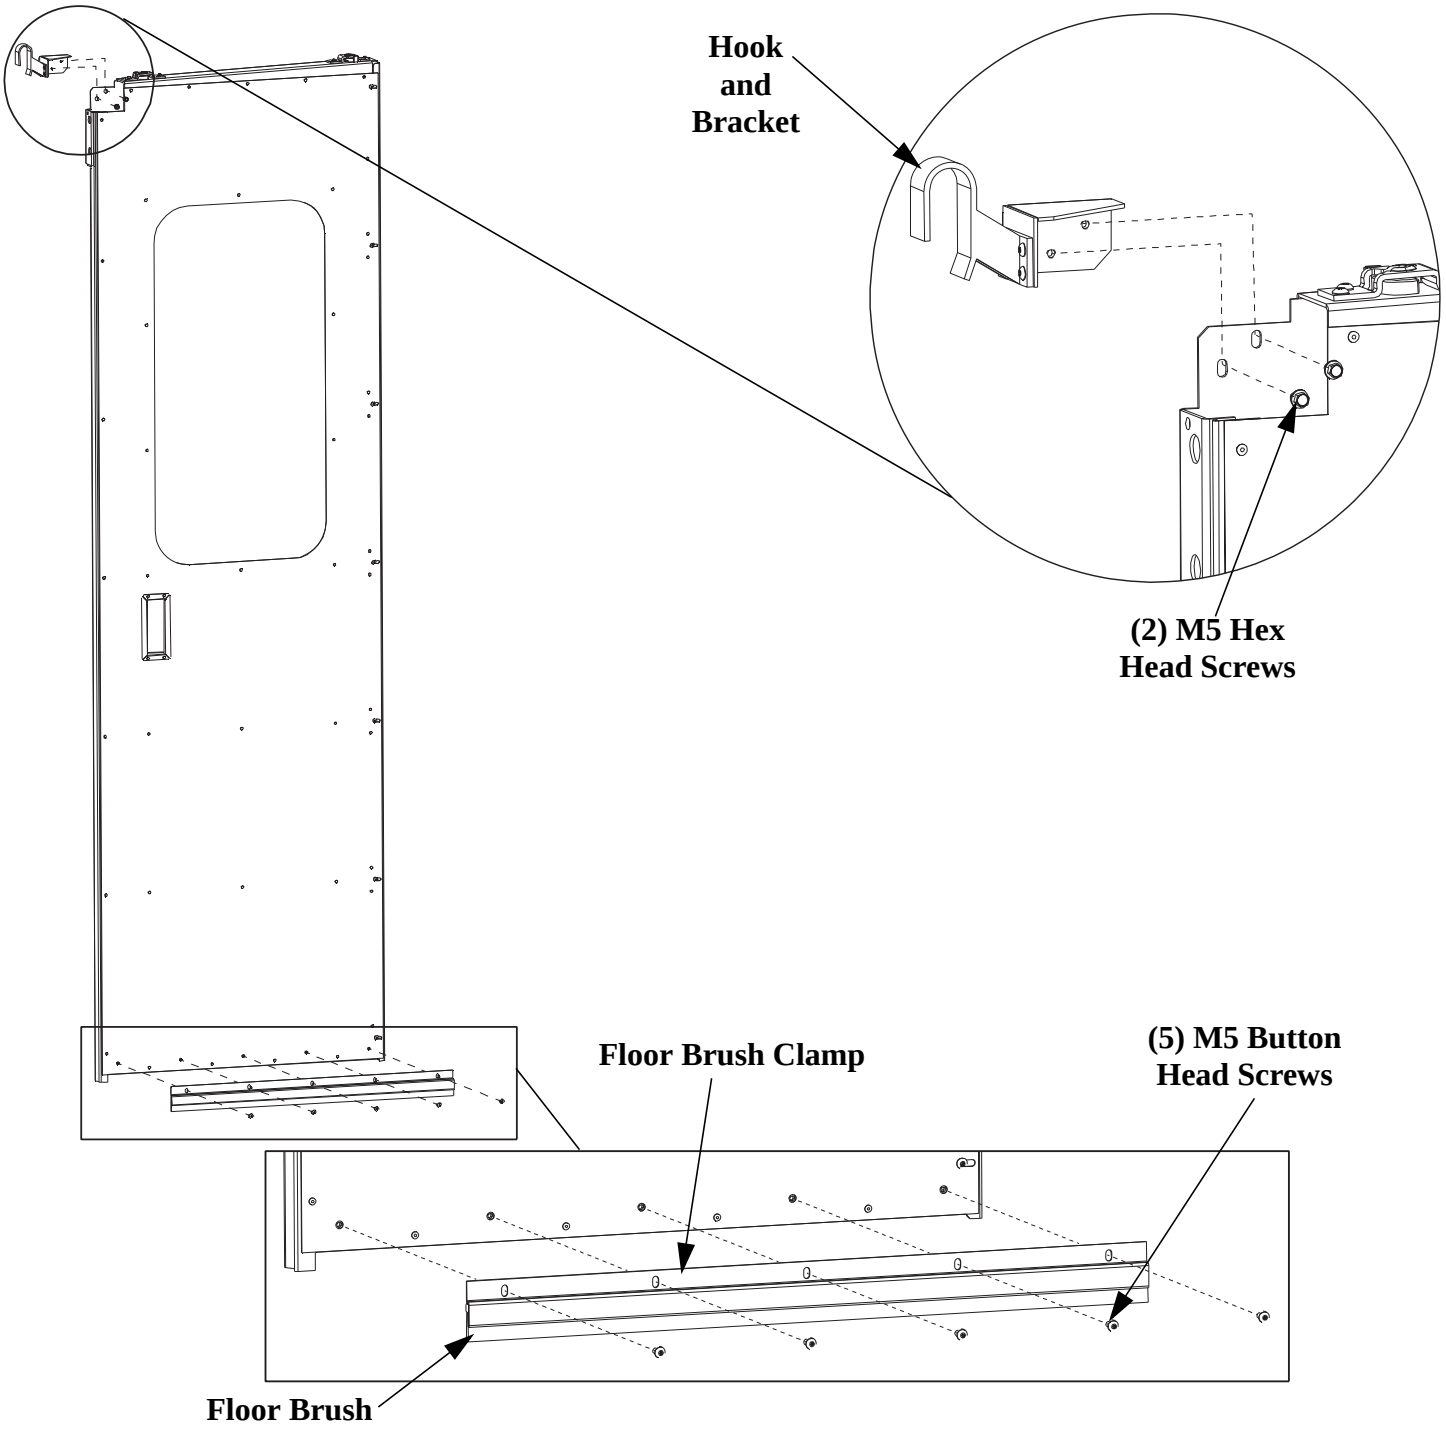

Left Hand Sliding Door Set-Up

- Attach Damper to left hand door with (2) M6 hex head screws.
- Attach Floor Brush and Floor Brush Clamp to left hand door with (5) M5 button head screws.

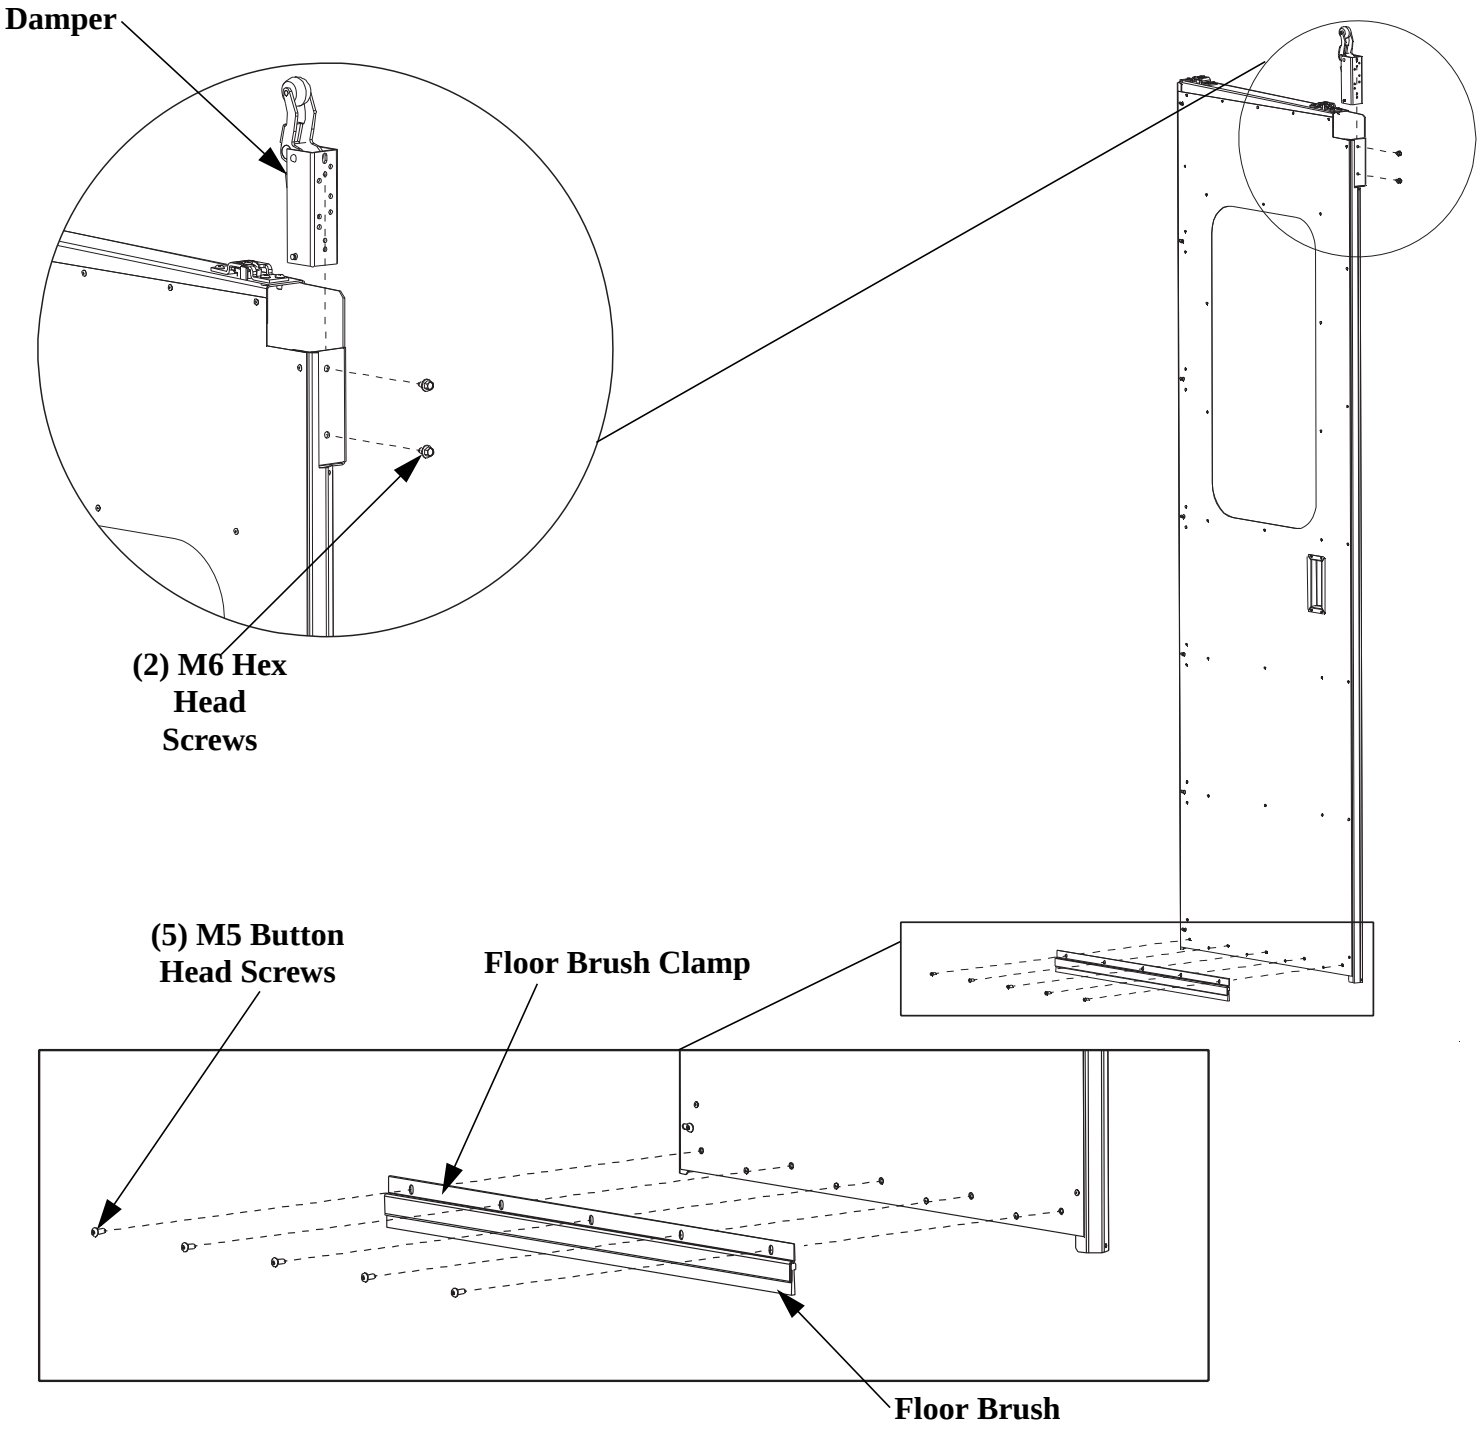

Sliding Door Installation

- Open Cam Latches on top of doors.
- Lift door and place over the Lower Guide Pin.
- Slide Pendant Bolts on Header into Cam Latches on door.
- Close Cam Latches.
- Repeat for other door.

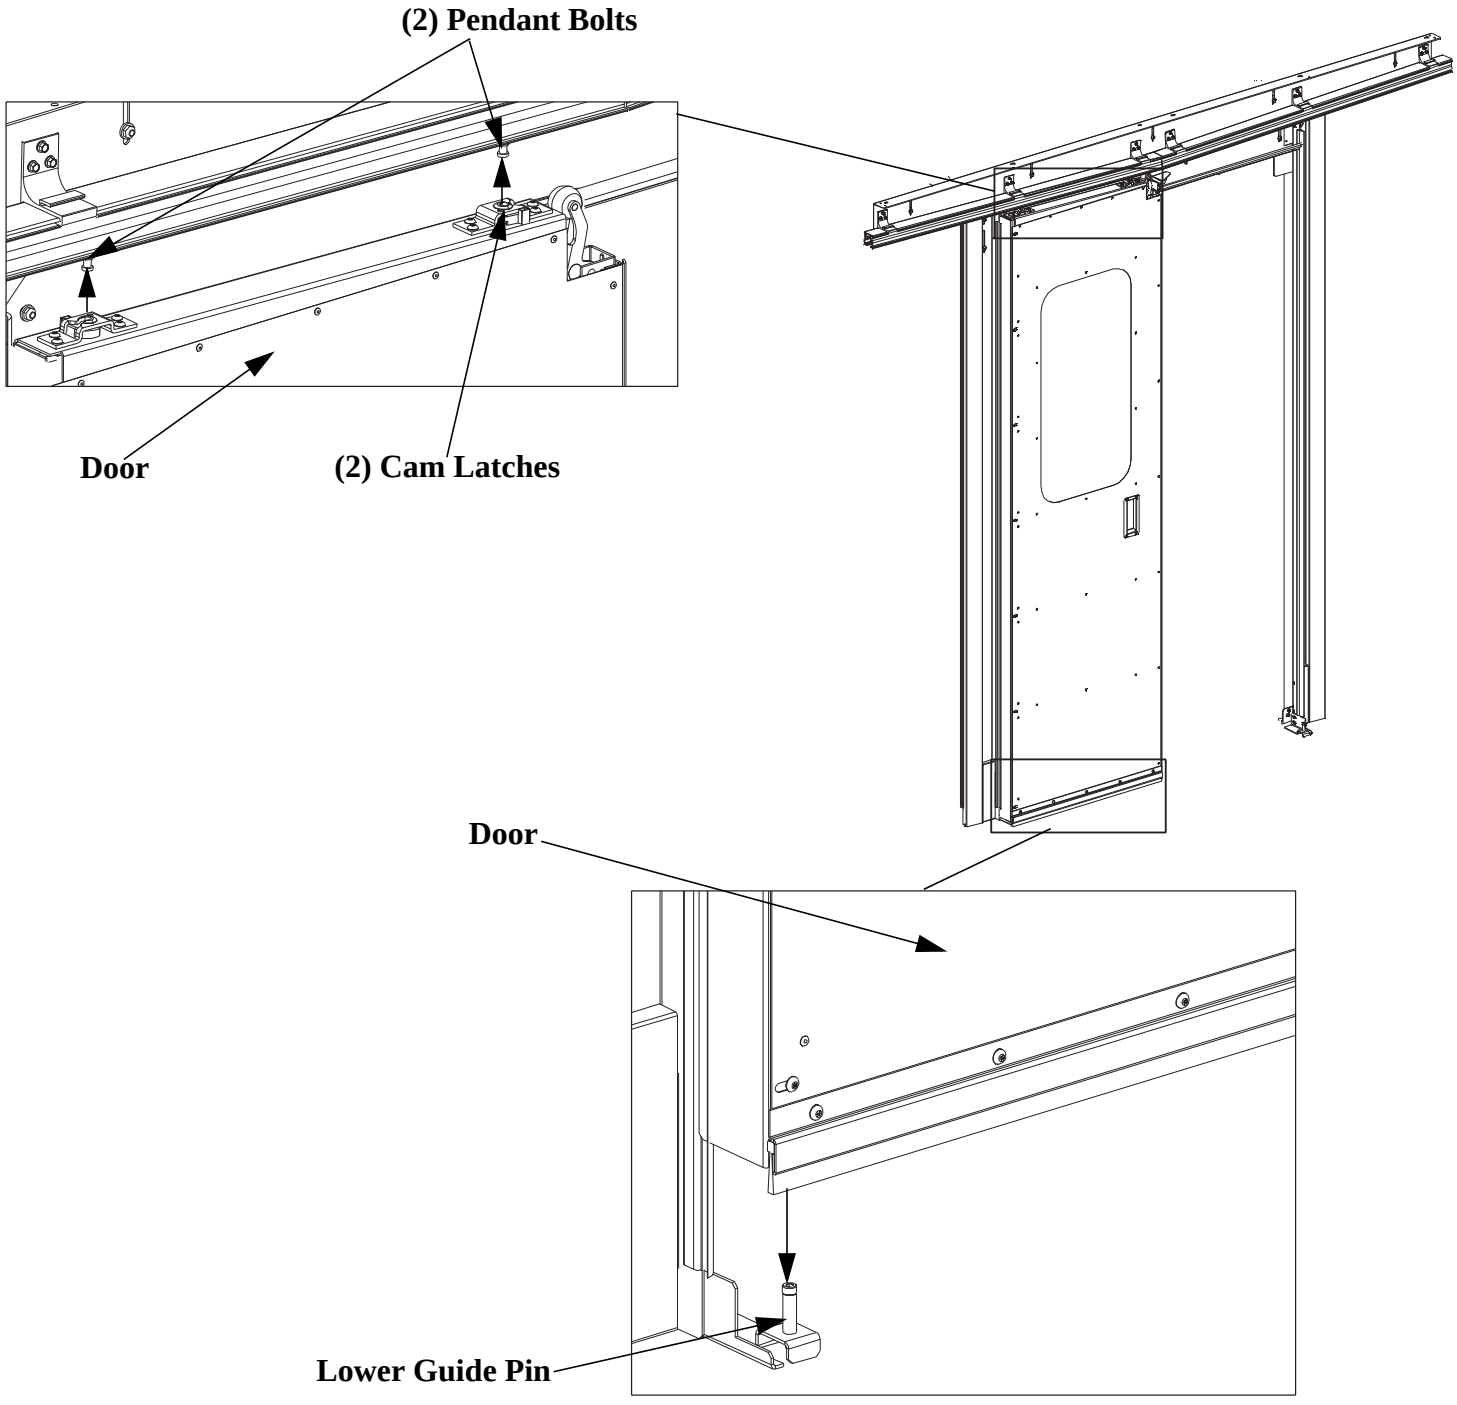

Adjusting Sliding Door Height

- Using a wrench rotate the Pendant Bolts on Transom holding door to raise or lower doors.
- Adjust Floor Brushes so that they are resting on the floor (when both doors are closed).

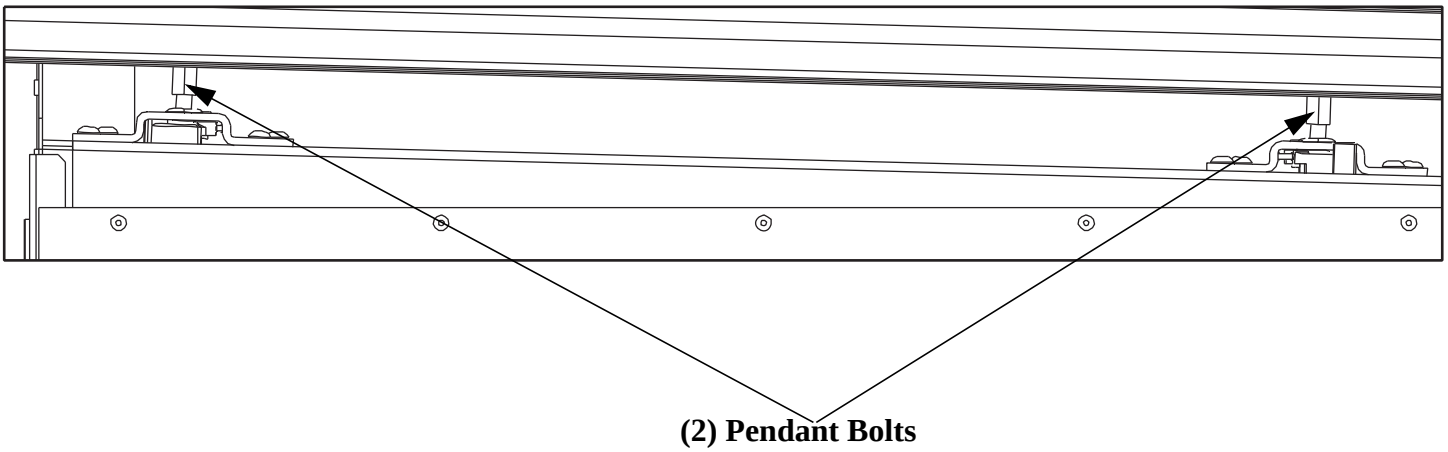

(2) Pendant Bolts

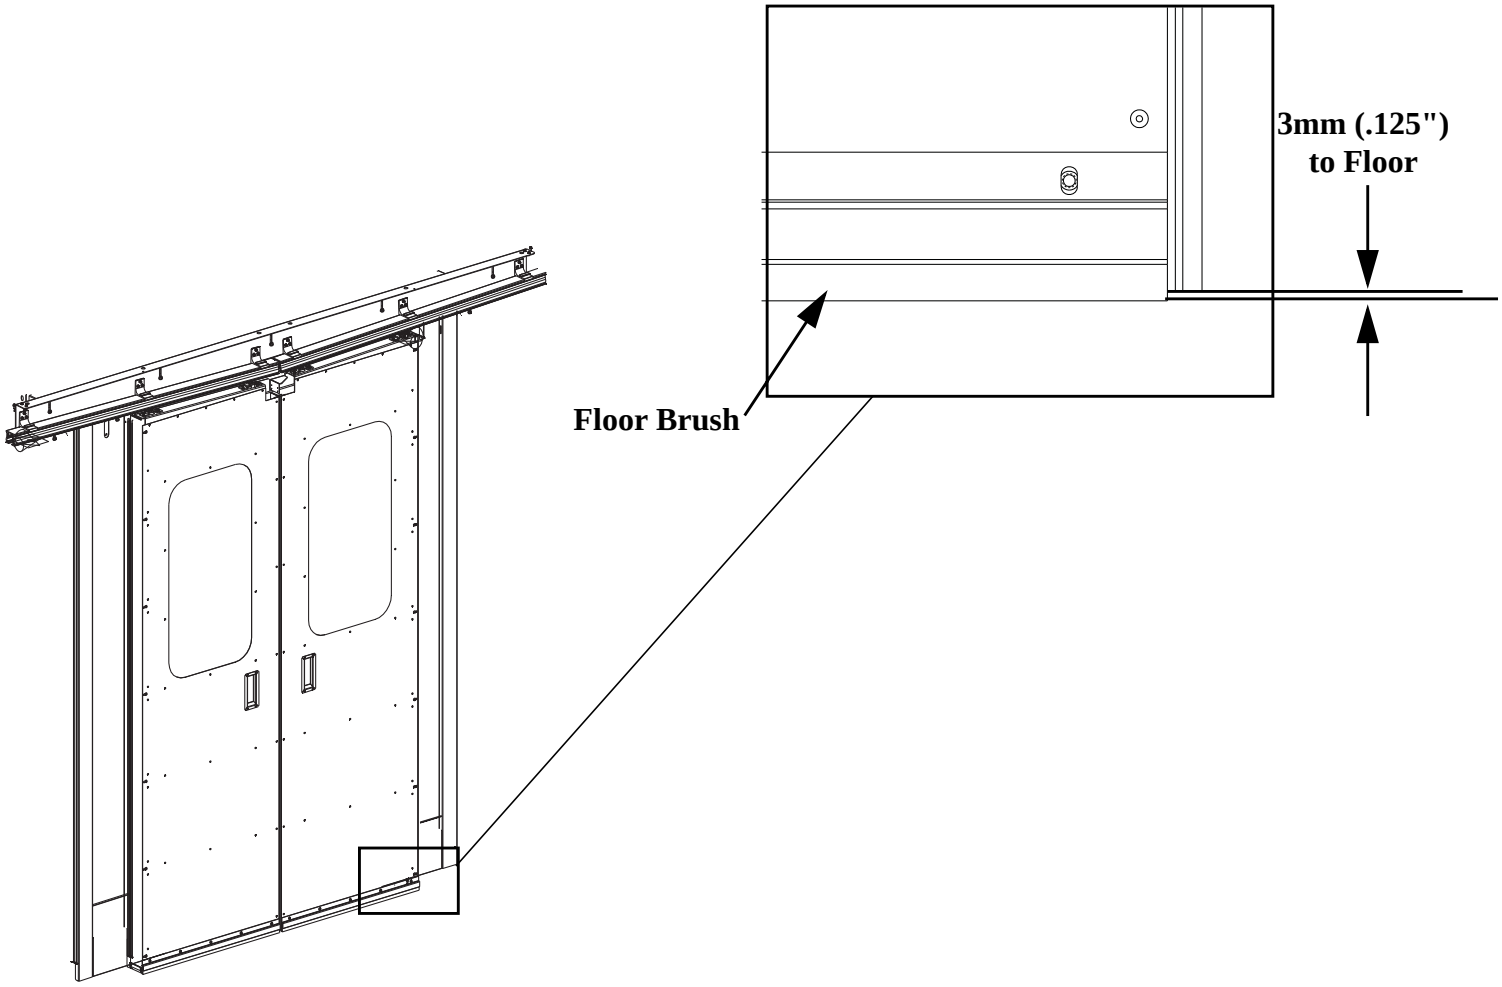

Adjusting Door Seals

- Adjust left hand and right hand door side seals to achieve a good seal between the door and the Flap Seal.
- Adjust door guides to align bottom of the right hand and left hand doors. Tighten Screws. (Ref. Page 41)

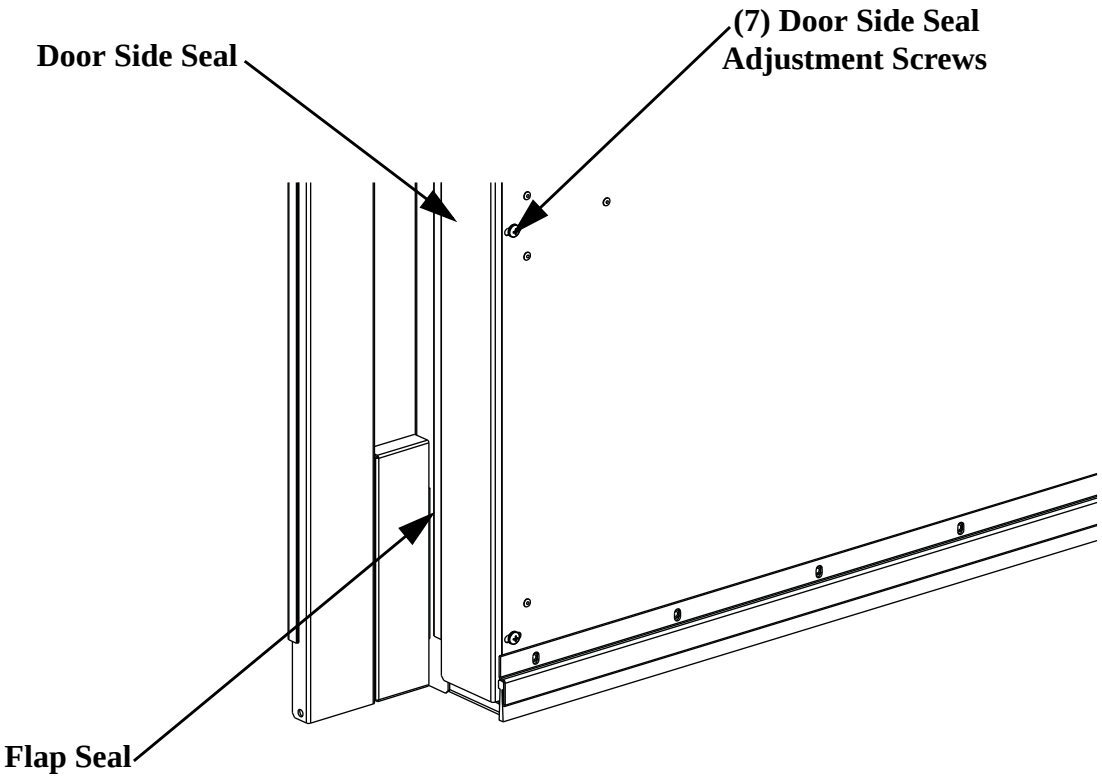

Adjusting Door Damper

1. Slightly open door
2. Adjust Hook and Bracket so the Damper Ball can barely pass beneath the Hook and tighten screws.
3. Open the RH Door and allow it to close. Check for proper damper operation.
4. Open the LH Door and allow it to close. Check for proper damper operation.
5. Open both doors simultaneously and allow both to close together. Check for proper damper operation.
6. If required, re-adjust hook position.

Note: Having too much space between left side damper arm and right side damper hook damper may cause right side damper arm to lift up before door closes causing the door to not close completely.

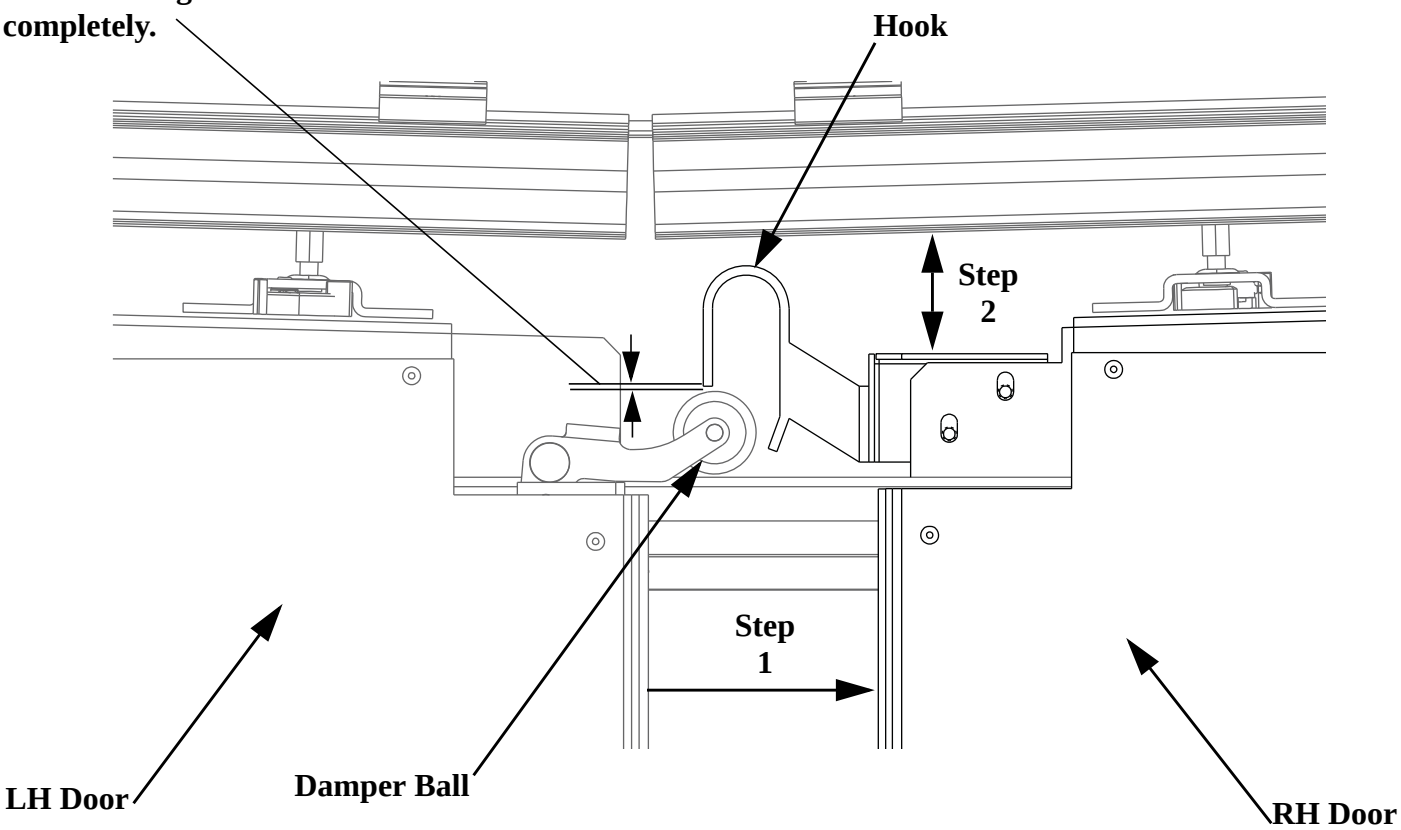

Attaching Cover Caps

- Attach (2) Cover Caps to Transom with (6) M5 hex head screws.
- Note: Cover caps for left cabinet and right cabinet are a mirror image of each other.

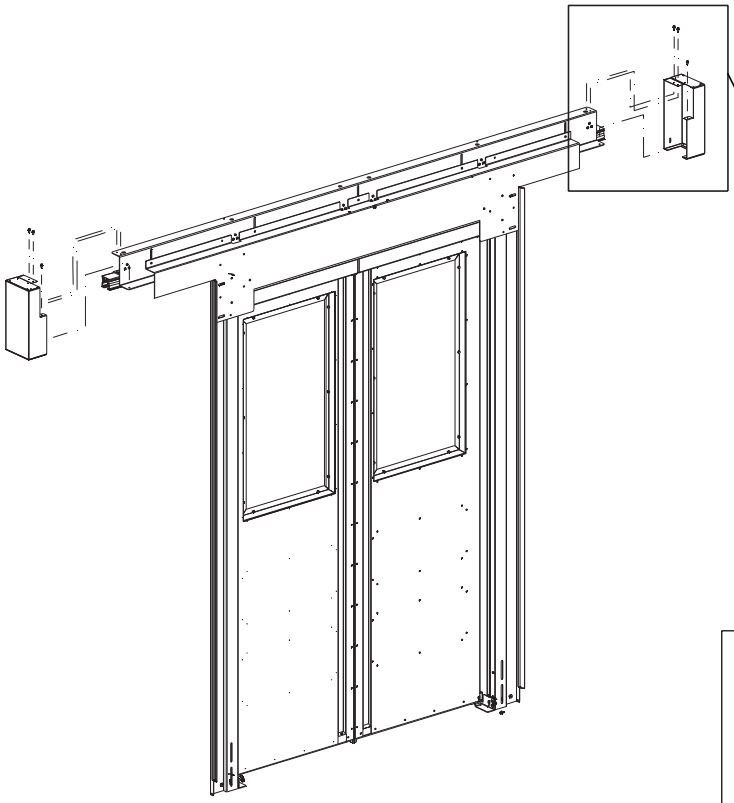

View of Back Side of Door

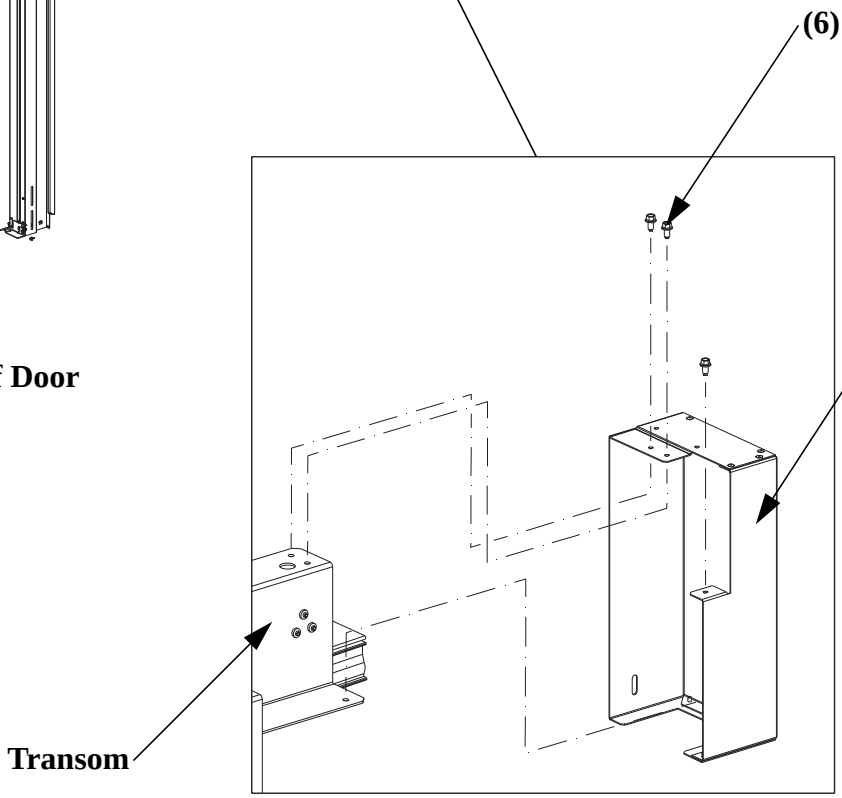

Header Cover Installation

- Slide Header over top of Transom and End Caps.
- Slide Pem Studs on inside front of header into holes in End Caps.
- Secure Header to End Caps with (4) M5 hex head screws and (2) M5 flange head nuts.

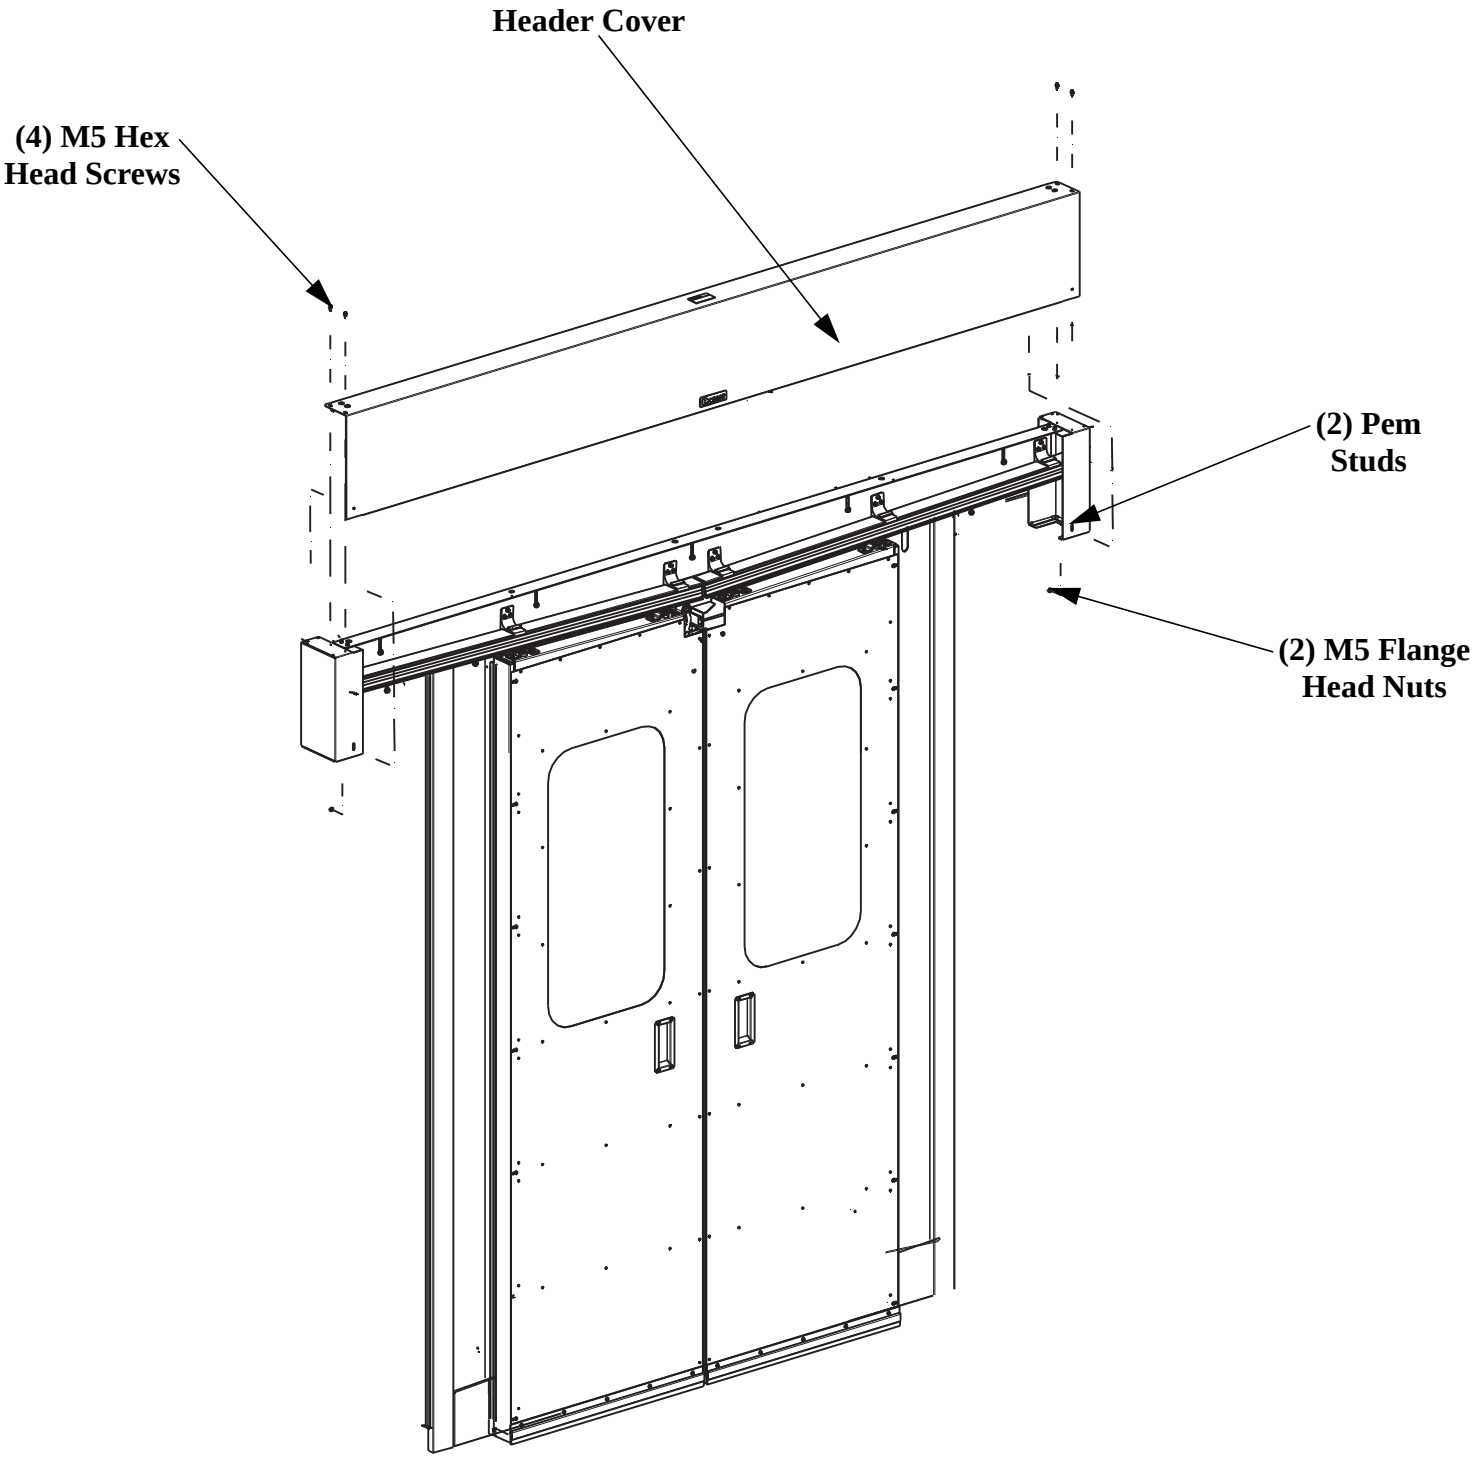

SECTION 7

INSTALLATION OF BLANKING PANELS CUFBPR4206HB**, CUFBPR4506HB**, CUFBPR4806HB**, CUFBPR5206HB**, CUTBPR0610HBN1

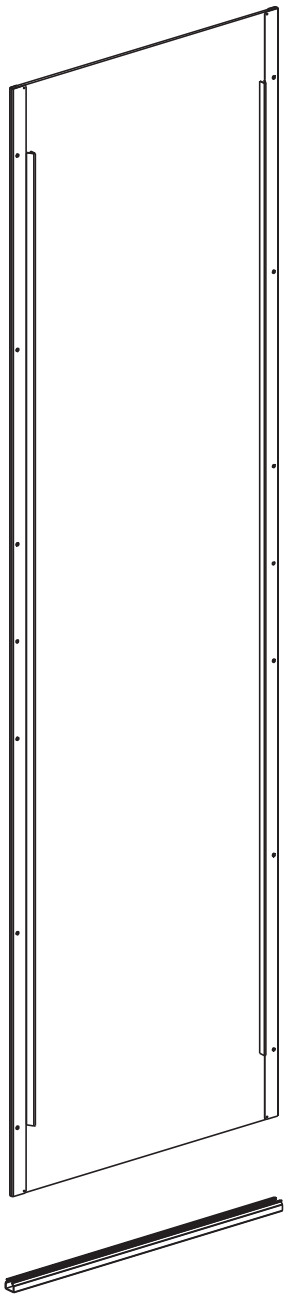

Cutting Blanking Panels

- Blanking panels may be cut to fill gaps that are smaller than 600mm.
- First, measure what width is needed and mark on blanking panel using a straight edge.
- Second, cut at the measured line.

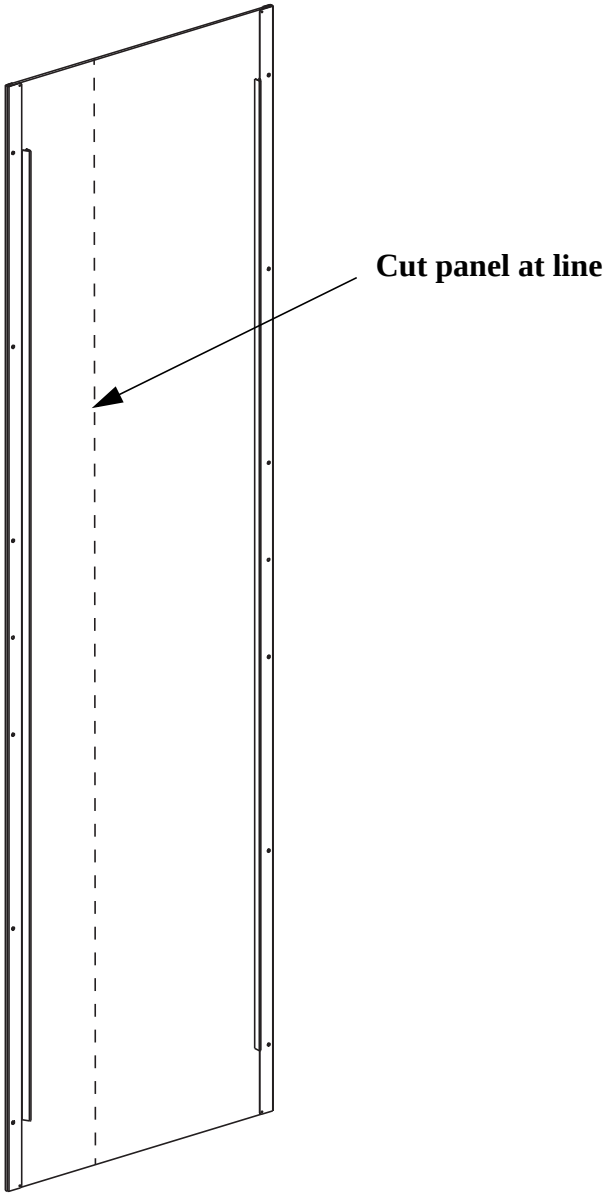

Placing First Lower Guide

- Remove cover off of adhesive strip on the bottom of the lower guide.
- Adhere lower guide to the floor with it being against the inside of the frame post and set 2.54mm (.1") into the aisle from the edge shown below.

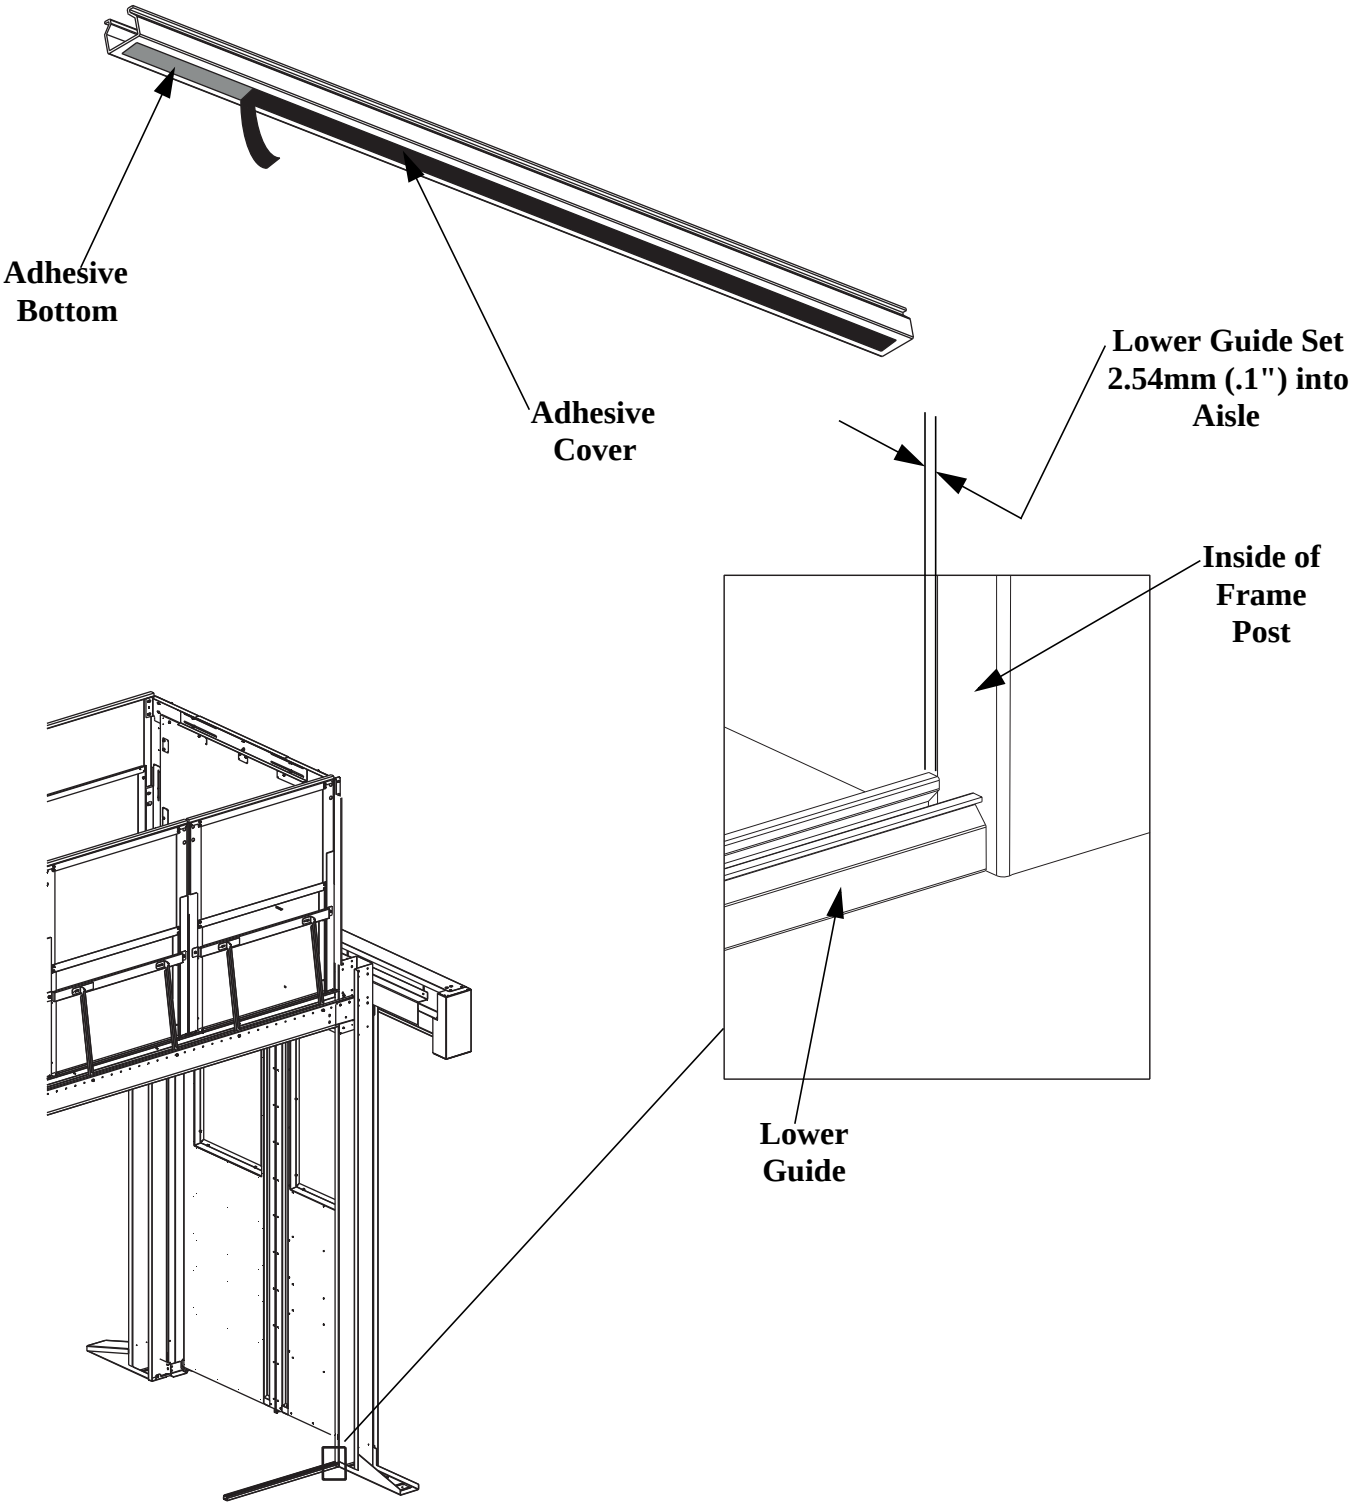

Additional Lower Guides

- Place each additional lower guide end to end to the other side of the POD.
- Trim last lower guide to length needed for application

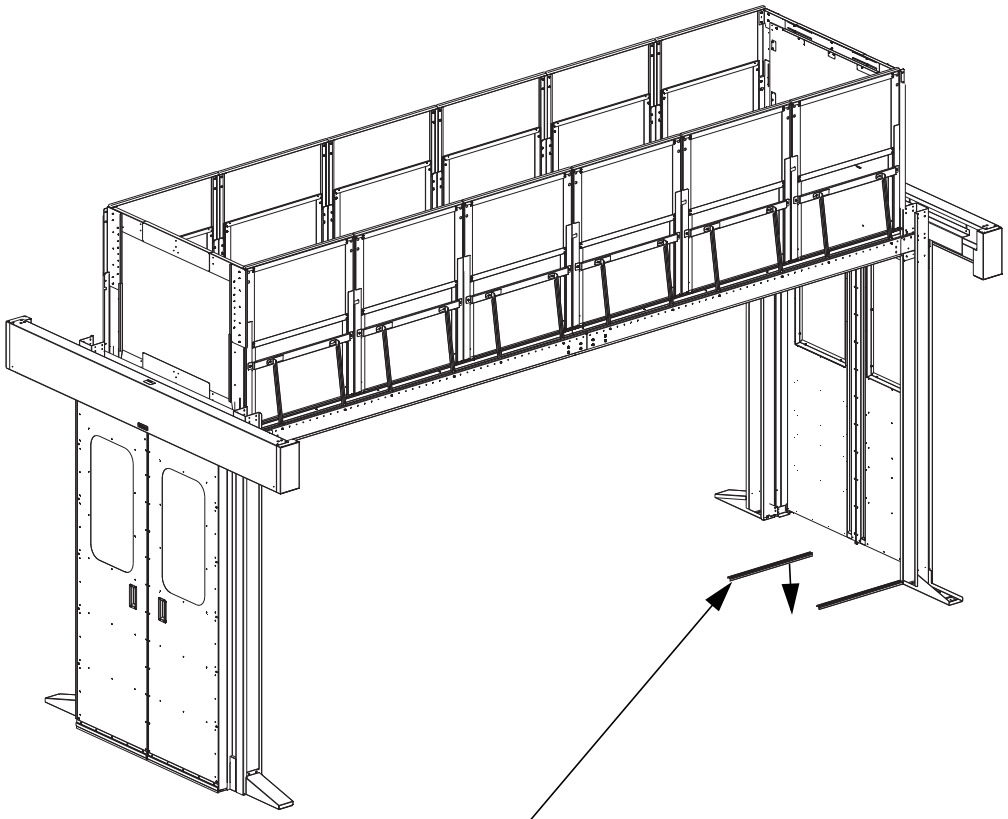

Lower Guide

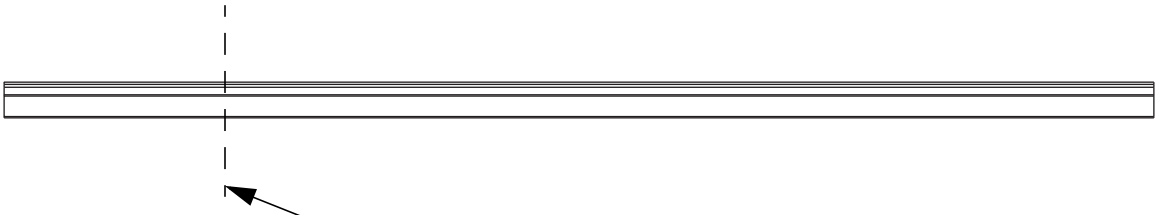

Trim Last Lower Guide to Length Needed for Application

Blanking Panel Installation

- With the blanking panel on a slight angle, insert the top of the blanking panel into the gap between the wall beam and wall beam cover. (View 1)
- Once blanking panel is in gap rotate to 90 degrees to lower guides. (View 2)
- Let blanking panel slide down into lower guides. (View 3)
- Repeat process for all blanking panels required.

View 1

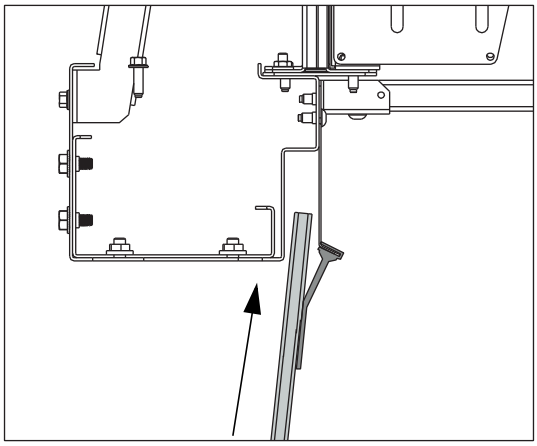

View 2

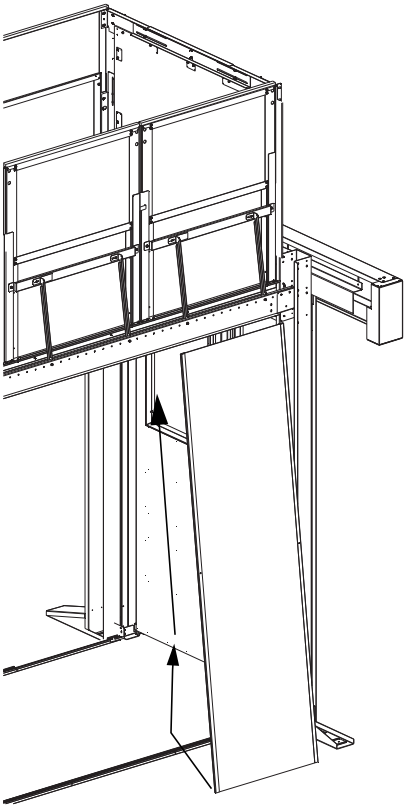

View 3

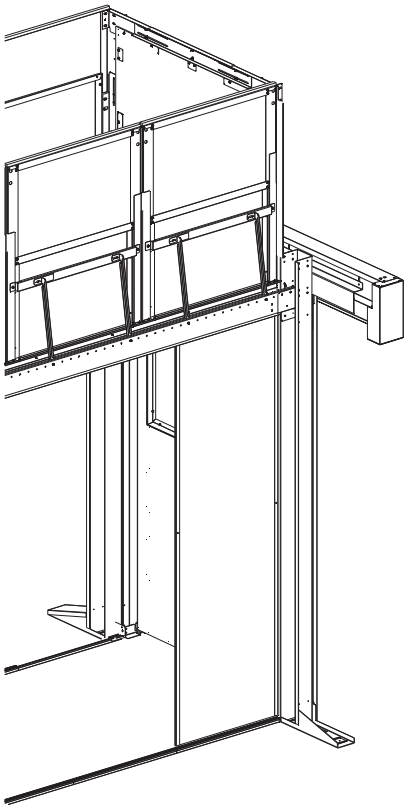

Over Lapping Blanking Panels

- Slide (1) blanking panel over lapping blanking panels as need to fit length of POD.

Top View-Blanking Panel Pattern

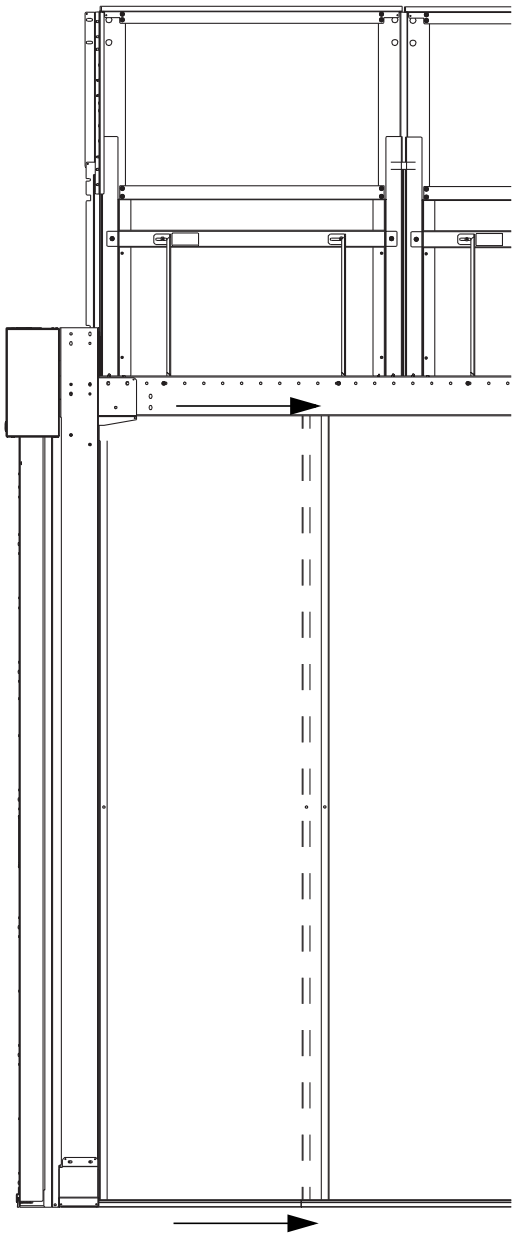

Sizing Above Cabinet Blanking Panel

- Measure from the top of the cabinet up into the gap of the wall beam where the blanking panel will extend into as show by dimension "Y" in Fig. 1.
- Trim the blanking panel to match dimension "Y" as shown in Fig. 2.

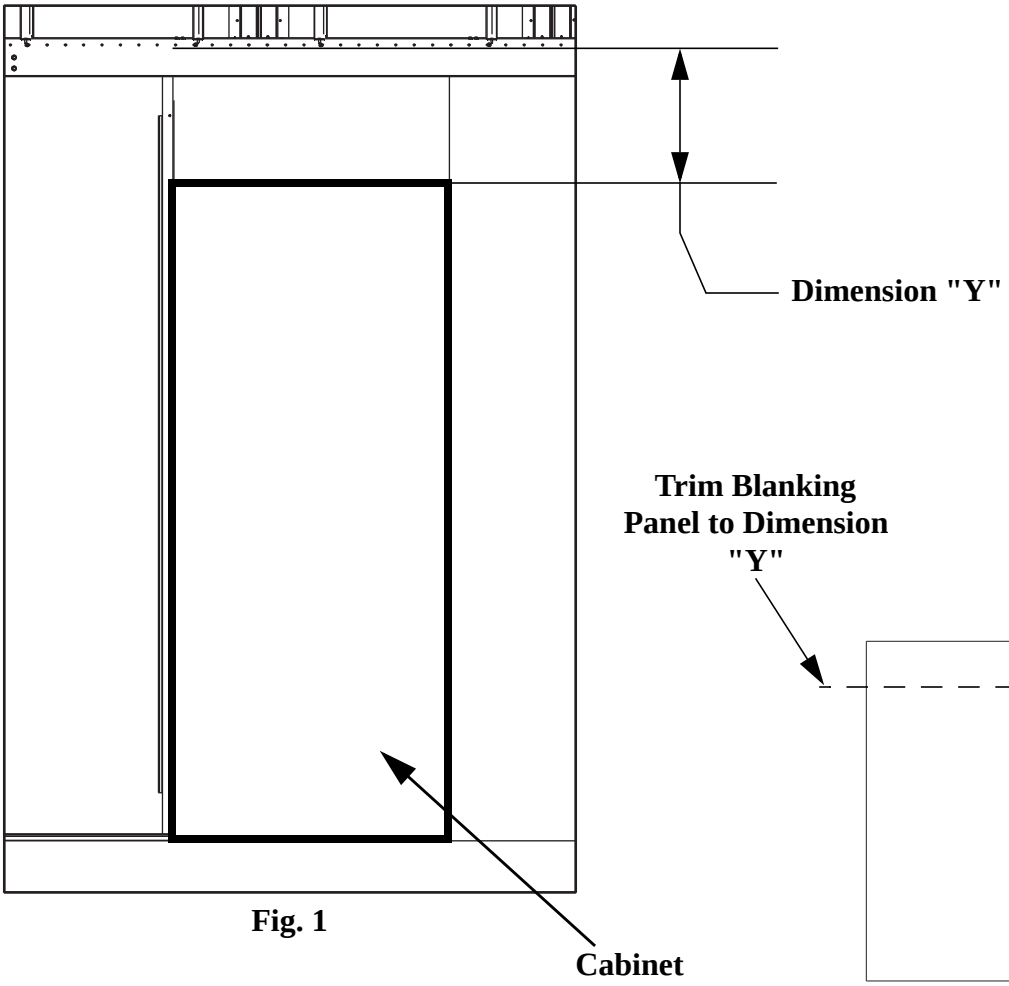

Fig. 1

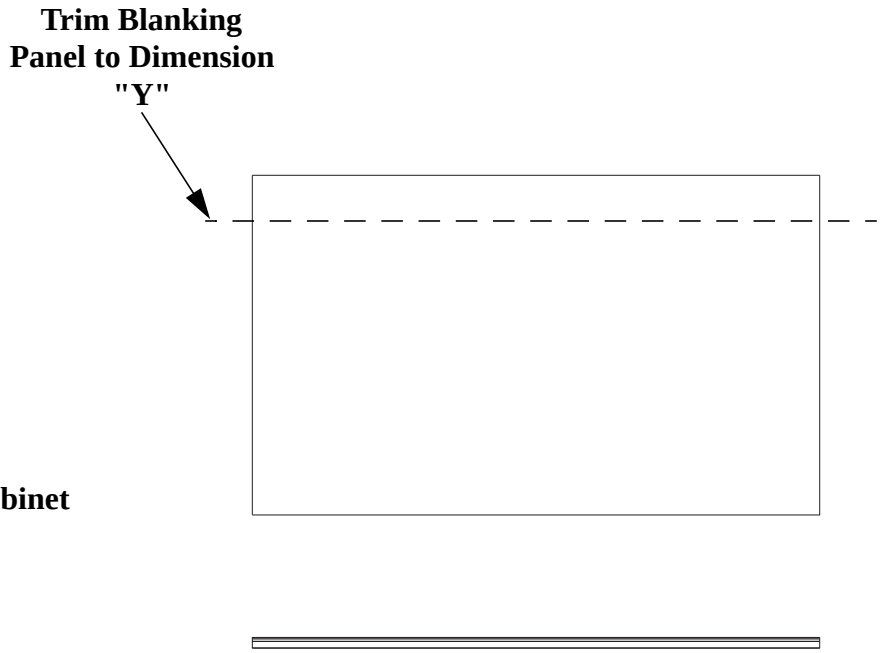

Fig. 2

Placing Lower Guide (For Above Cabinet Blanking Panel Only)

- Trim lower guide to the width of the cabinet.
- Remove cover off of adhesive strip on the bottom of the lower guide.
- Adhere lower guide to the top of the cabinet in alignment with the gap in the wall beam that the blanking panel will extend into.

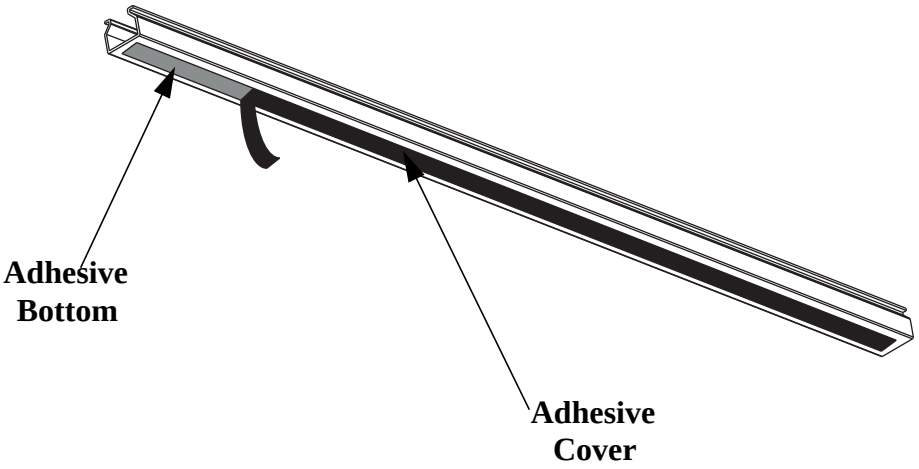

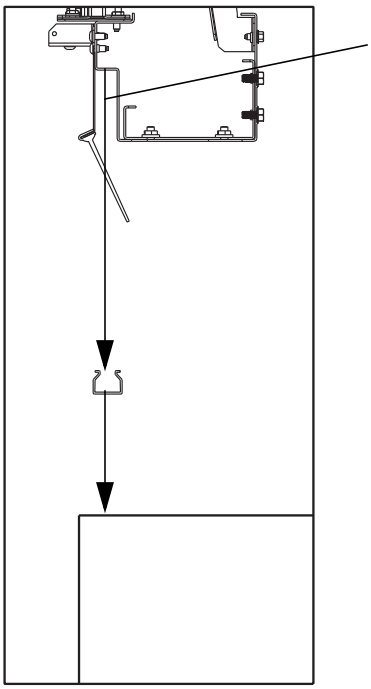

Align Wall Lower Guide with the Gap in the Wall Beam that the Blanking Panel will Fit into.

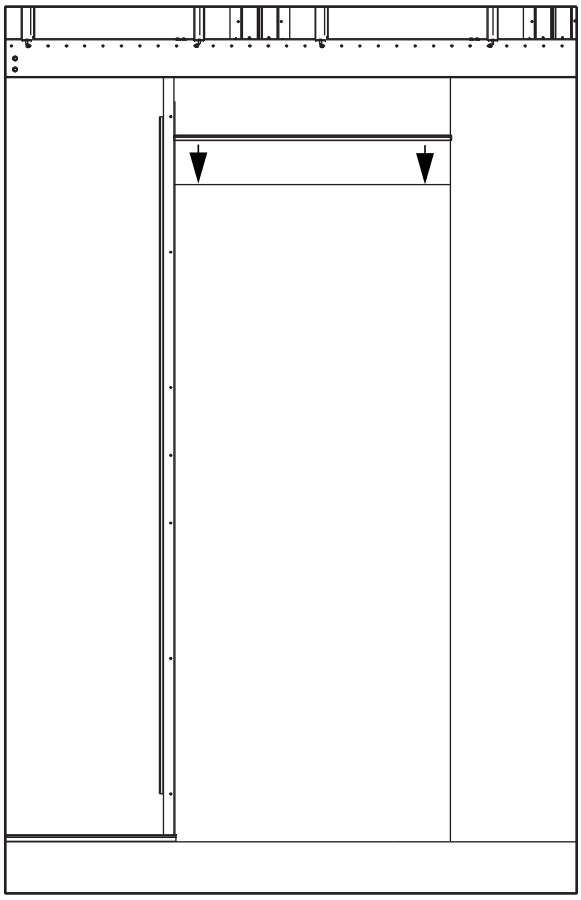

Blanking Panel Installation (For Above Cabinet Blanking Panel Only)

- With the blanking panel on a slight angle, insert the top of the blanking panel into the gap between the wall beam and wall beam cover. (View 1)
- Once blanking panel is in gap rotate to 90 degrees to lower guide. (View 2)
- Let blanking panel slide down into lower guide. (View 3)
- Repeat process for all blanking panels required.

View 1

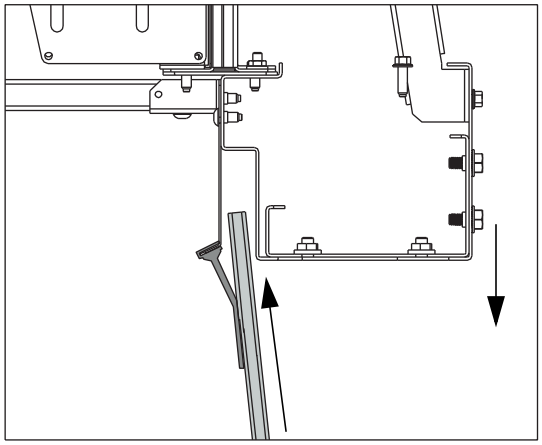

View 2

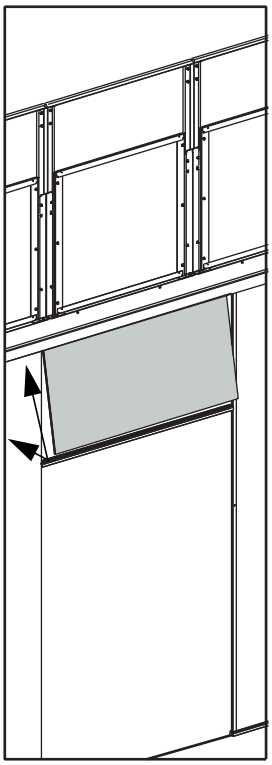

View 3

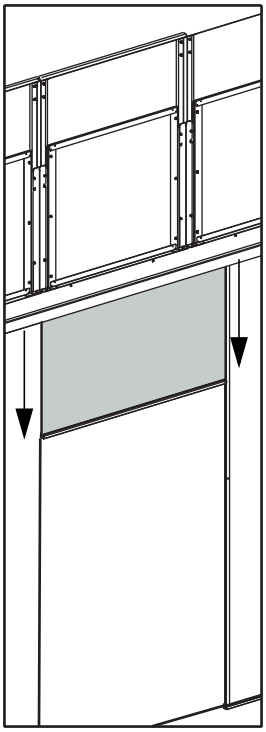

This page intentionally left blank.